


























ASSEMBLY INSTRUCTION
This installation manual is the correct version

Note: Distinguishing between the numbers 6 and 9 is different, with the number 9 underlined; Please tighten all screws by 60% first, and then tighten them by 100% after installation is complete.

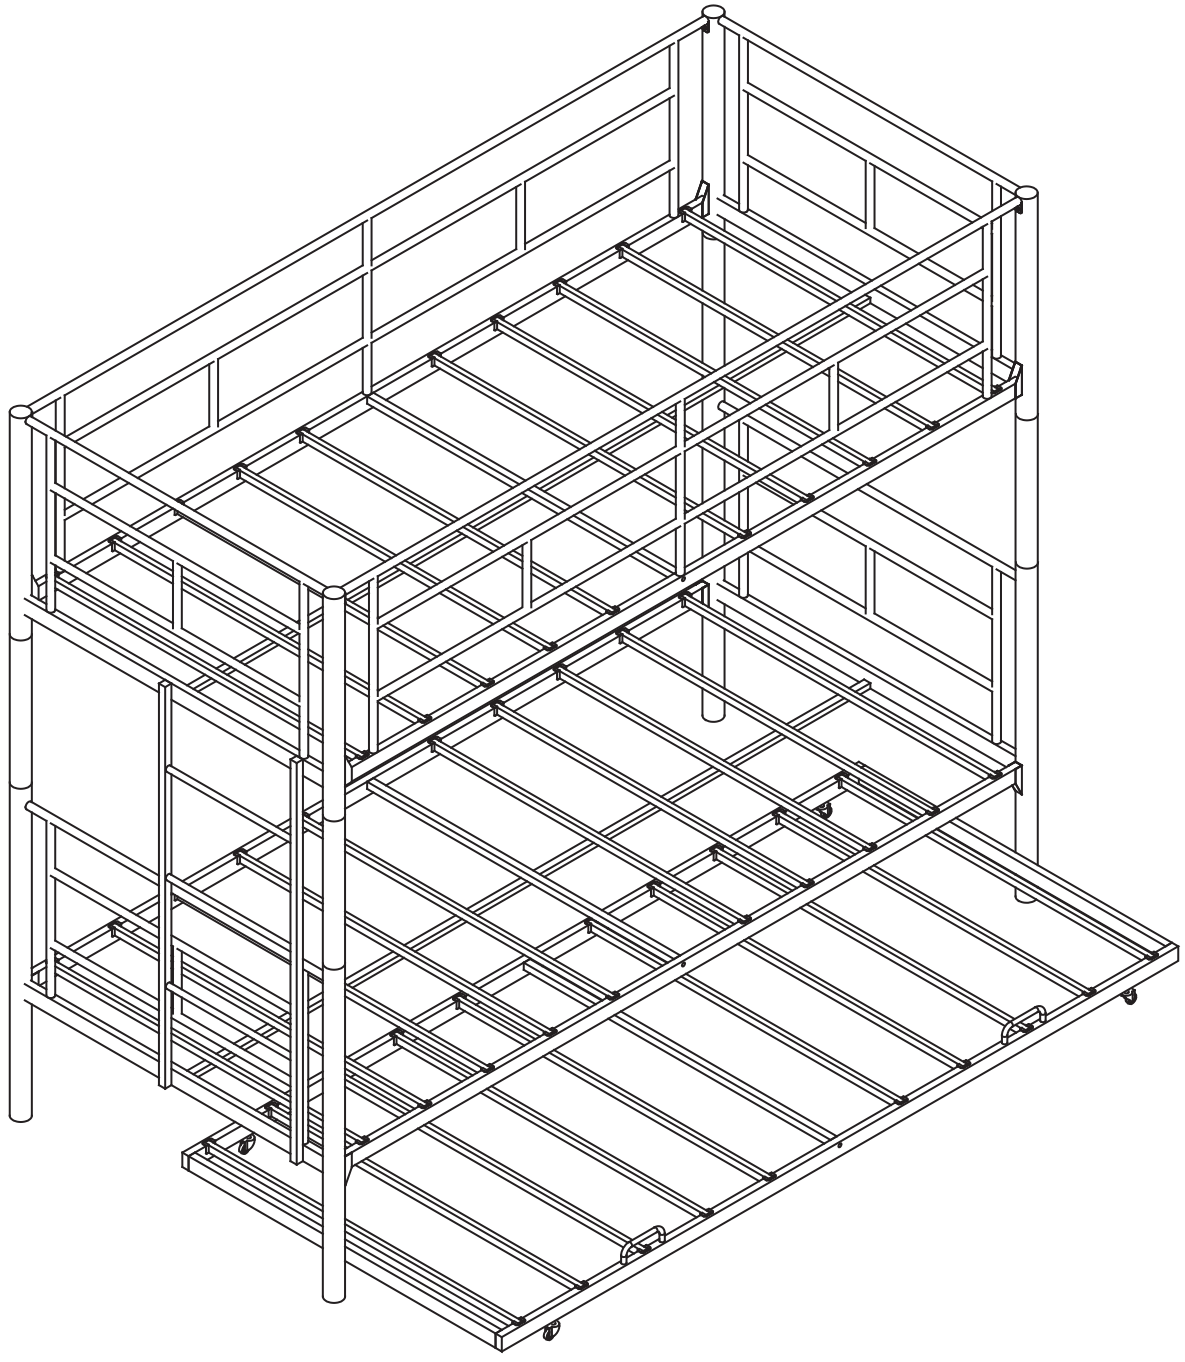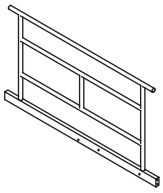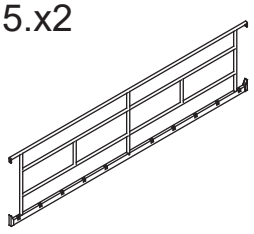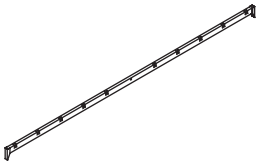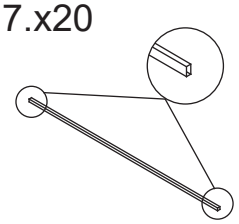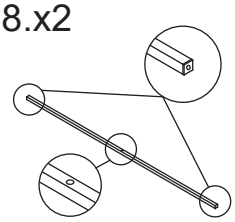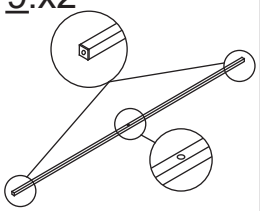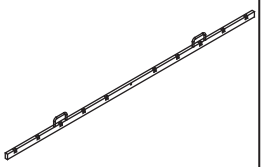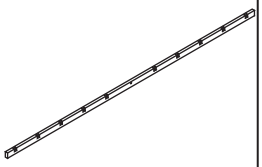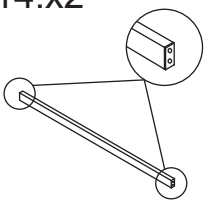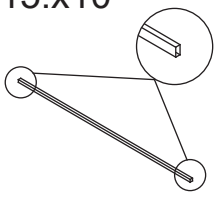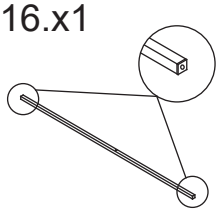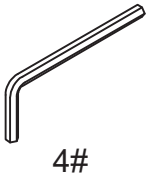


1.x4 	2.x4 	3.x4 	4.x4 	5.x2 
6.x2 	7.x20 	8.x2 	9.x2 	10.x2
11.x3 	12.x1 	13.x1 	14.x2 	15.x10 
16.x1 				
A.x16pcs  M8x50mm	B.x16pcs  M6x50mm	C.x16pcs  M6x55mm	D.x30pcs  M6x35mm	E.x8pcs  M8
Fx8pcs  M6	G.x24pcs  M8x22mm	H.x28pcs  M6x16mm	I.x36pcs  M6x16mm	J.x1pcs  M6
K.x1pcs  M8	L.x1pcs  5#	M.x8pcs  Ø38	N.x4pcs  20x20mm	O.x60pcs 	P.x4pcs 	Q.x2 
R.x1 	S.x6  M6	T.x1  4#	U.x4  M8	V.x2 	W.x4  20x40mm	

①

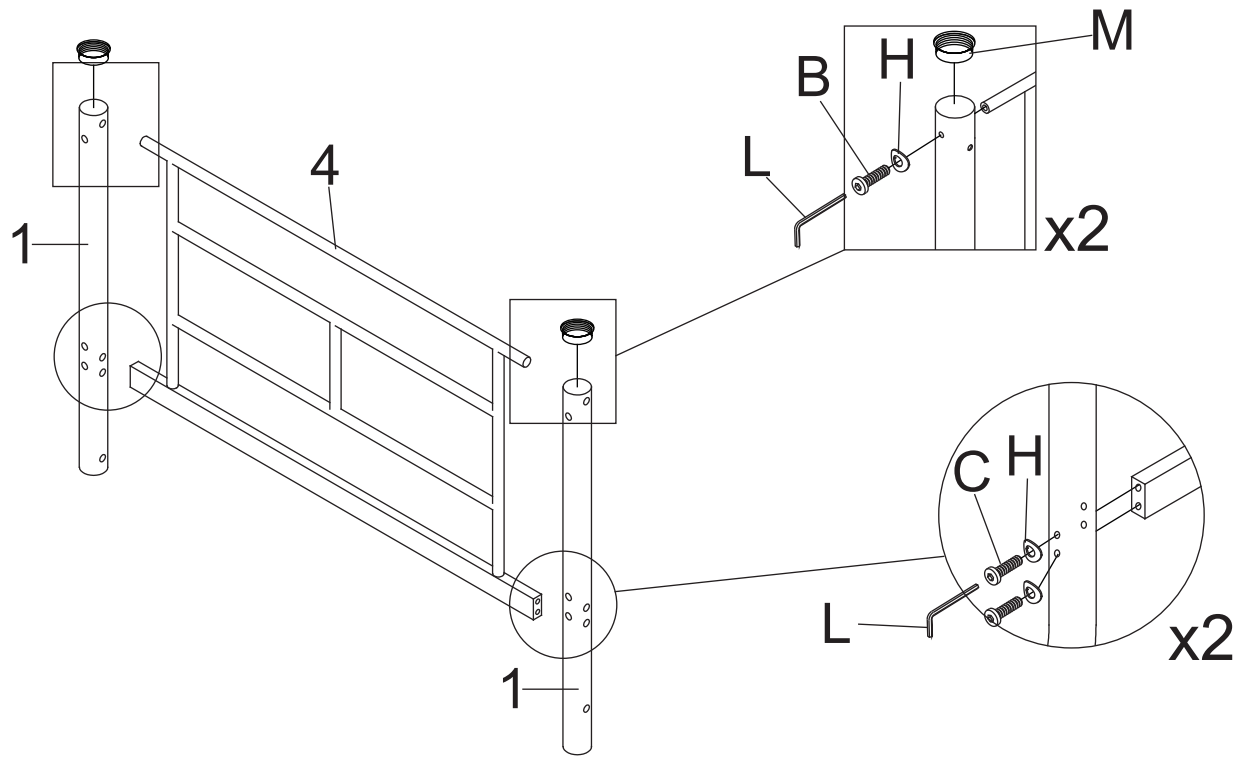



x2

②

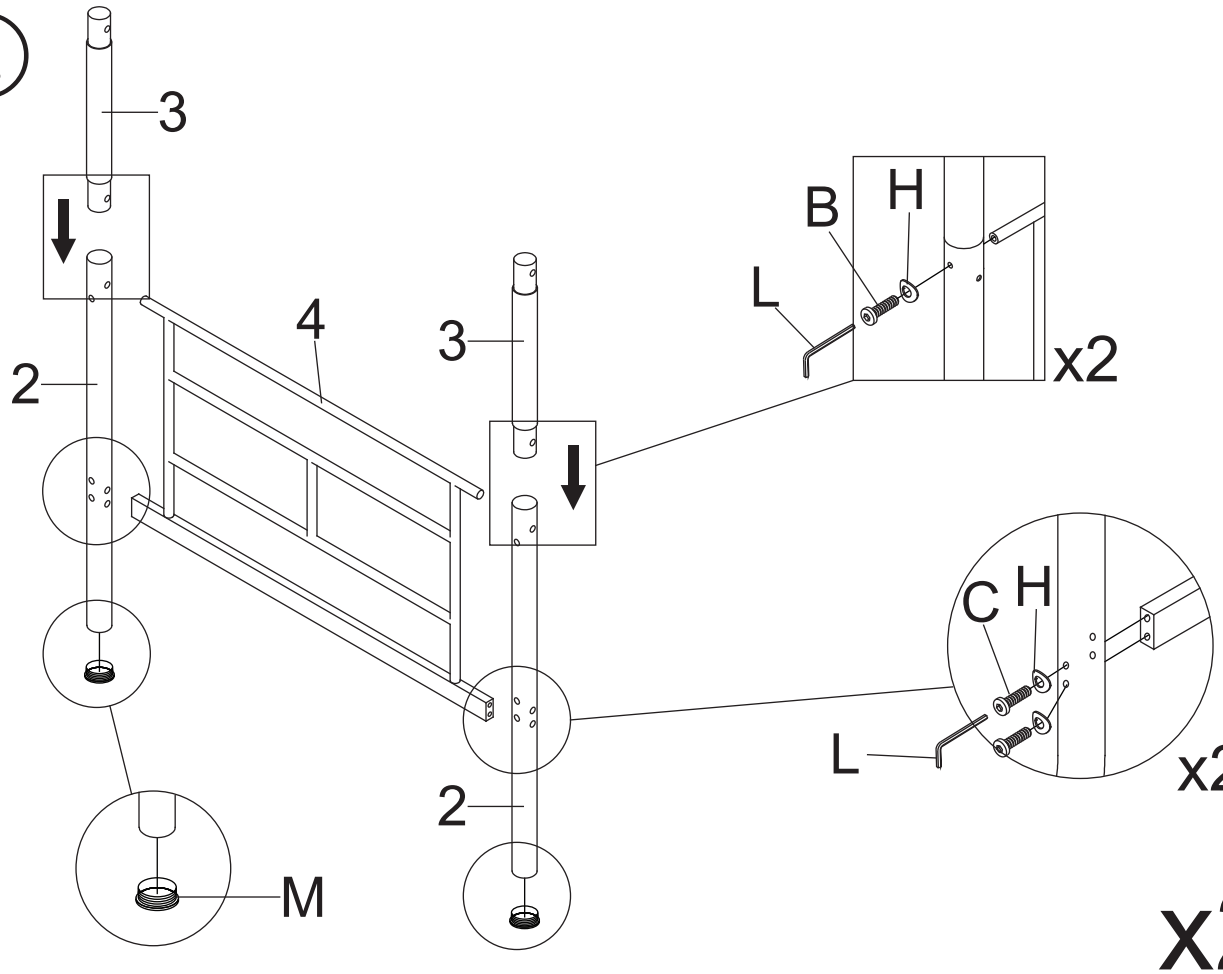


x2

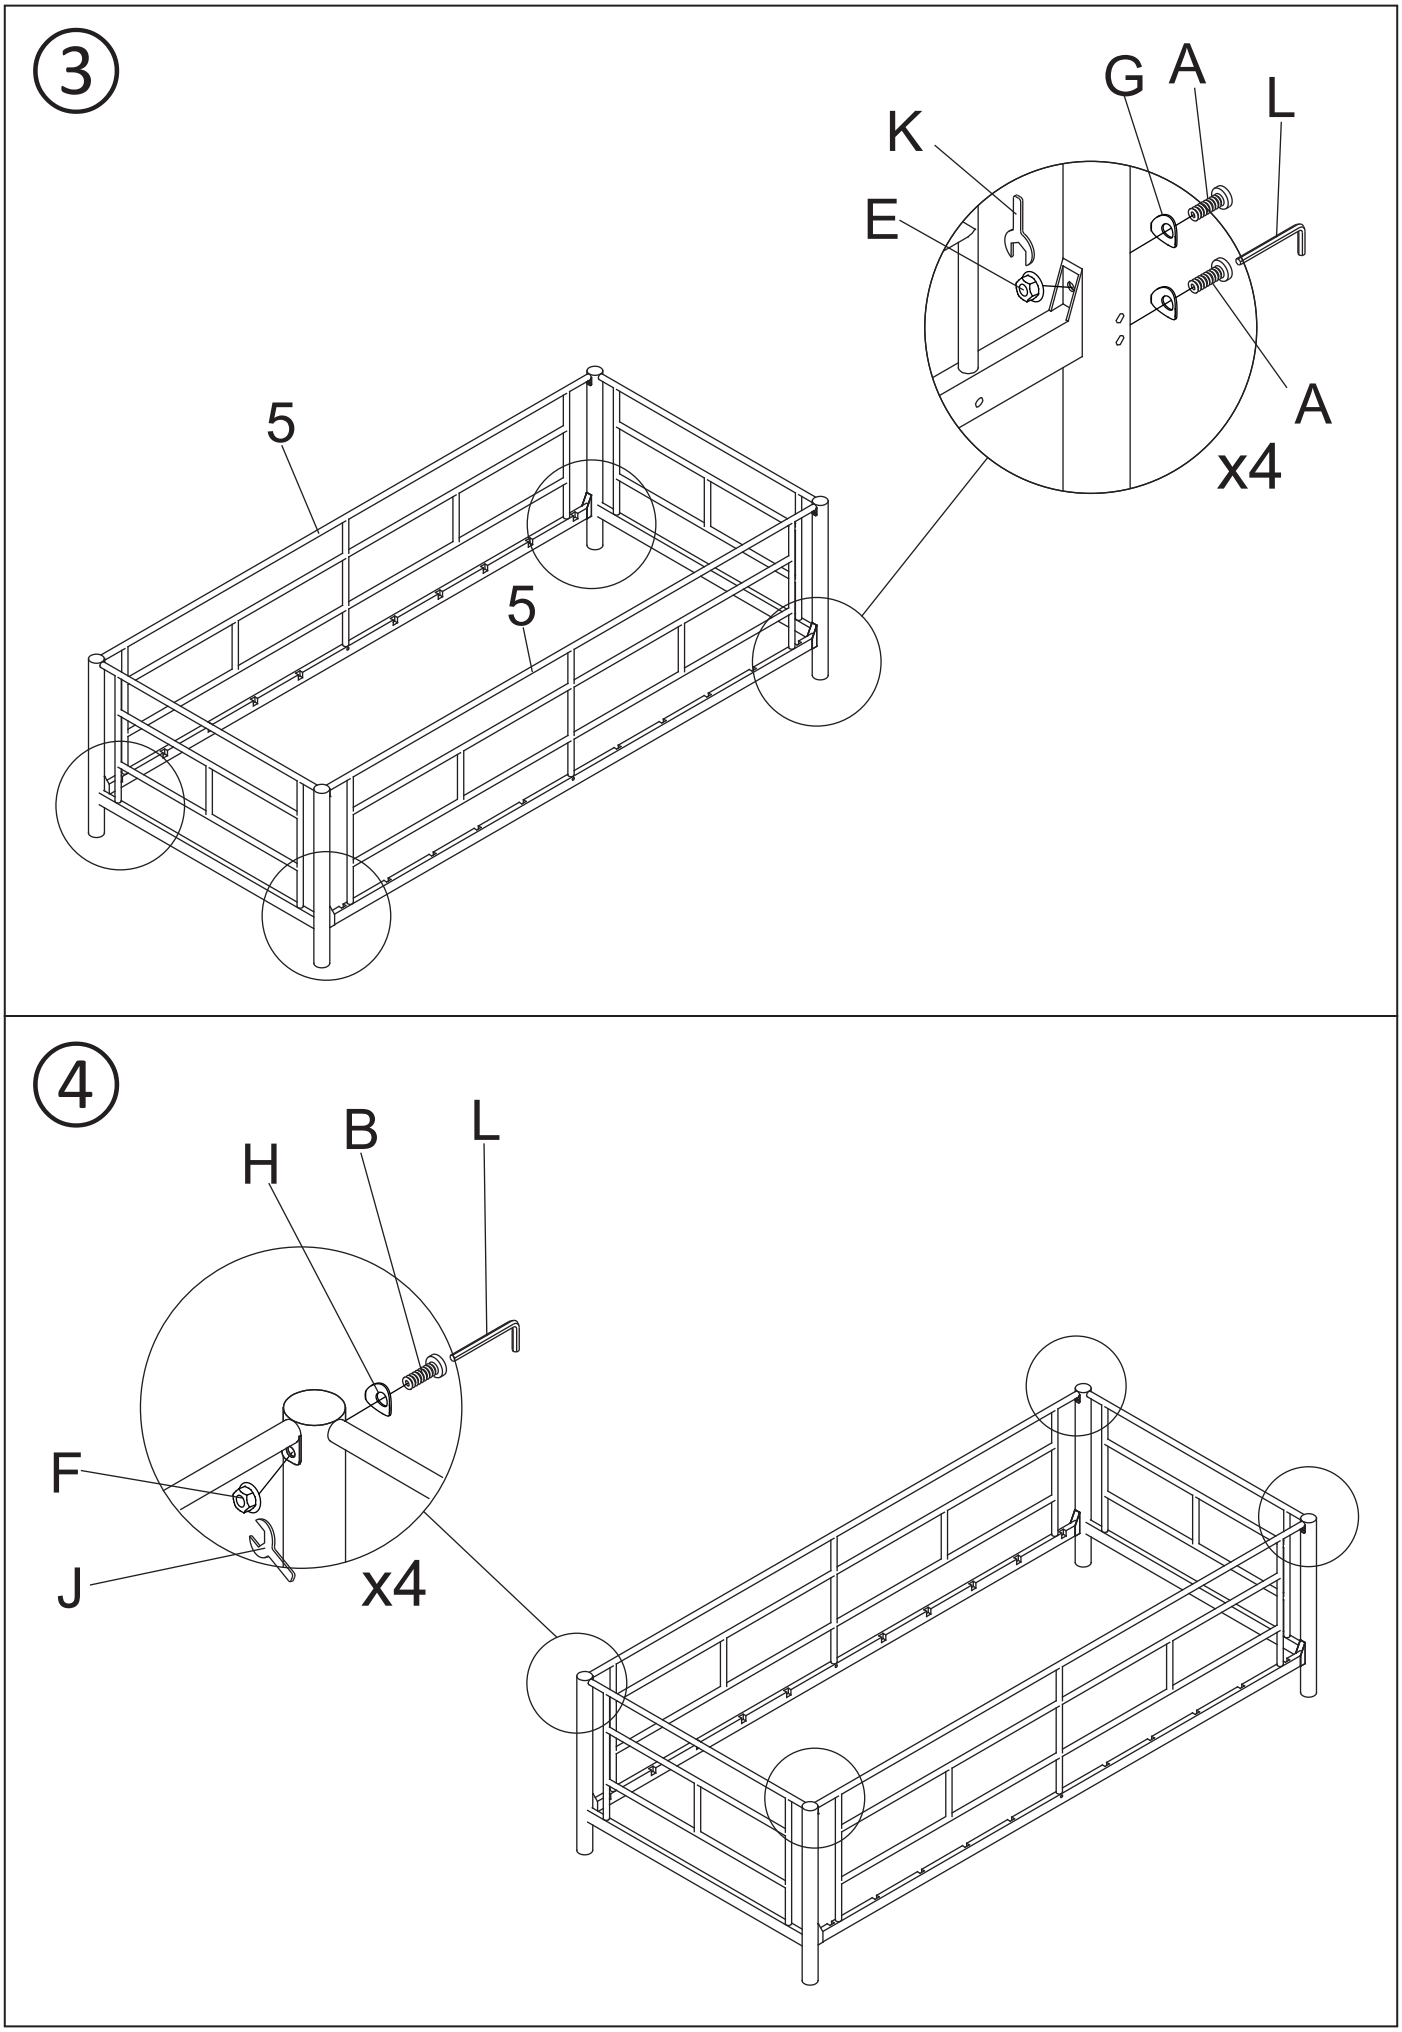

3
G
A
L
K
E
A
x4
5
5
4
B
L
H
F
J
x4

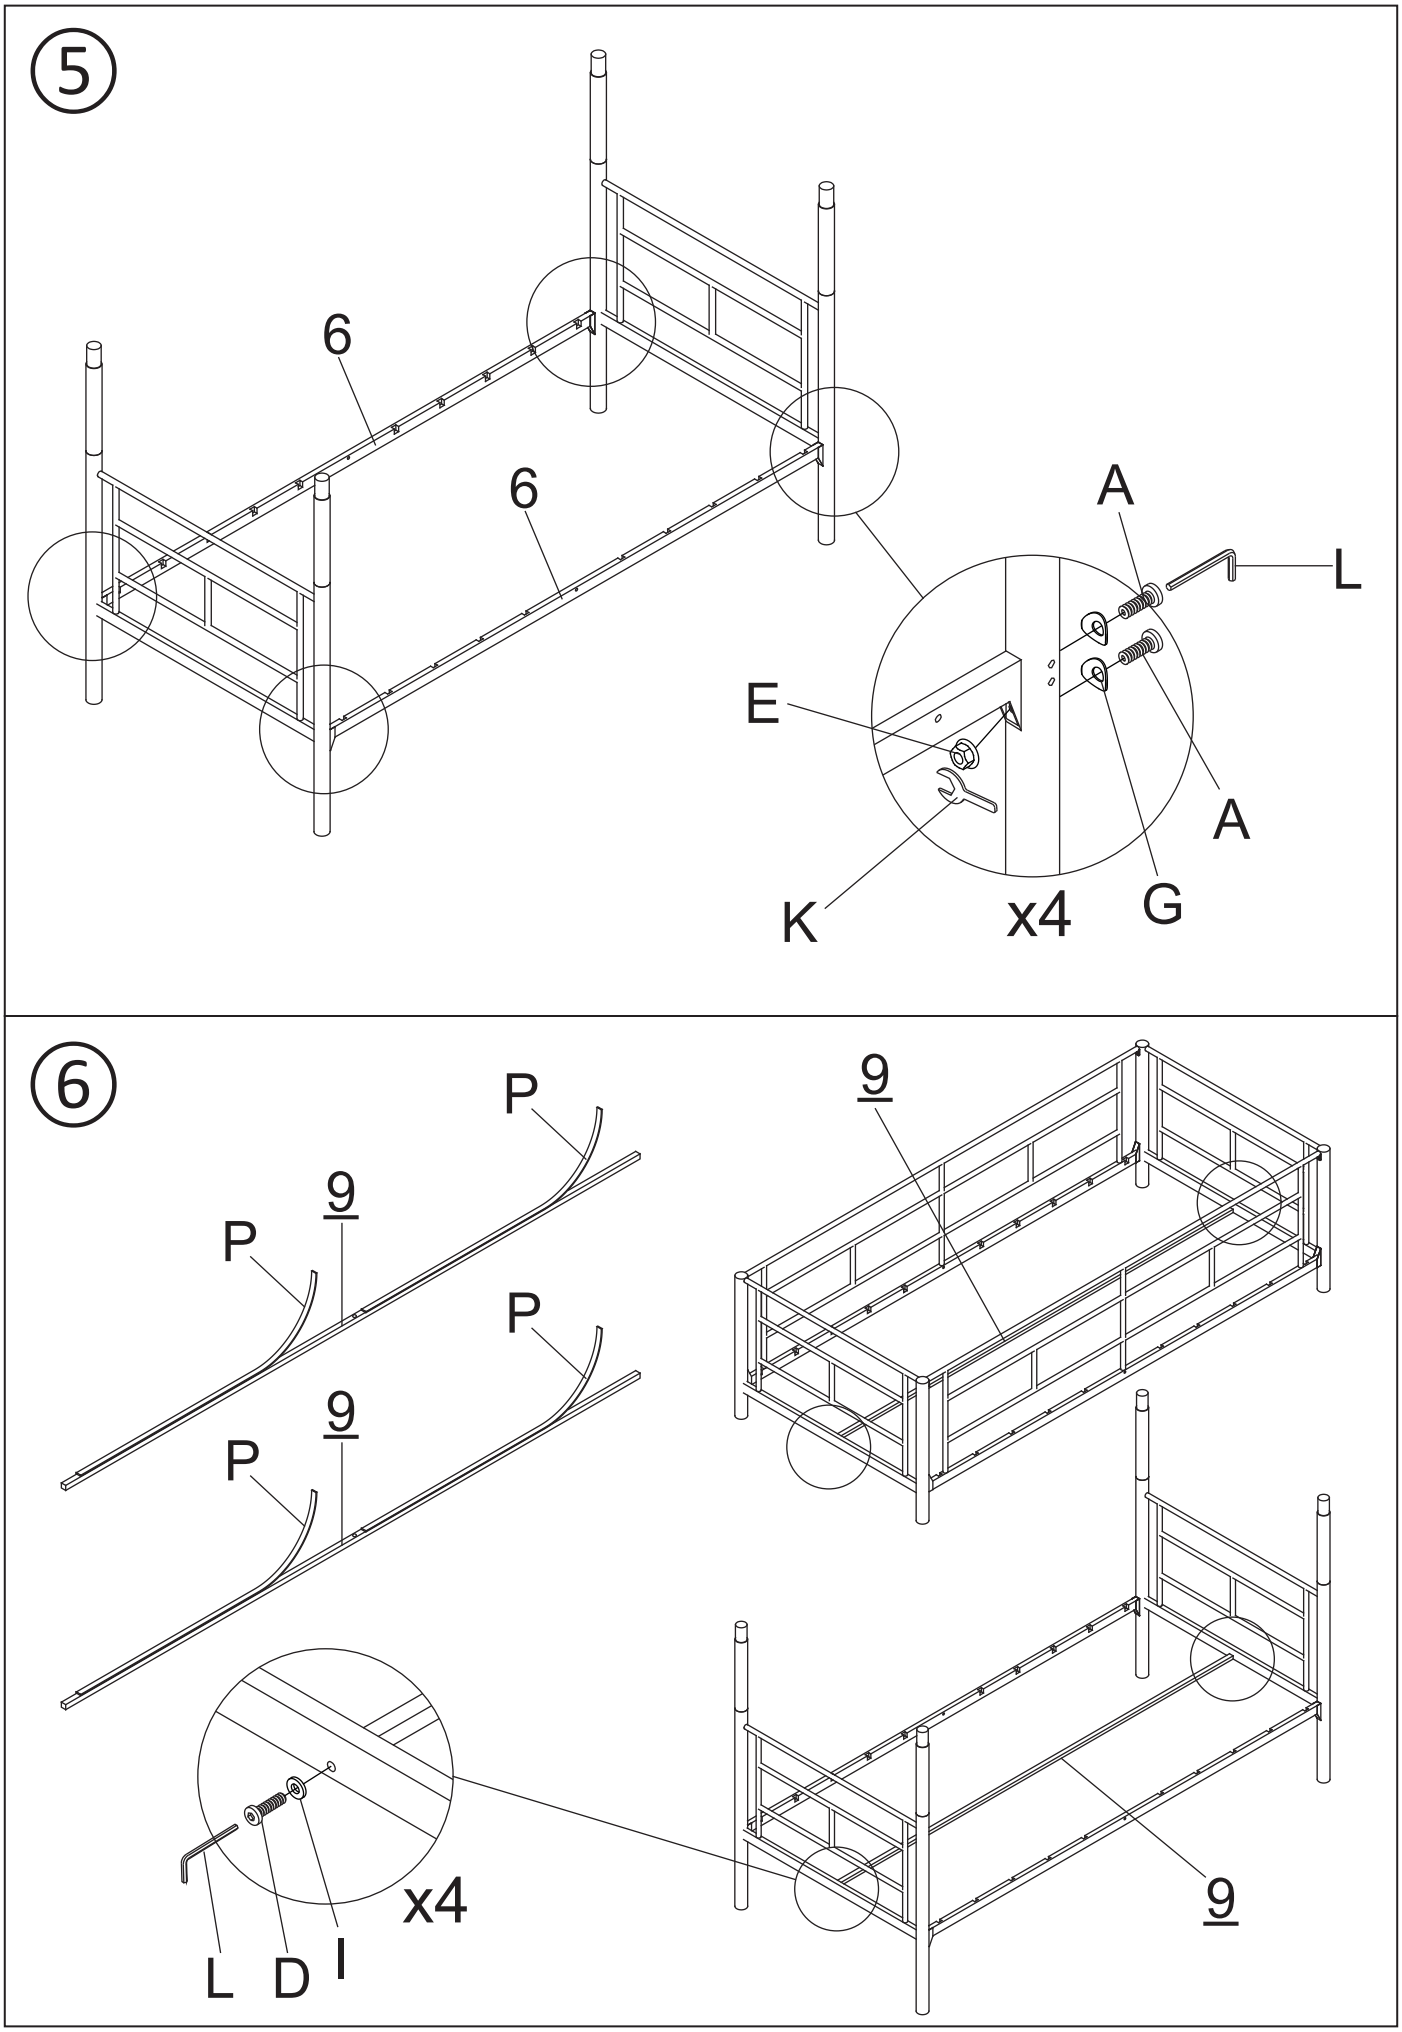
5
6
6
A
L
E
A
K
x4
G
6
P
9
P
P
9
P
9
x4
L
D
I
9
9


7

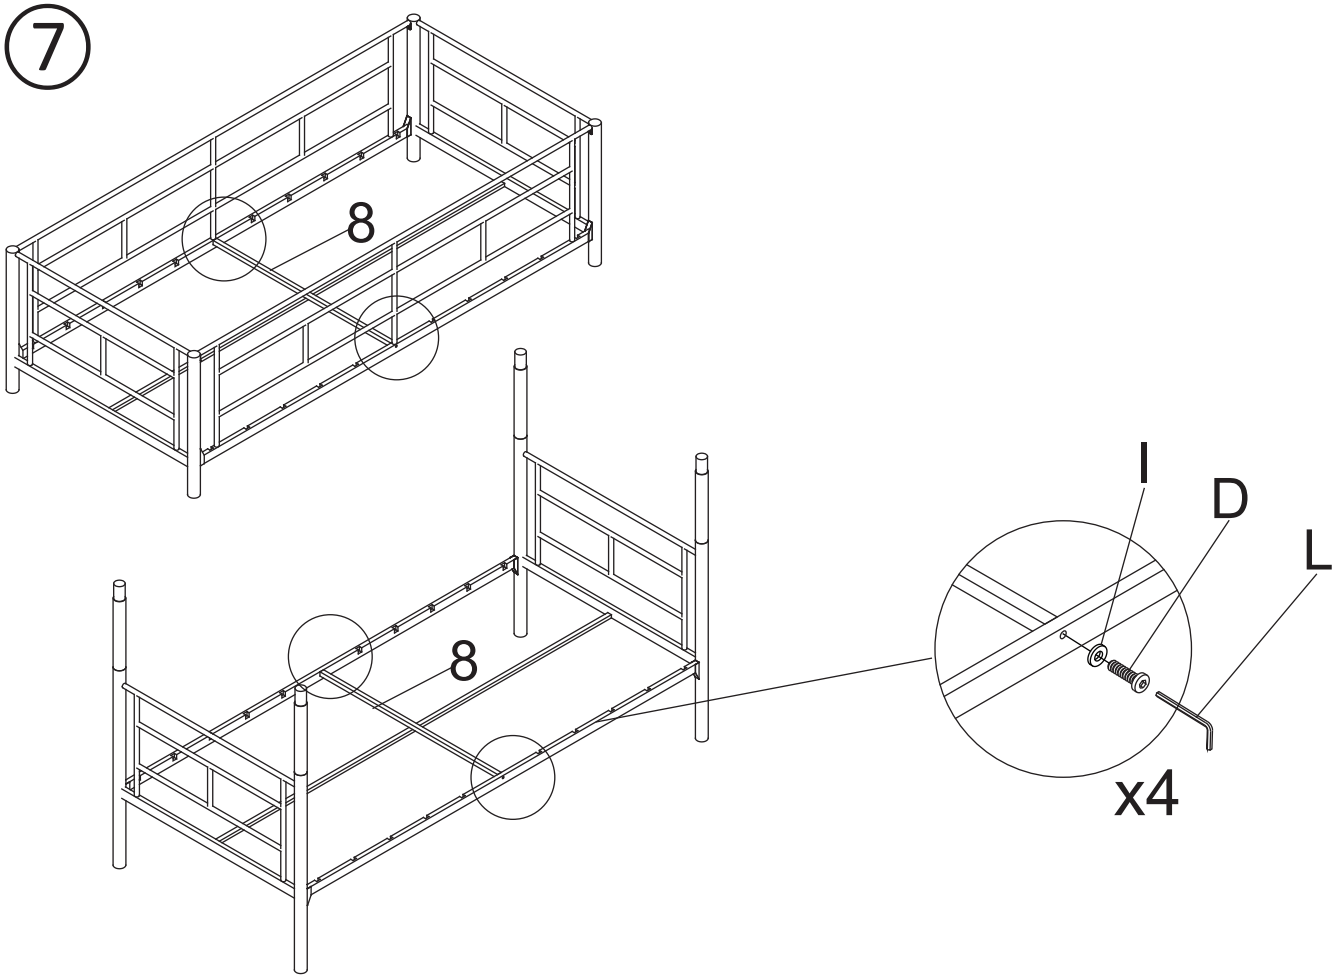


8

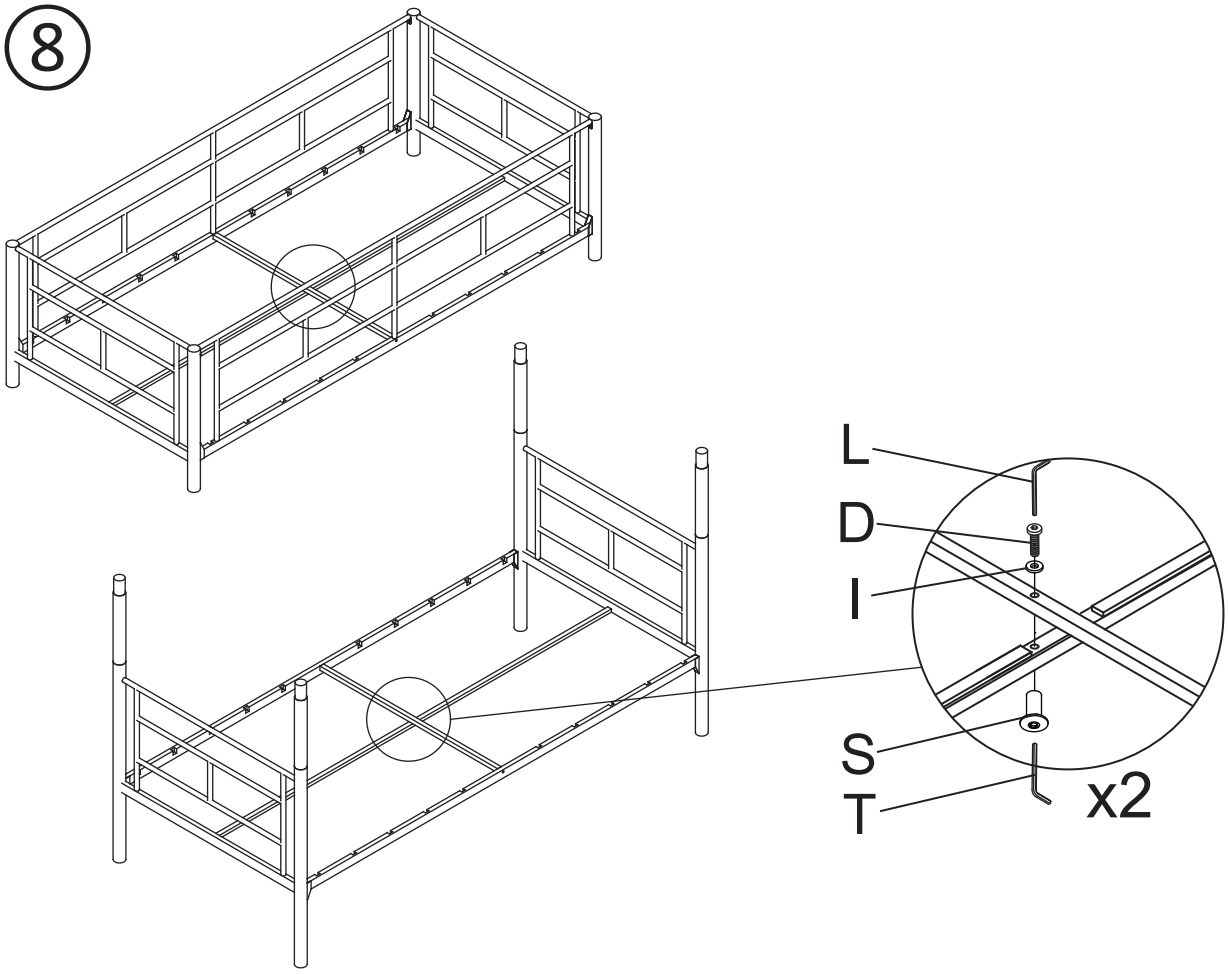



9

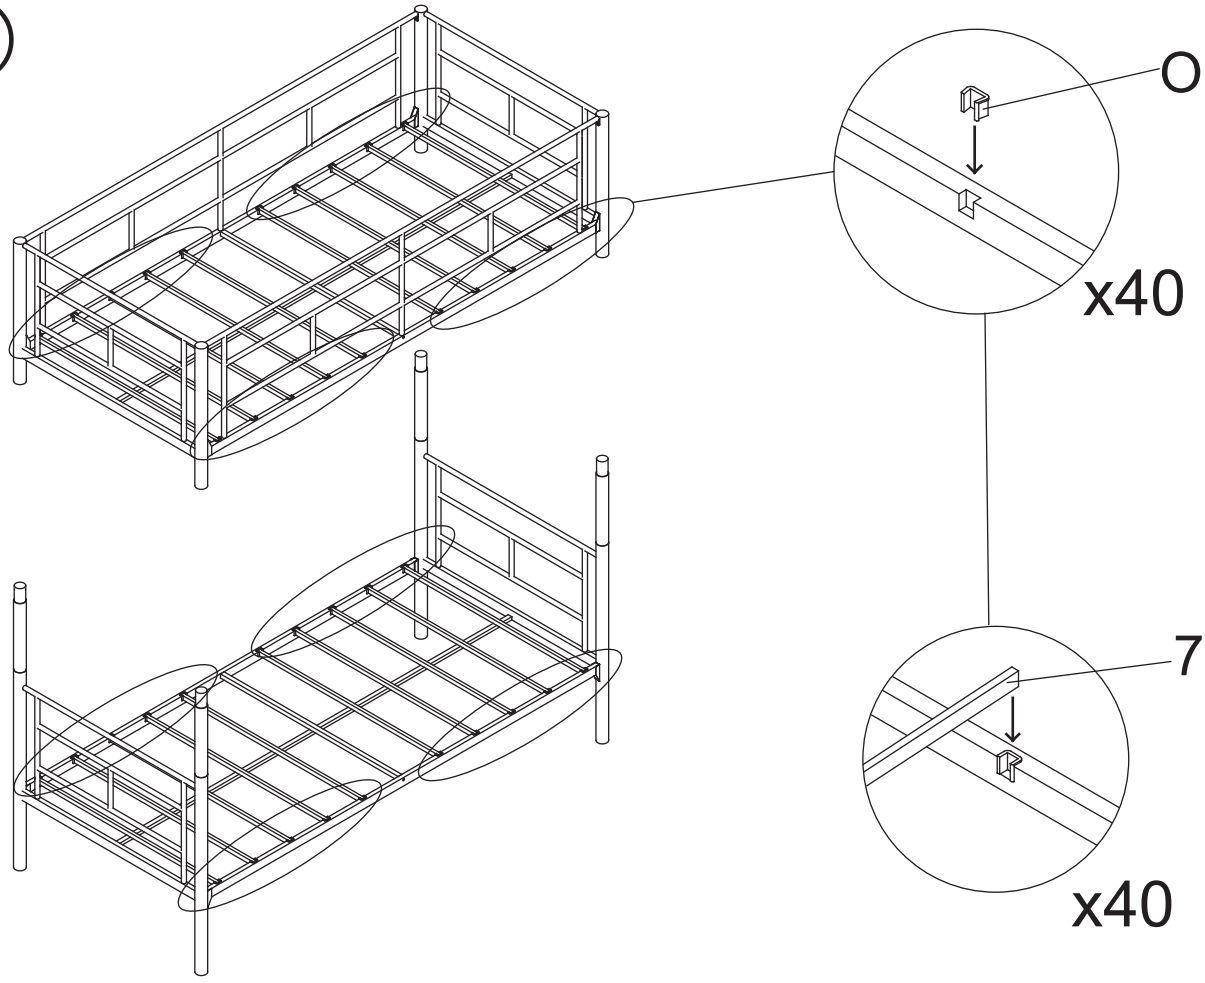


10

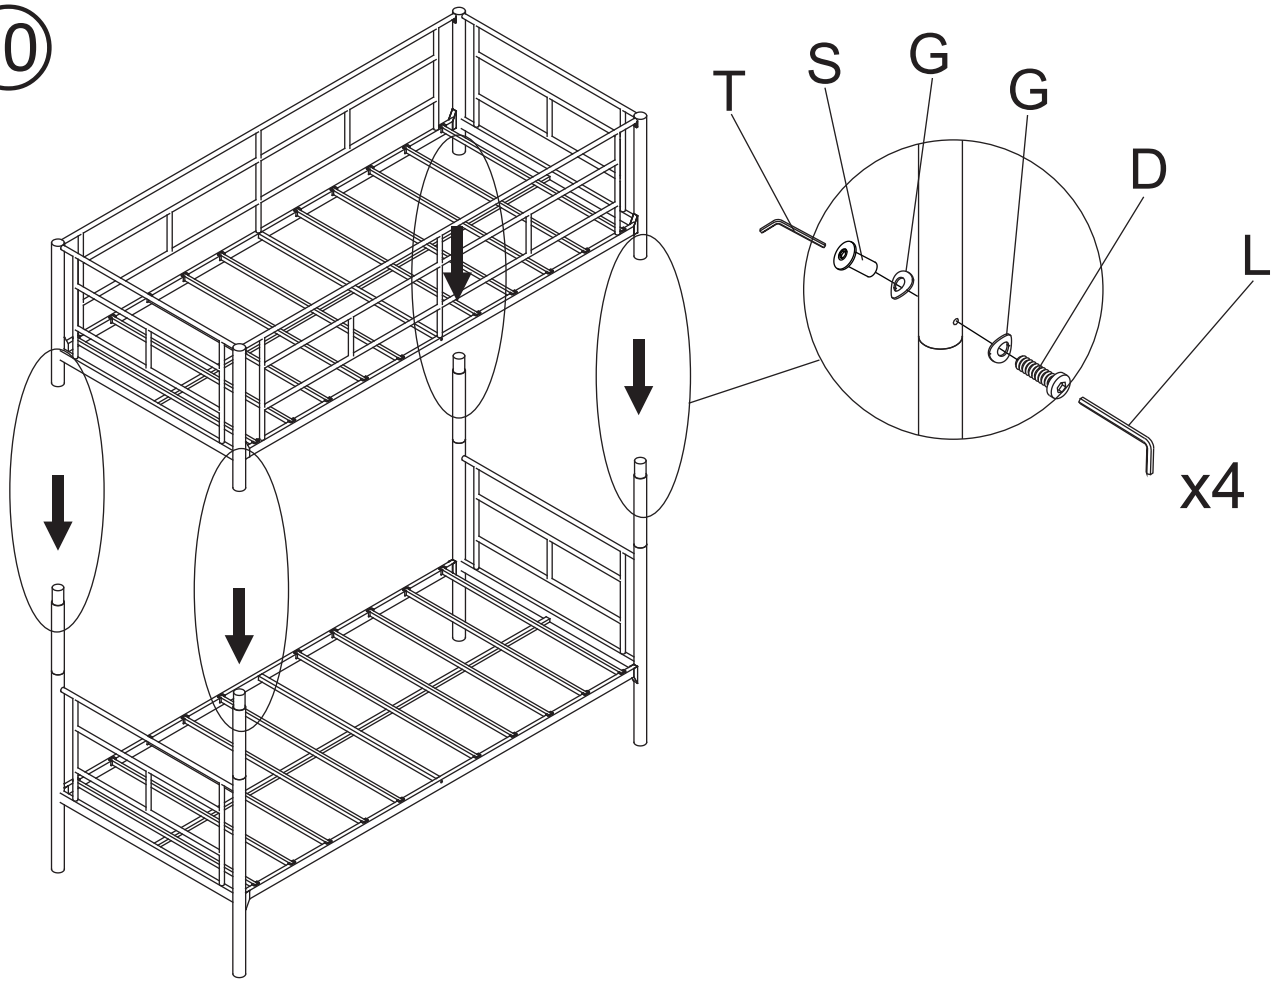

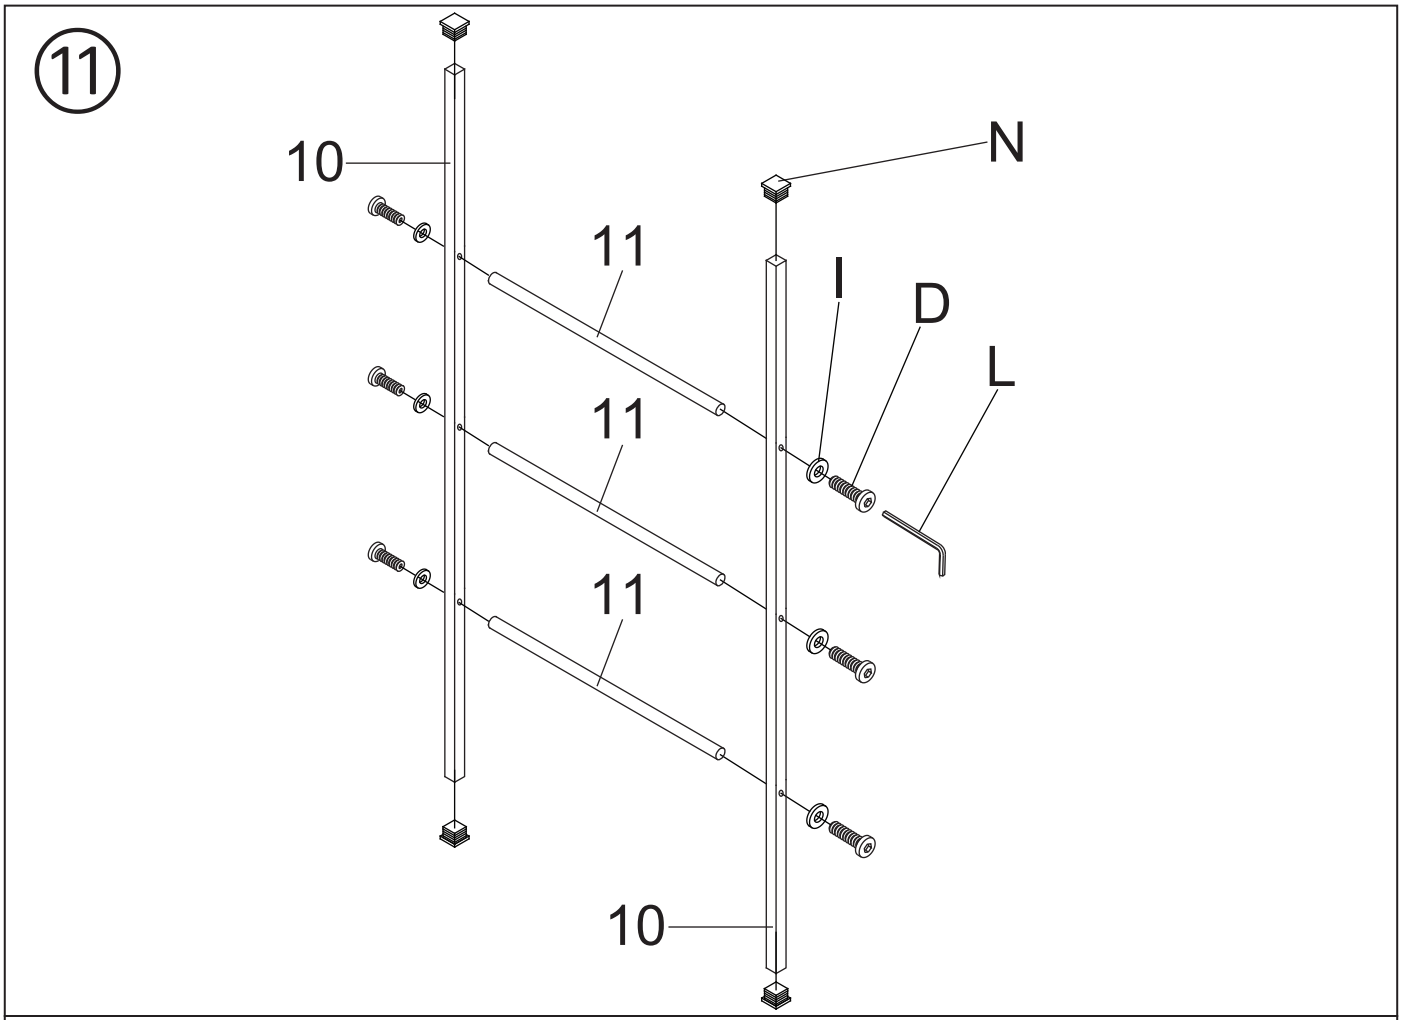

11
10
N
11
I
D
L
11
11
10

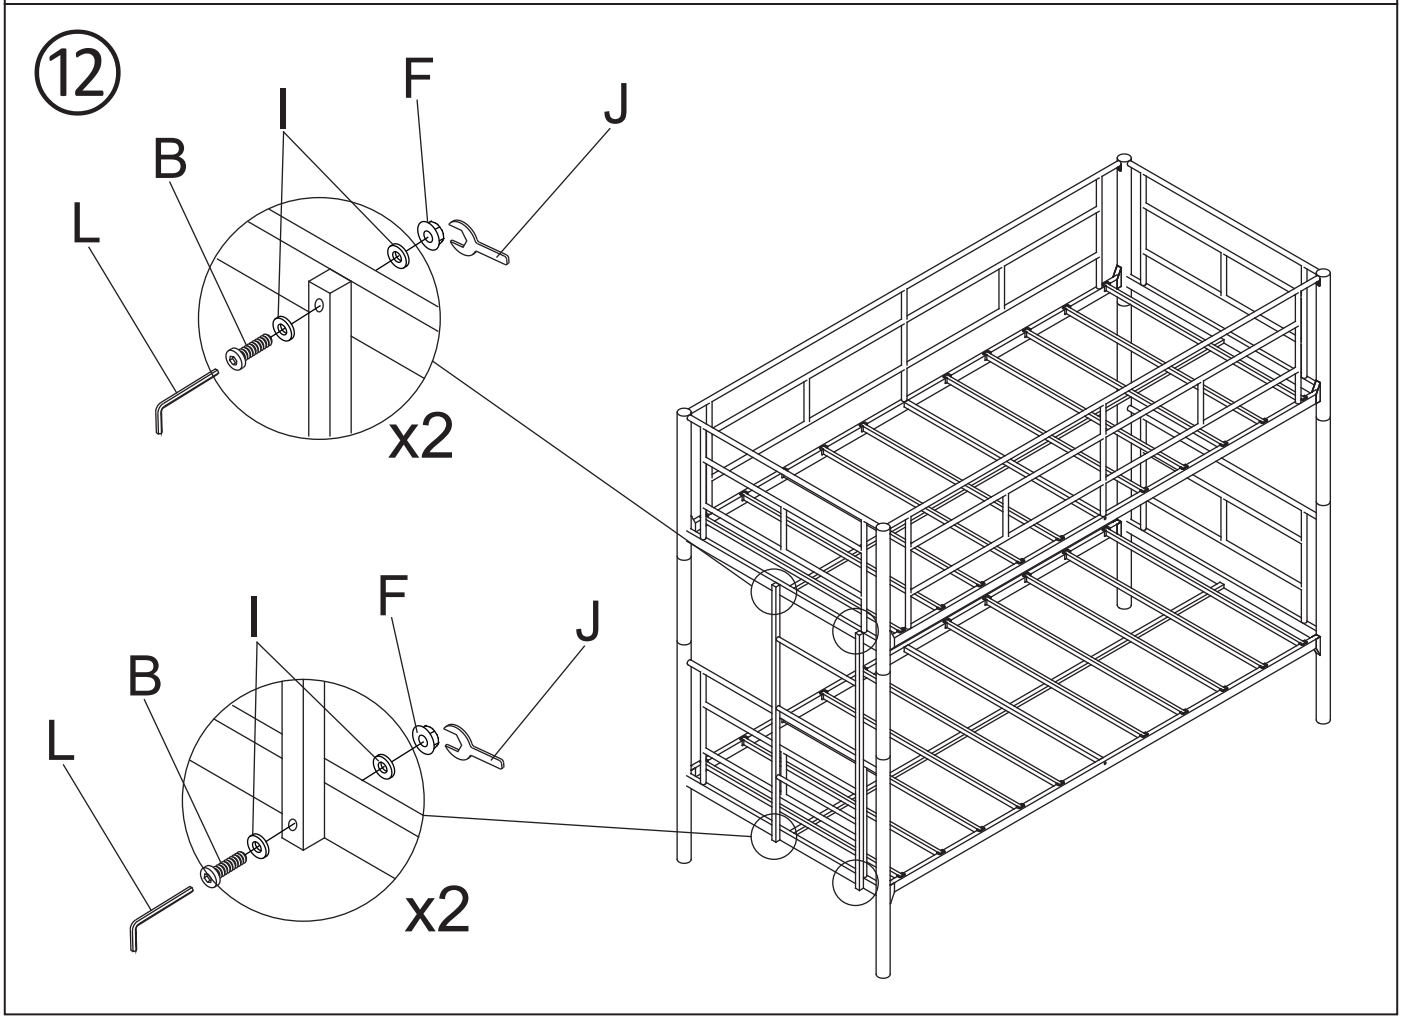
12
F
I
J
B
L
x2
F
I
J
B
L
x2


⑬

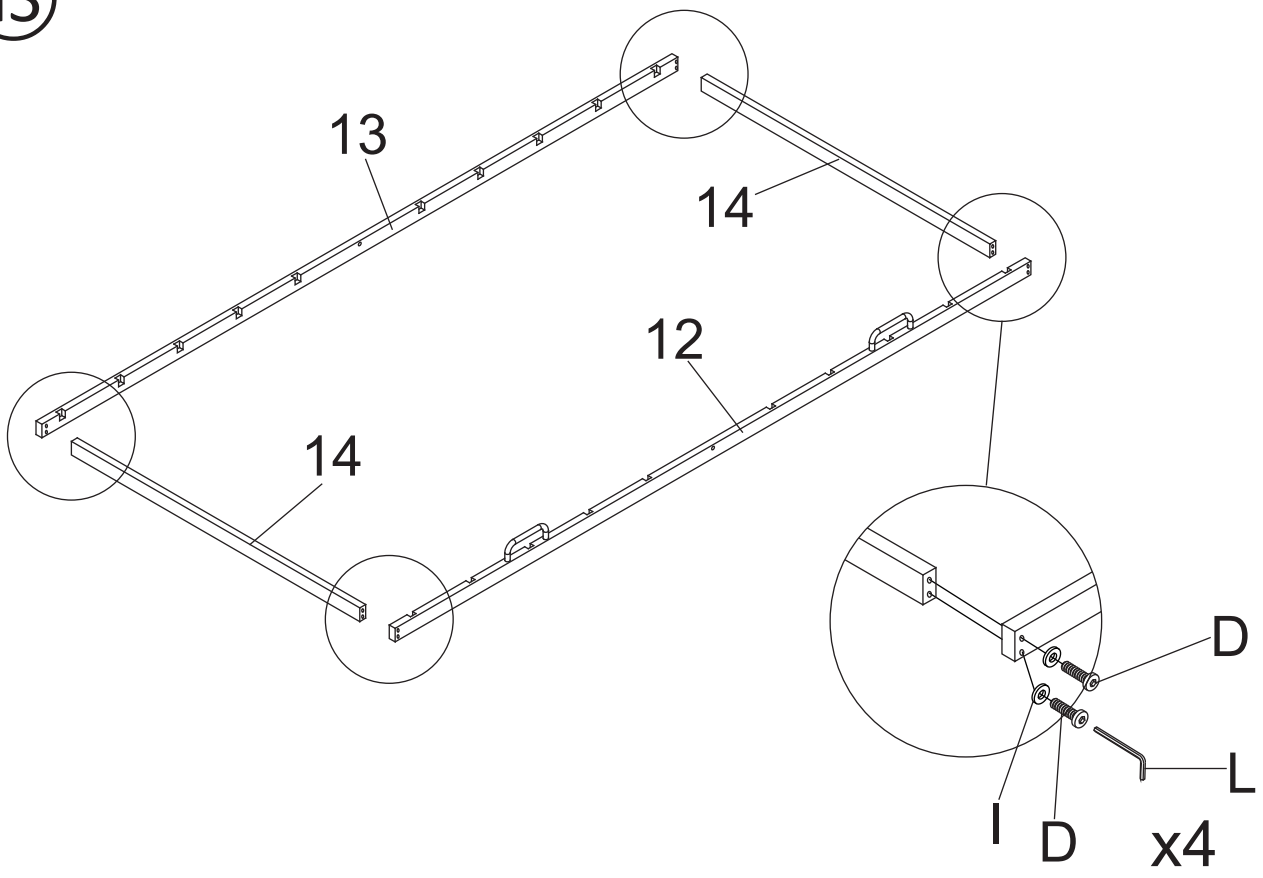

⑭

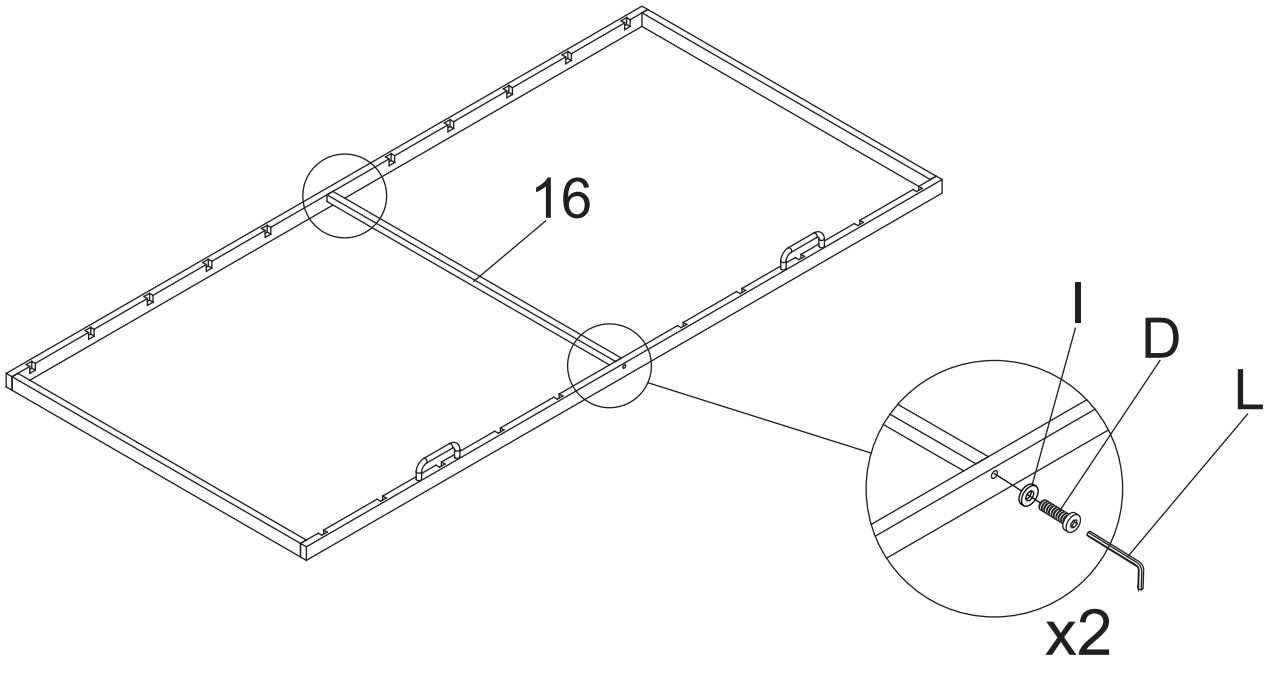

15

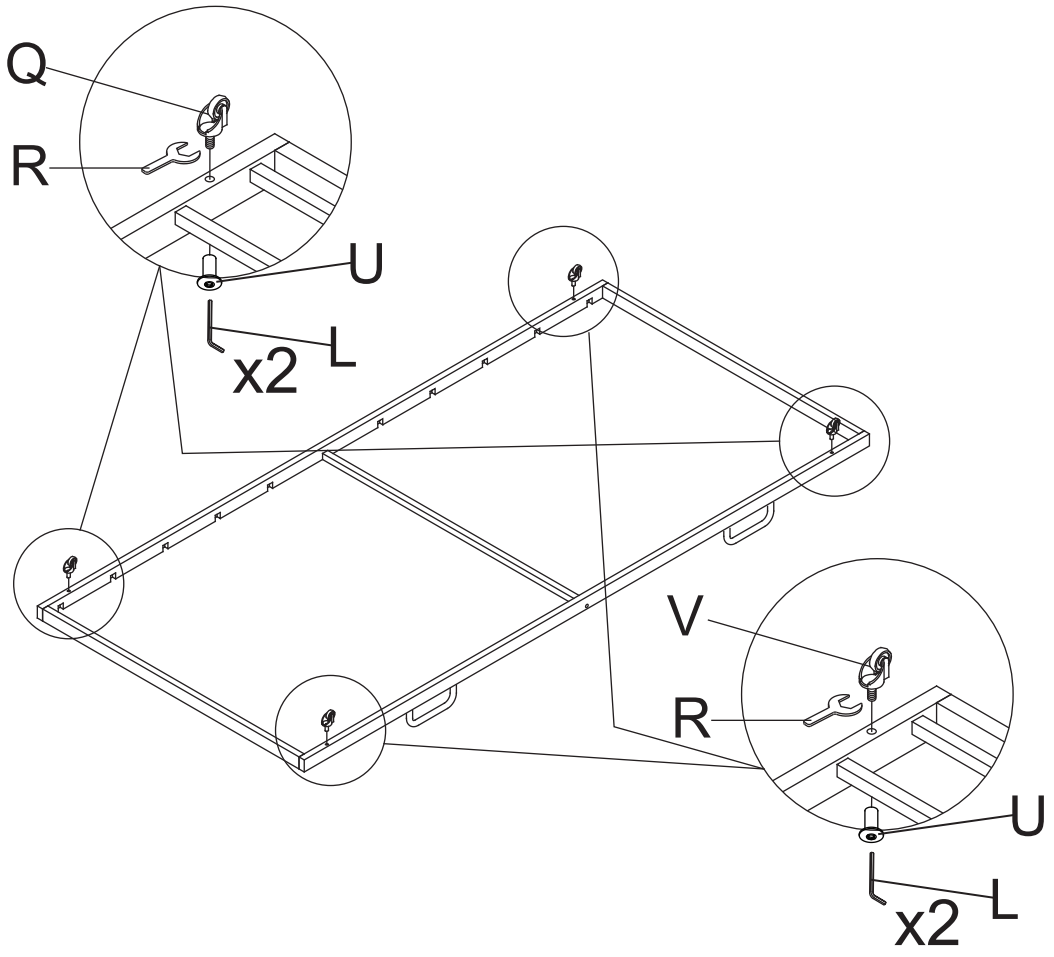

16

