Step5: Open the latches on both sides and position the metal adjustment plate to a comfortable setting, and unzip the zippers and detach the Velcro fasteners located around the fabric bag, the folding wagon can then be converted into a recliner



⚠WARNING

Immediate Discontinuation: Discontinue use immediately if any defect is found.
Personal Safety: Wear gloves during assembly, installation, or disassembly to protect against moving parts.
Intended Use: This wagon is designed for cargo transport only. It must never be used to transport children or adults under any circumstances.
Load & Environment: Always stay within the recommended weight capacity to ensure safety and prevent product failure. Avoid prolonged exposure to direct sunlight, water, or moisture. If the wagon gets wet, dry it thoroughly immediately.
Proper Handling: For optimal performance and durability, use on level ground with secure footing and avoid rough, uneven, or icy terrain. Assemble and fold with care, avoiding excessive force to prevent damage. A slight odor from the tires upon unboxing is normal and harmless.

Thank you support!

Thank you for choosing our collapsible wagon.
We hope it brings you lasting convenience and reliability.
We are always here to help and value your satisfaction.
Enjoy your new wagon!

USERMANUAL





1.Parts Checklist •••



Frame
×1



Fabric Pocket
×1



Front

Rear

Detachable Wheels
x 4



Headrest
×1



Insulated Bag
×1



Side Pocket
×1

2.Assembly&Use •••

Step 1: Take out all cart accessories from the carton.
Push 4 wheels into shaft securely.

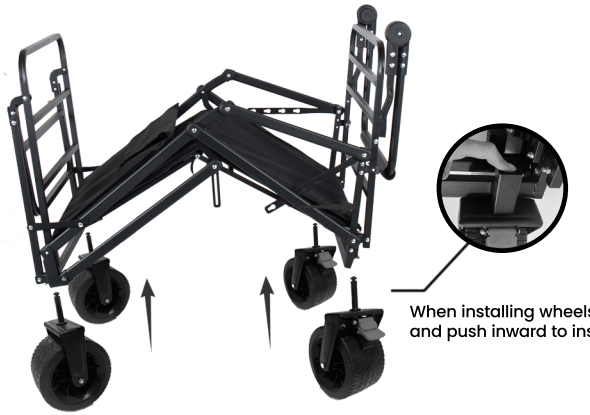

When installing wheels, press the button and push inward to install.

Step2: Fully unfold the frame, Fasten the buckle to the frame



Step3: Install the fazbric bag. Pull up the zippers on all four sides and secure them with the Velcro fasteners.



Step4: Attach the side pockets and insulated bag, securing them with Velcro.



