STORAGE CABINET

SKU N707P472769
SKU N707P472770


Assembly instructions-Please keep for future reference




WARNING


CSU

This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

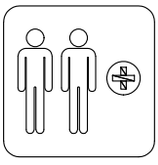


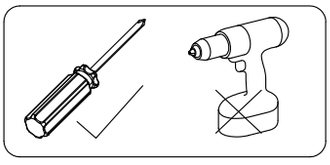


Important-Please read these instructions fully before starting assembly

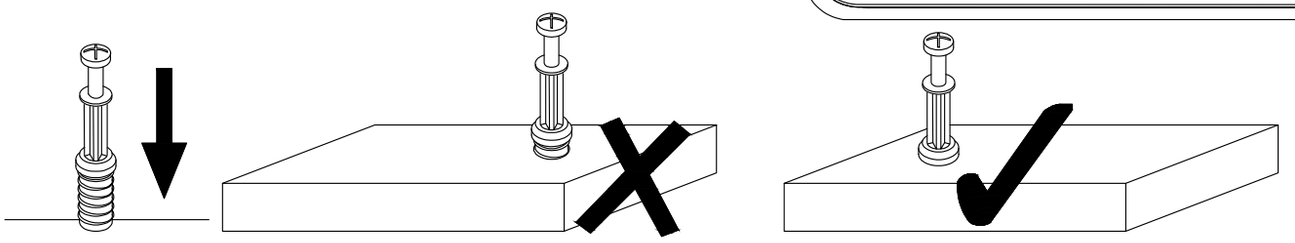


QUICKFIT:Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

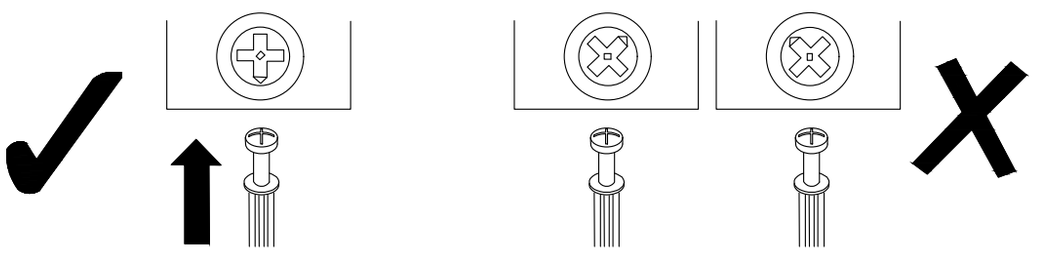

LOCK:When fitting cam lock,ensure starting position is correct before you insert connecting quickfit.

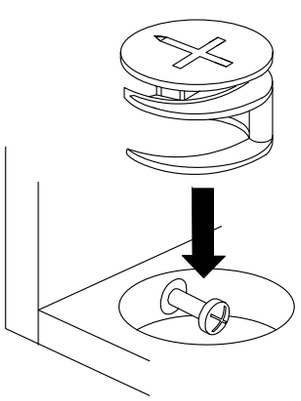


Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

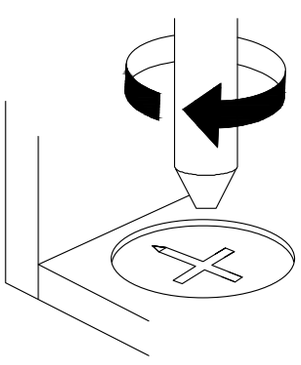



Turn cam lock clockwise to tighten.


Assembly Instructions

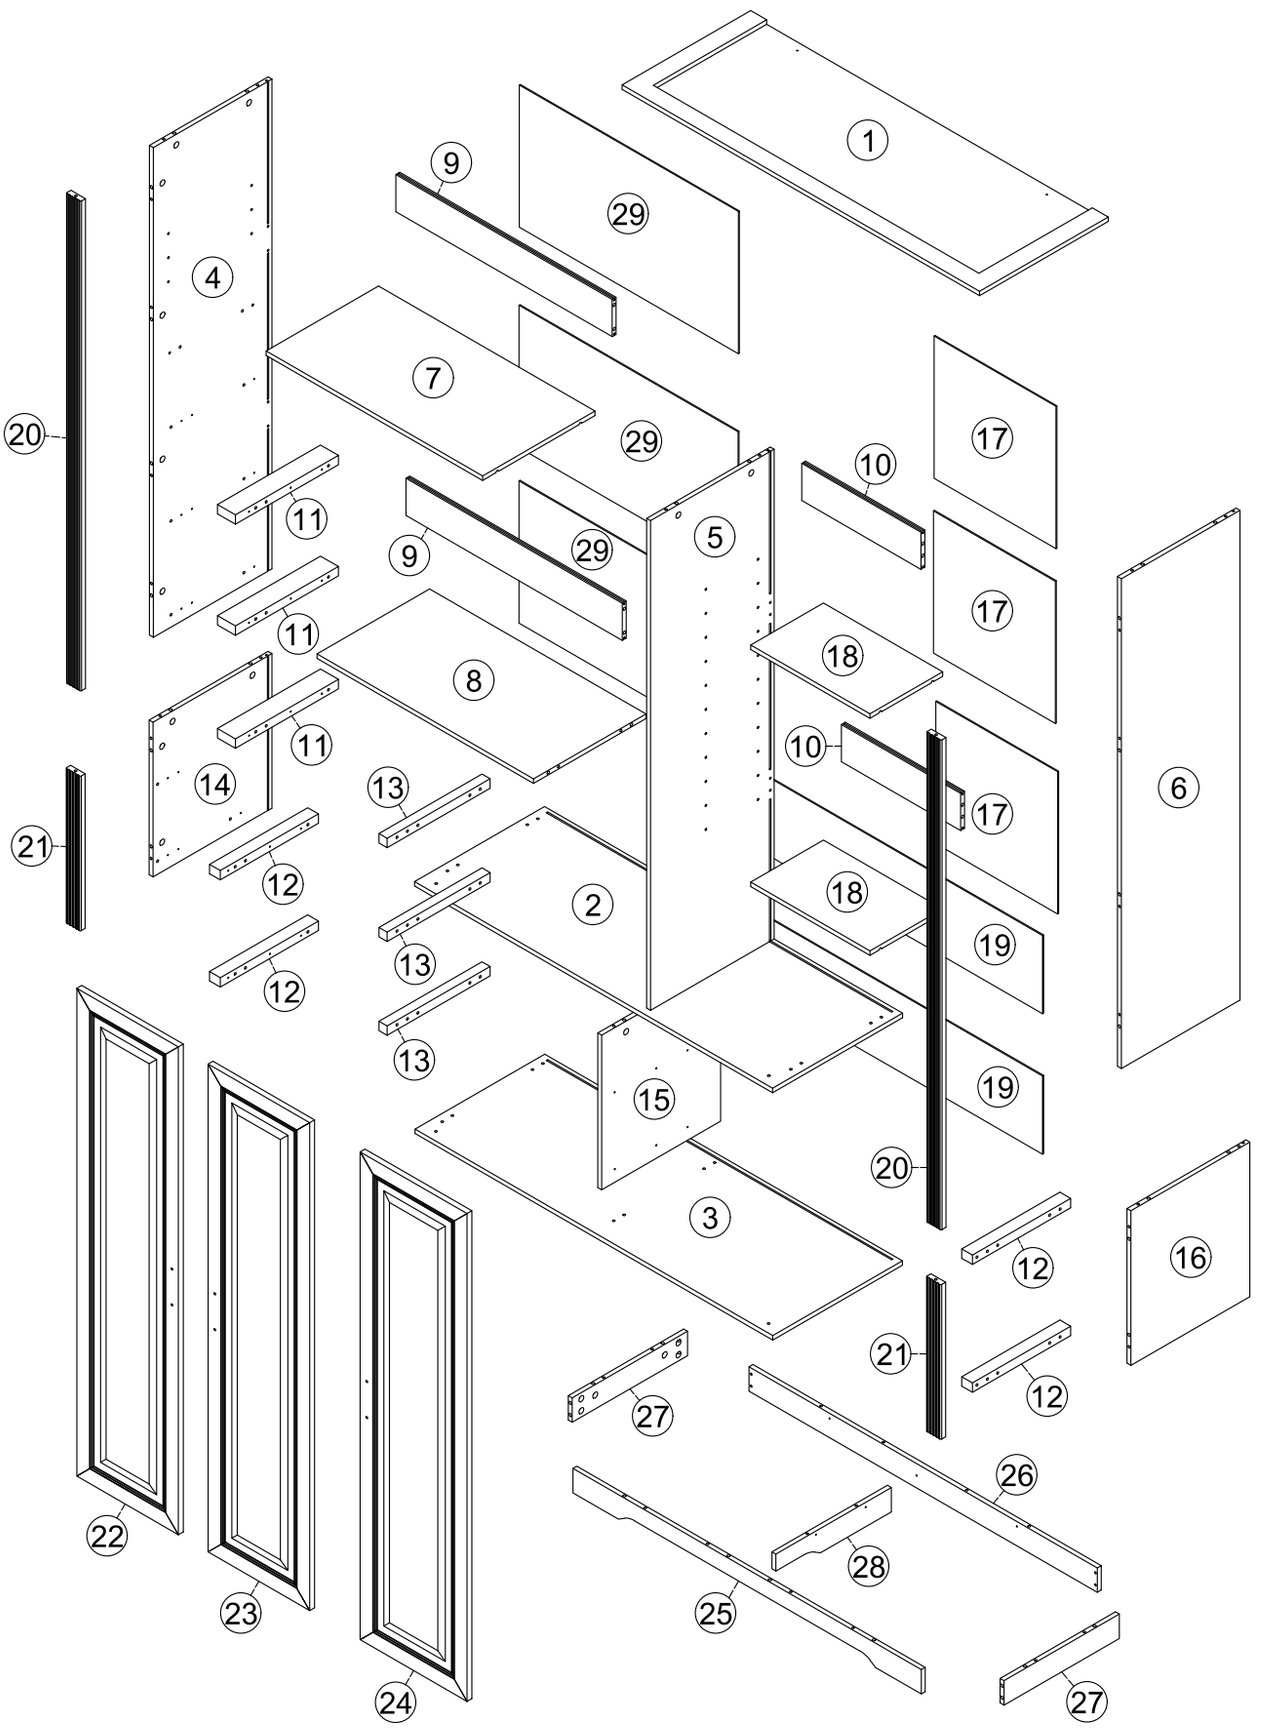








Assembly Instructions







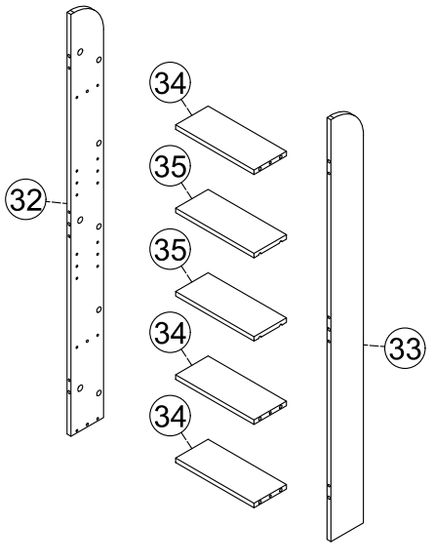


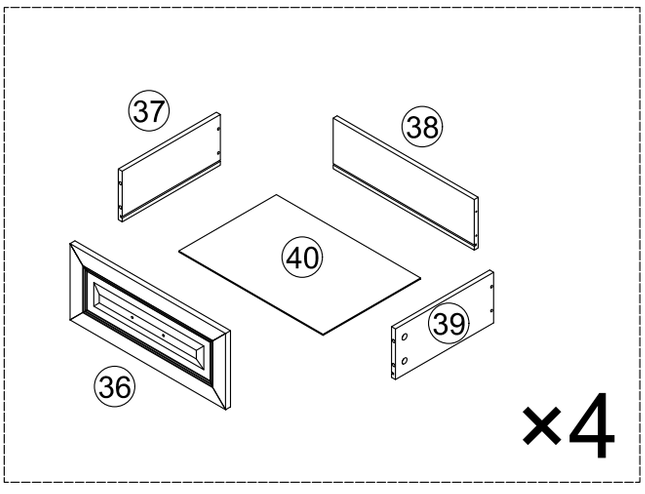







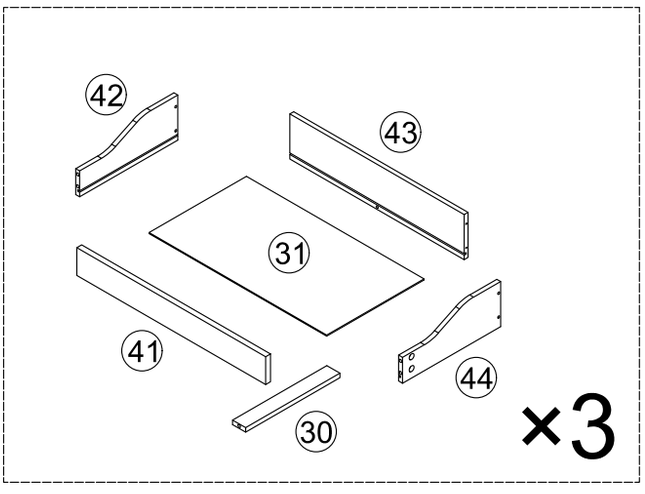









BOX:N707P472769

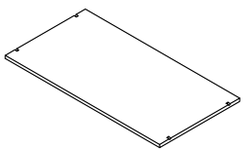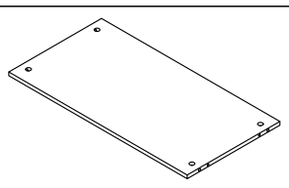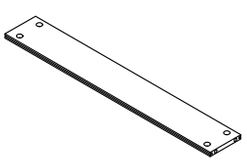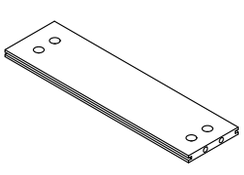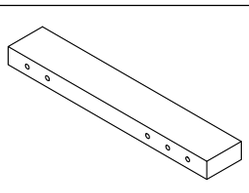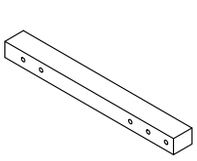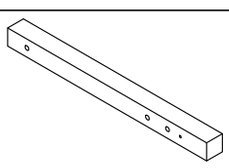NO.	PARTS	QTY
7		x1
NO.	PARTS	QTY
8		x1
NO.	PARTS	QTY
9		x2
NO.	PARTS	QTY
10		x2
NO.	PARTS	QTY
11		x3
NO.	PARTS	QTY
12		x4
NO.	PARTS	QTY
13		x3

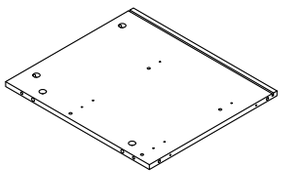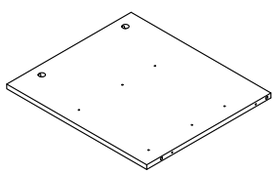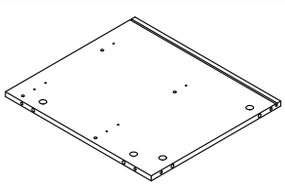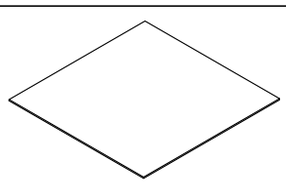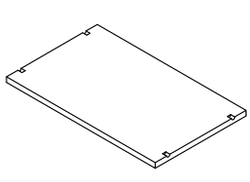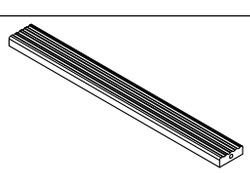
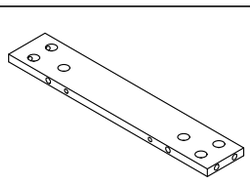
NO.	PARTS	QTY
14		x1
NO.	PARTS	QTY
15		x1
NO.	PARTS	QTY
16		x1
NO.	PARTS	QTY
17		x3
NO.	PARTS	QTY
18		x2
NO.	PARTS	QTY
21		x2
NO.	PARTS	QTY
27		x2

BOX:N707P472769

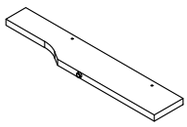
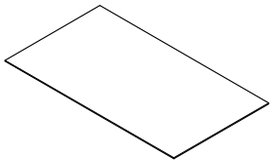
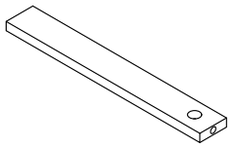
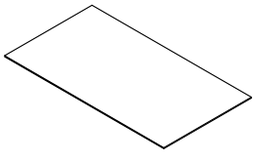
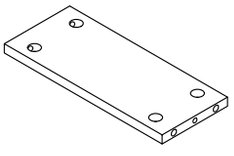
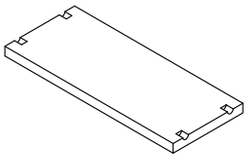
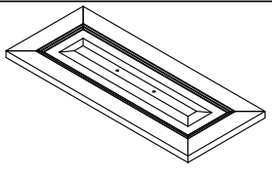
NO.	PARTS	QTY
28		x1
NO.	PARTS	QTY
29		x3
NO.	PARTS	QTY
30		x3
NO.	PARTS	QTY
31		x3
NO.	PARTS	QTY
34		x3
NO.	PARTS	QTY
35		x2
NO.	PARTS	QTY
36		x4

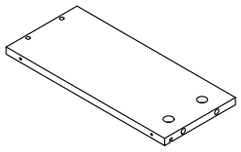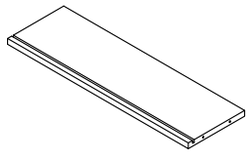
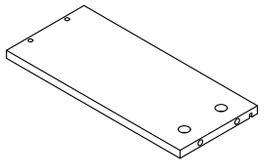
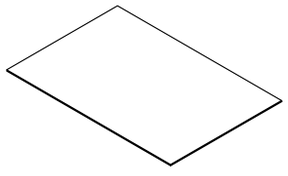
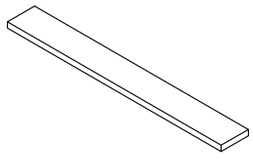
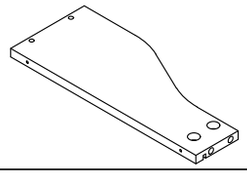
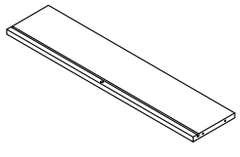
NO.	PARTS	QTY
37		x4
NO.	PARTS	QTY
38		x4
NO.	PARTS	QTY
39		x4
NO.	PARTS	QTY
40		x4
NO.	PARTS	QTY
41		x3
NO.	PARTS	QTY
42		x3
NO.	PARTS	QTY
43		x3

BOX:N707P472769

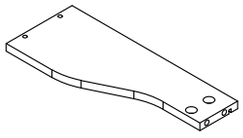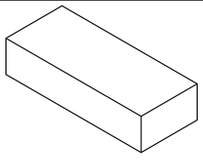
NO.	PARTS	QTY
44		x3
NO.	PARTS	QTY
	 Hardware kit	x1

BOX:N707P472770

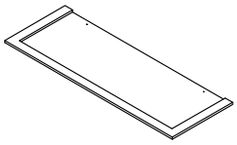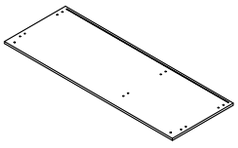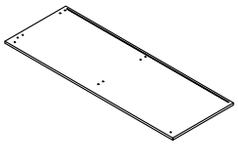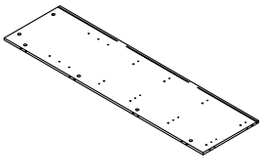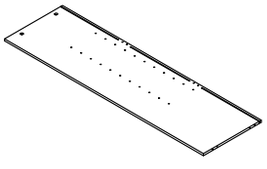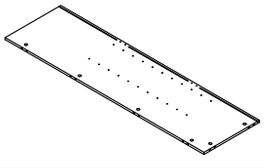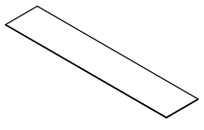NO.	PARTS	QTY
1		x1
NO.	PARTS	QTY
2		x1
NO.	PARTS	QTY
3		x1
NO.	PARTS	QTY
4		x1
NO.	PARTS	QTY
5		x1
NO.	PARTS	QTY
6		x1
NO.	PARTS	QTY
19		x2

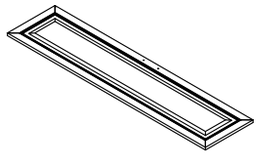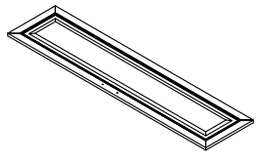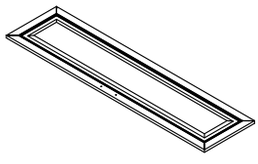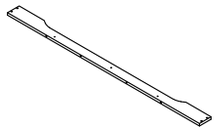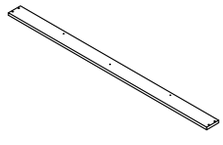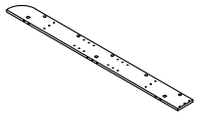
NO.	PARTS	QTY
20		x2
NO.	PARTS	QTY
22		x1
NO.	PARTS	QTY
23		x1
NO.	PARTS	QTY
24		x1
NO.	PARTS	QTY
25		x1
NO.	PARTS	QTY
26		x1
NO.	PARTS	QTY
32		x1

BOX:N707P472770

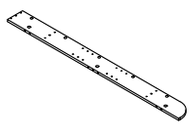
NO.	PARTS	QTY
33		x1
NO.	PARTS	QTY
K		x1

BOX:N707P472769


A x105+5	**B** x105+5	**C** x52+3 M4x30mm	**D** x9+1 M4x45mm	**E** x20+1	**F** x111+5 M3x12mm	**G** x24+2 M3.5x16mm
H x2	**I** x3	**J** x96+5 M6x30mm	**L** x12+1 M5x40mm	**M** x7	**N** x14+1 M4x14mm	**O** x6
P x3	**Q** x36+2	**R** x30+2 M3.5x16mm	**S** x2	**T** x5	**U** x8	

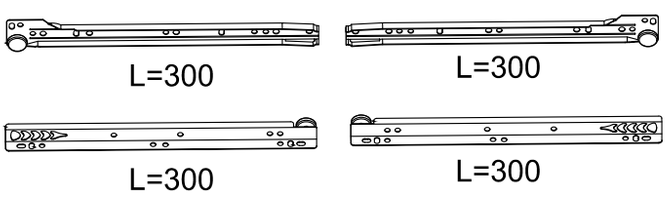


x7




CL




CR




DL



DR

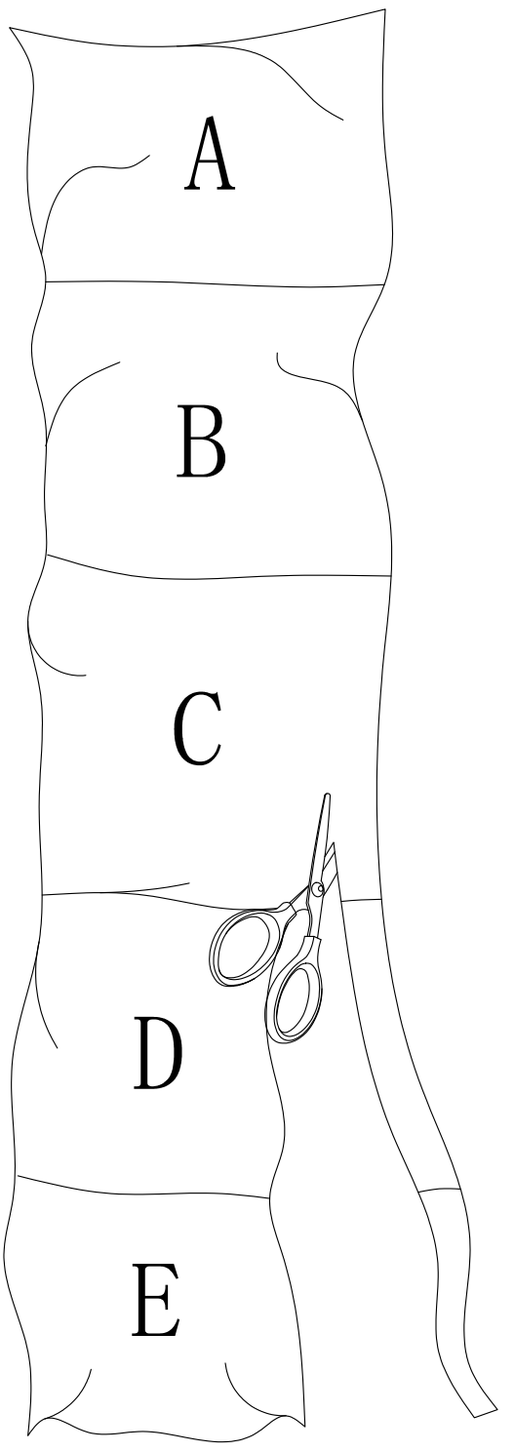

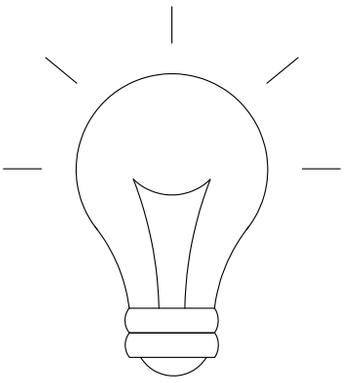


friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

Assembly Steps


1

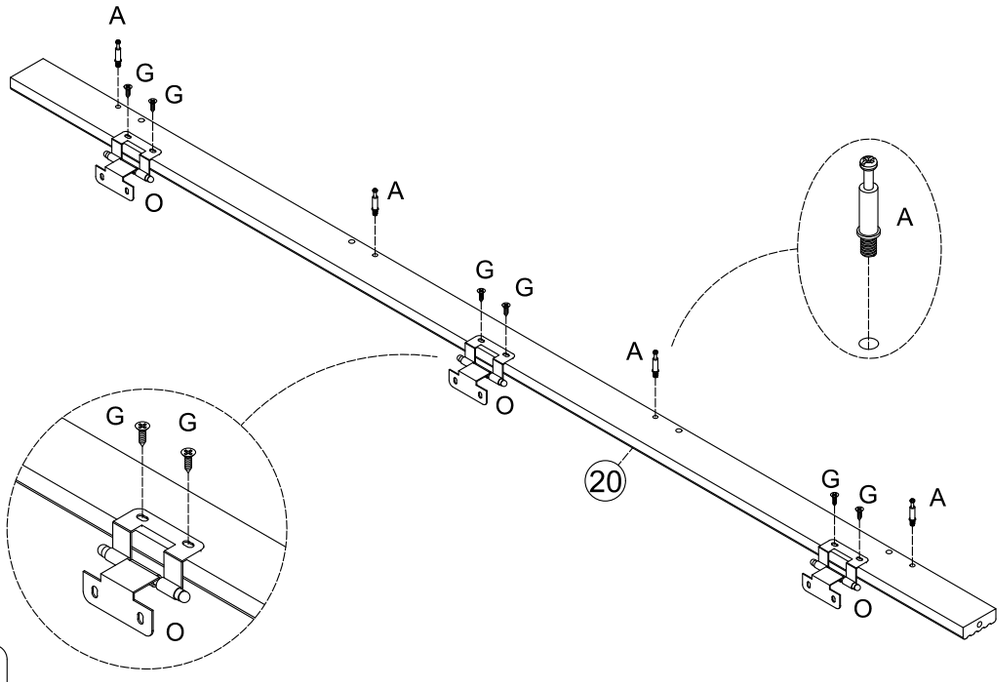

A x8




G x12




M3.5x16mm

O x6



×2


2

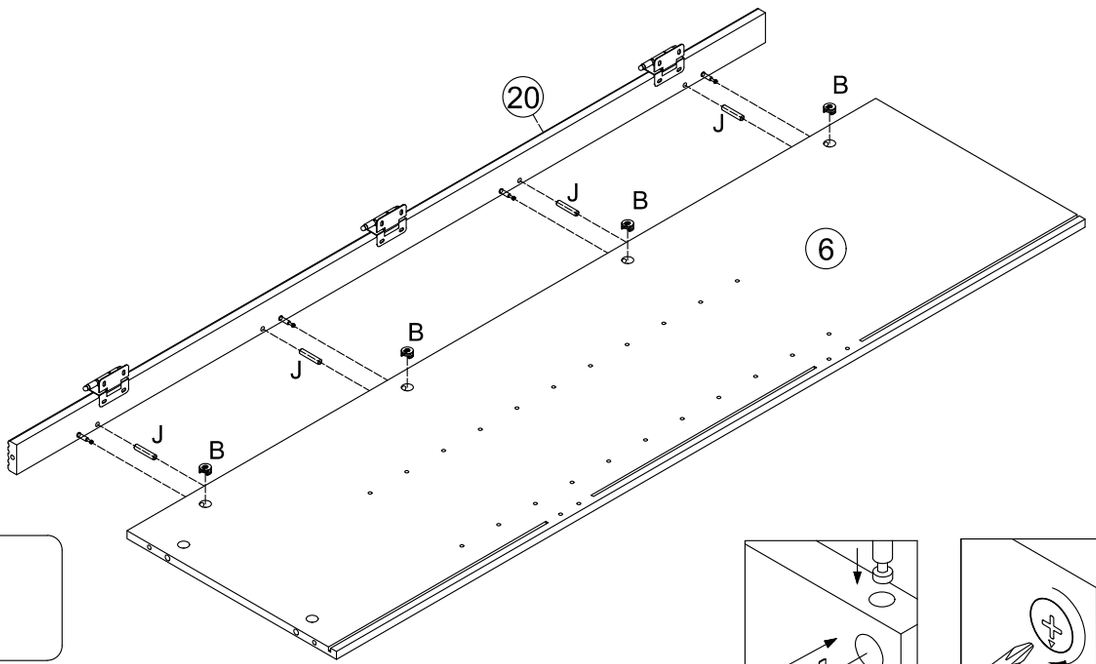


B x4




J x4



M6x30mm

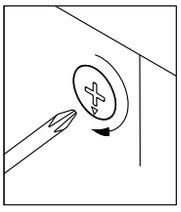


3

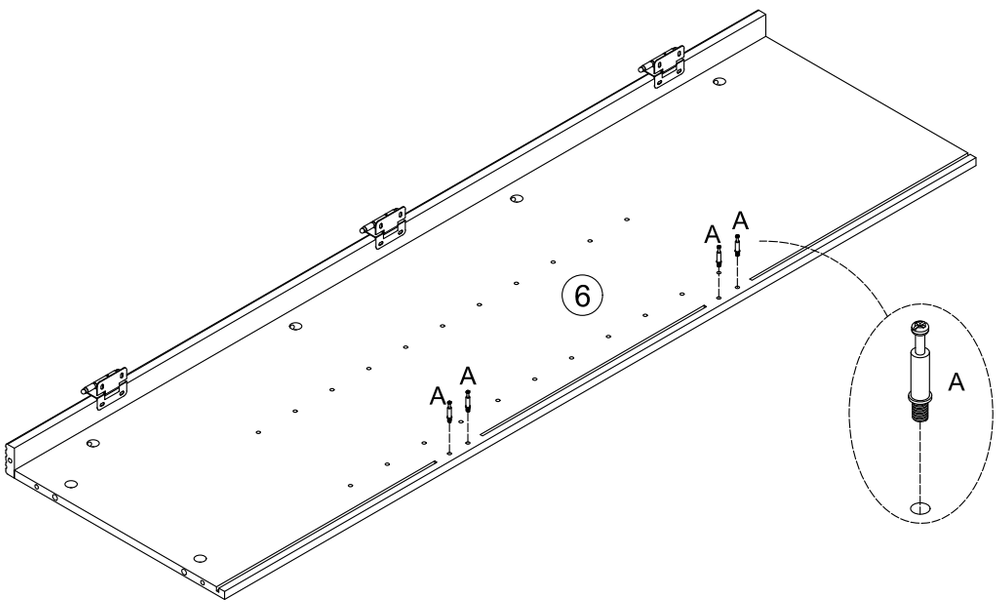

A x4




4

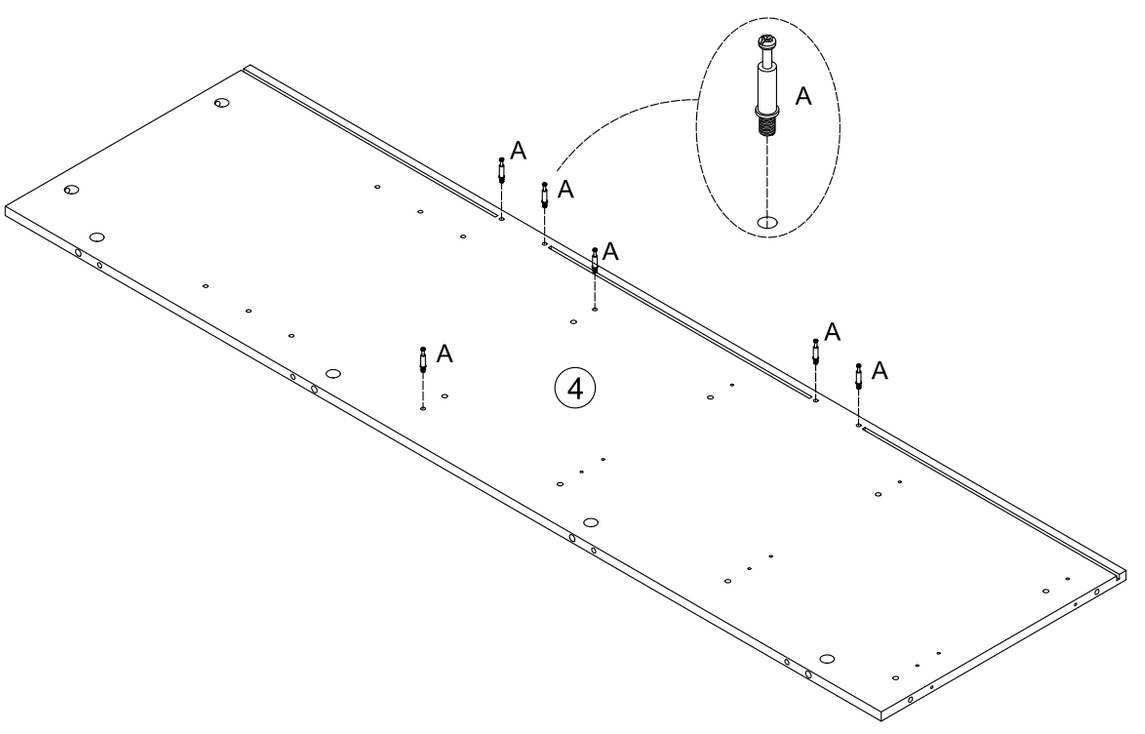


A x6



5

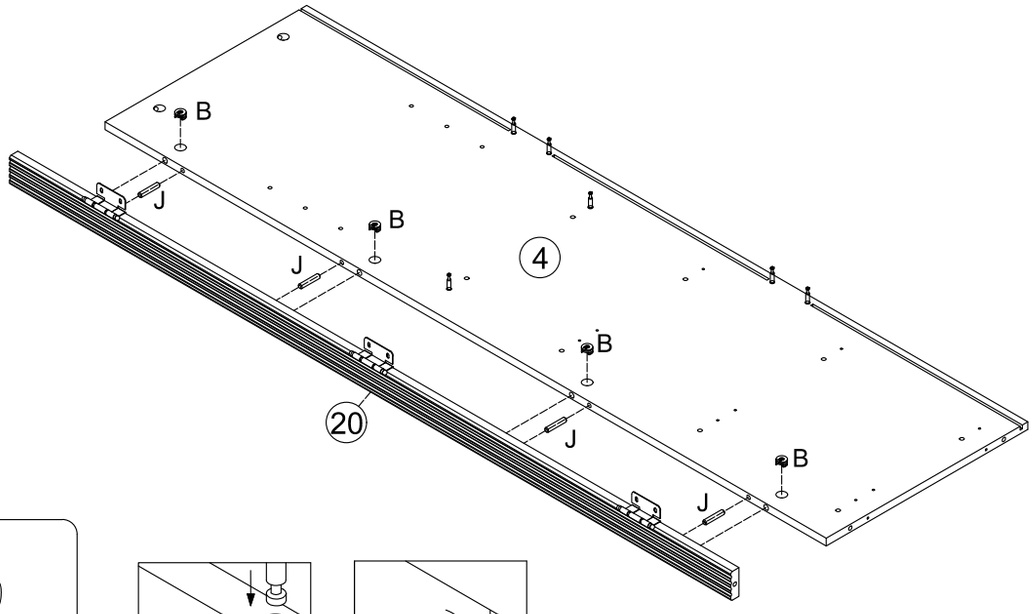


B x4




J x4




M6x30mm

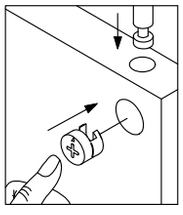

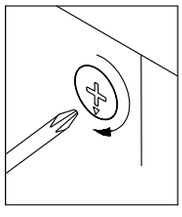

6

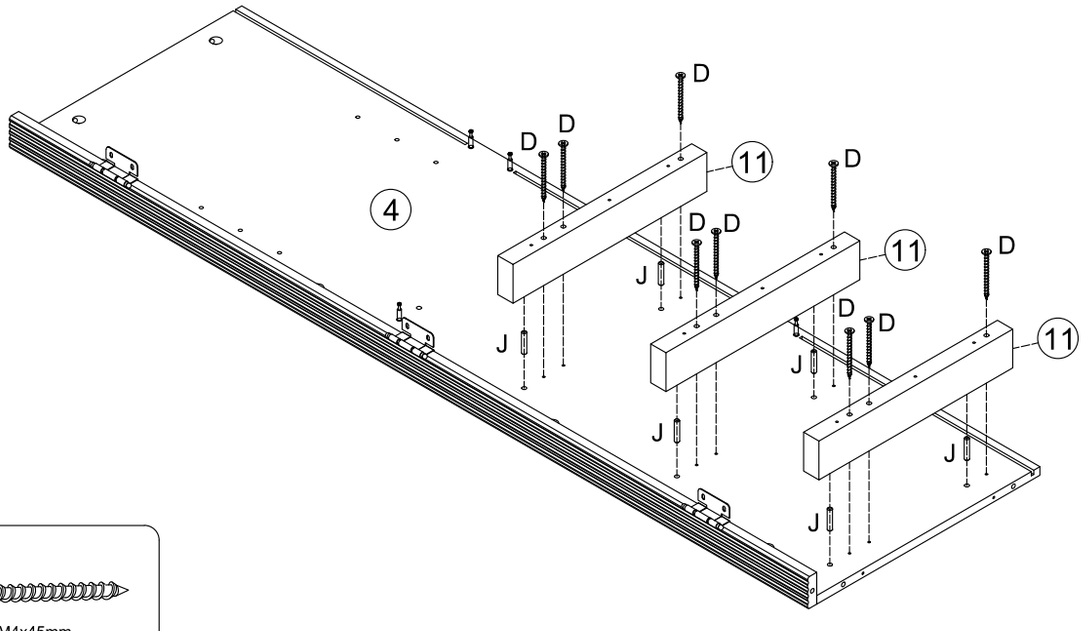

D x9


M4x45mm

J x6



M6x30mm

7

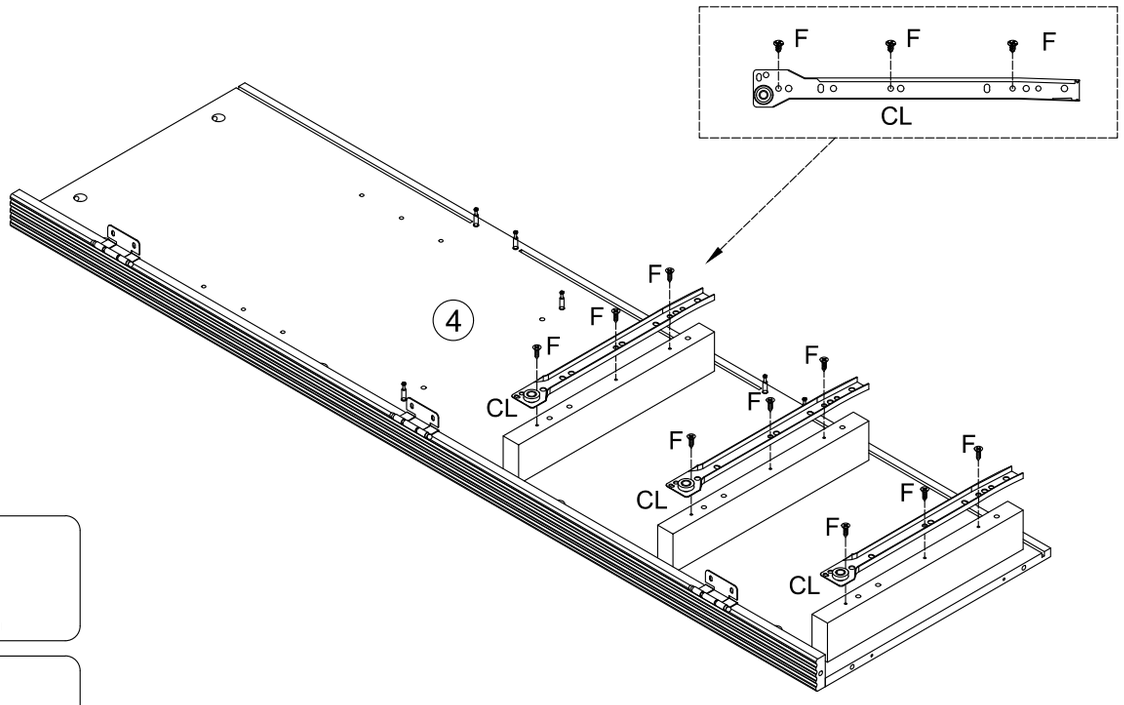

F x9




M3x12mm

CL x3



8

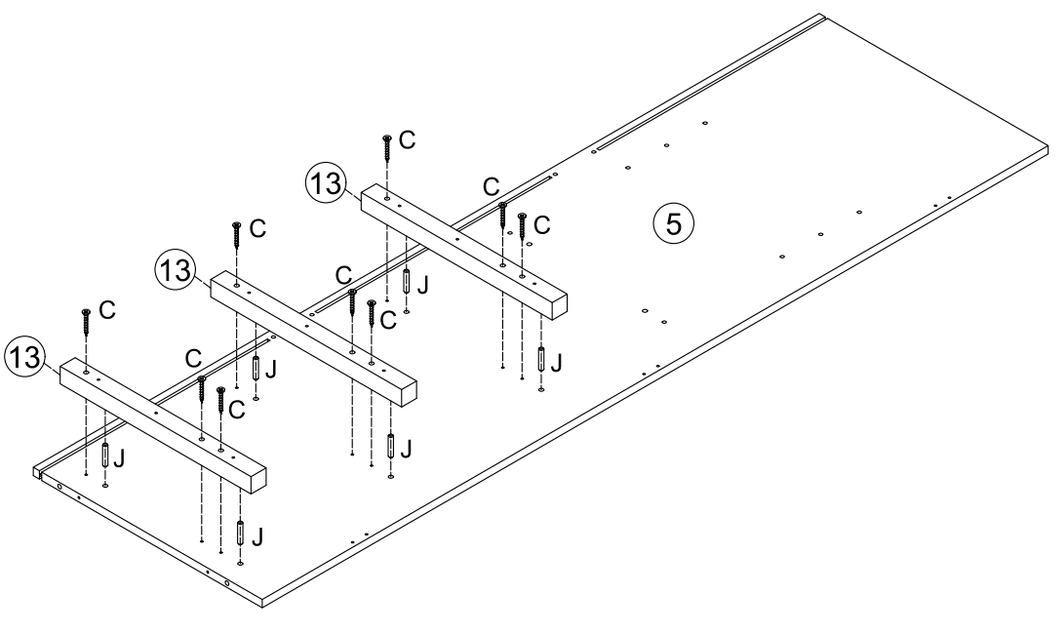


C x9




M4x30mm

J x6



M6x30mm

9

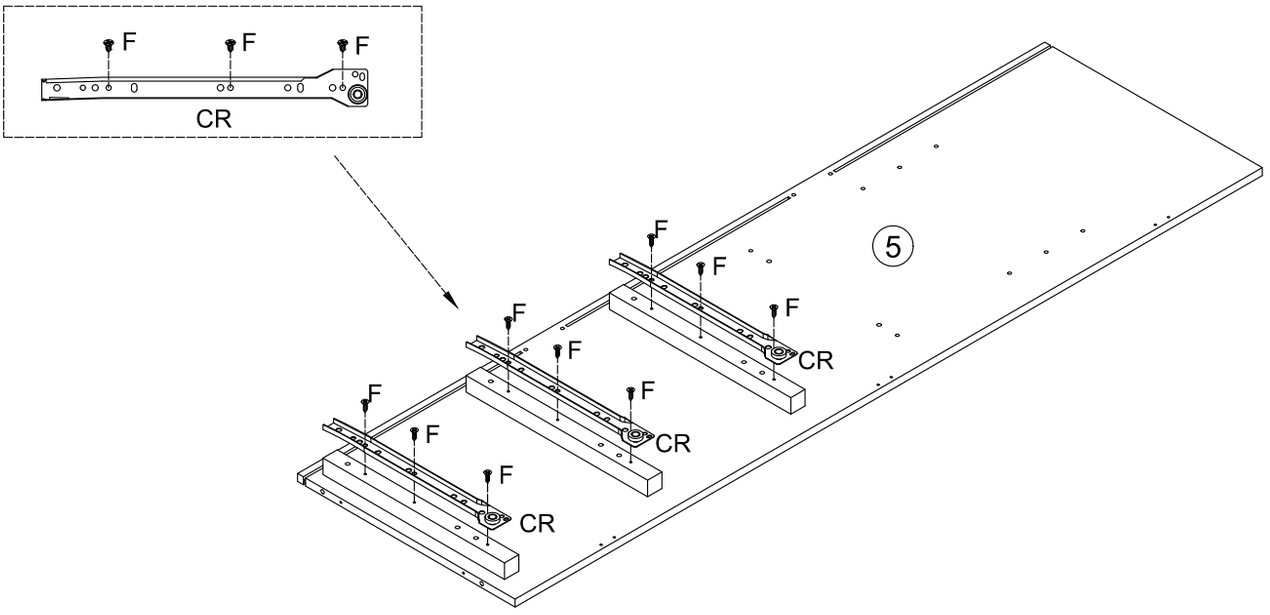

F x9




M3x12mm

CR x3



10

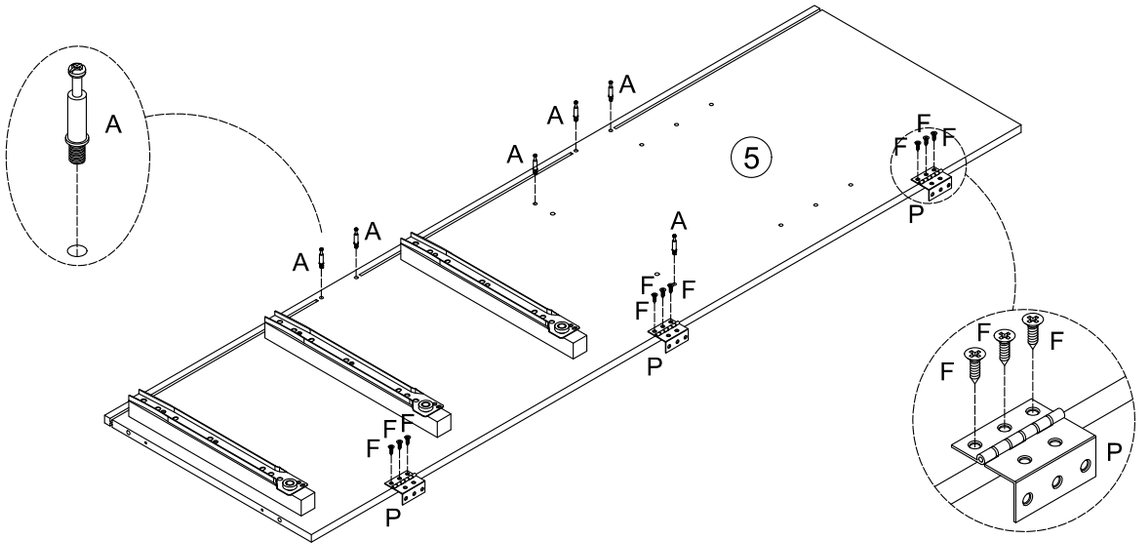

A x6




F x9




M3x12mm

P x3




11

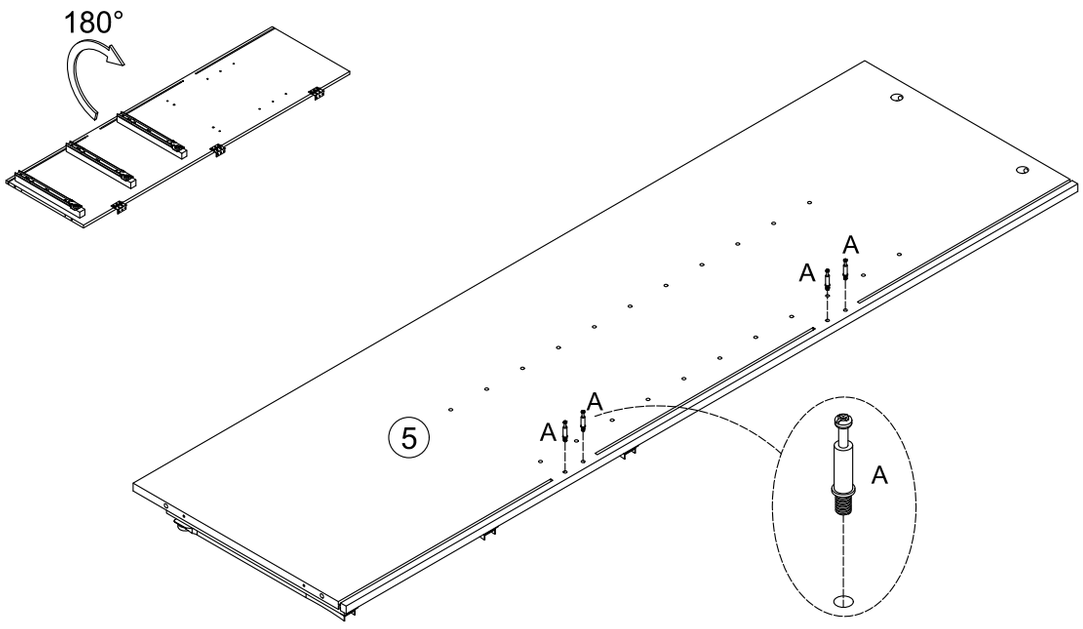

A x4




12

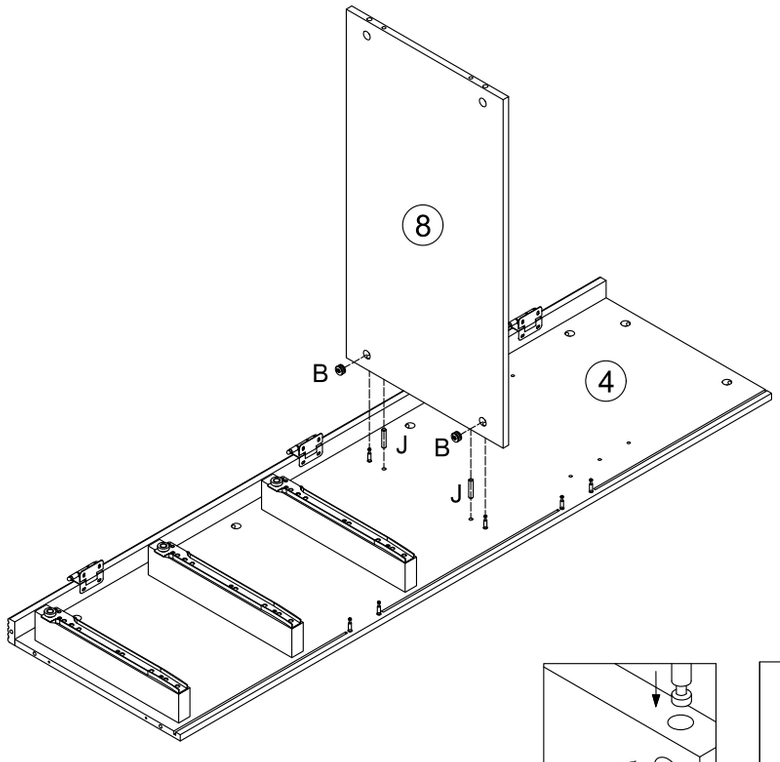


B x2




J x2





M6x30mm

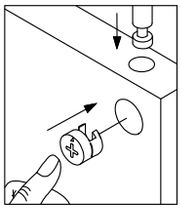

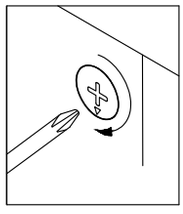


13

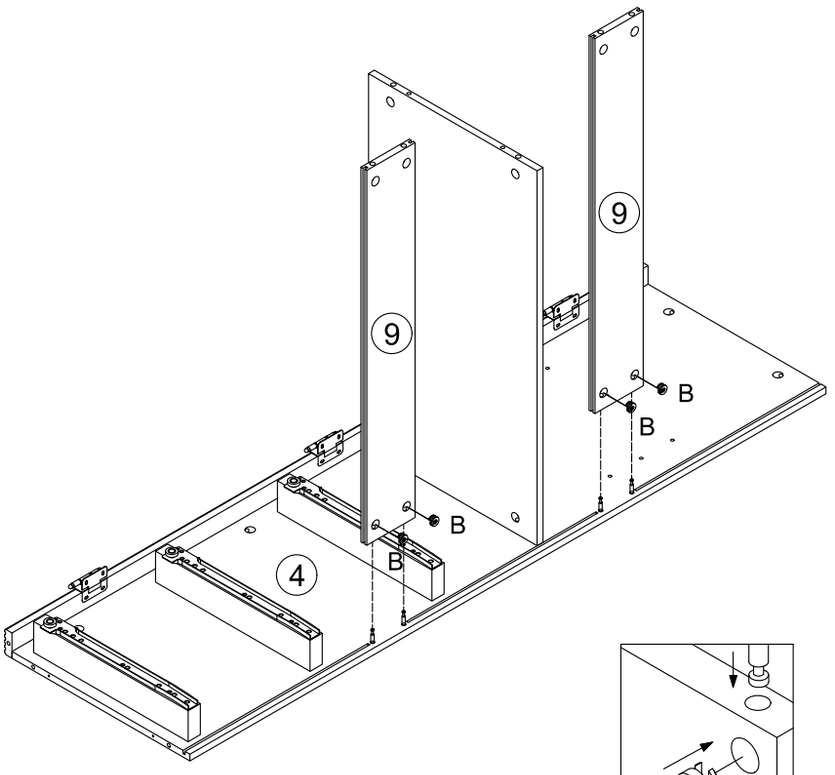


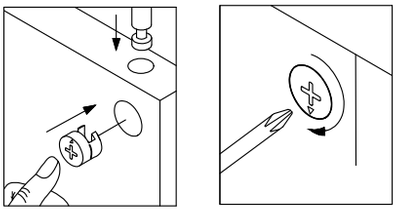


B x4




14

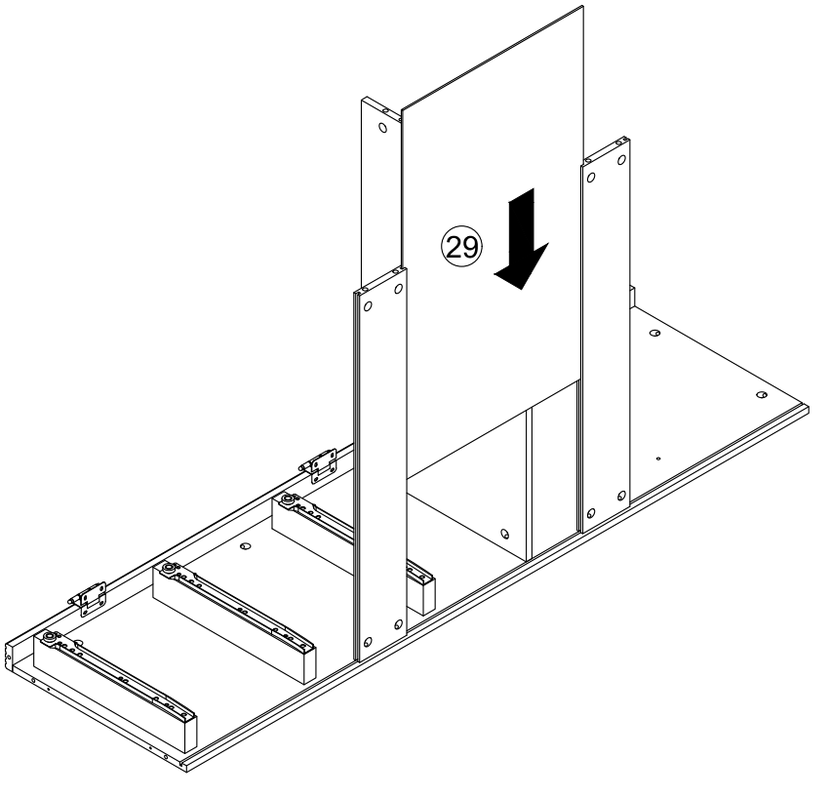


15

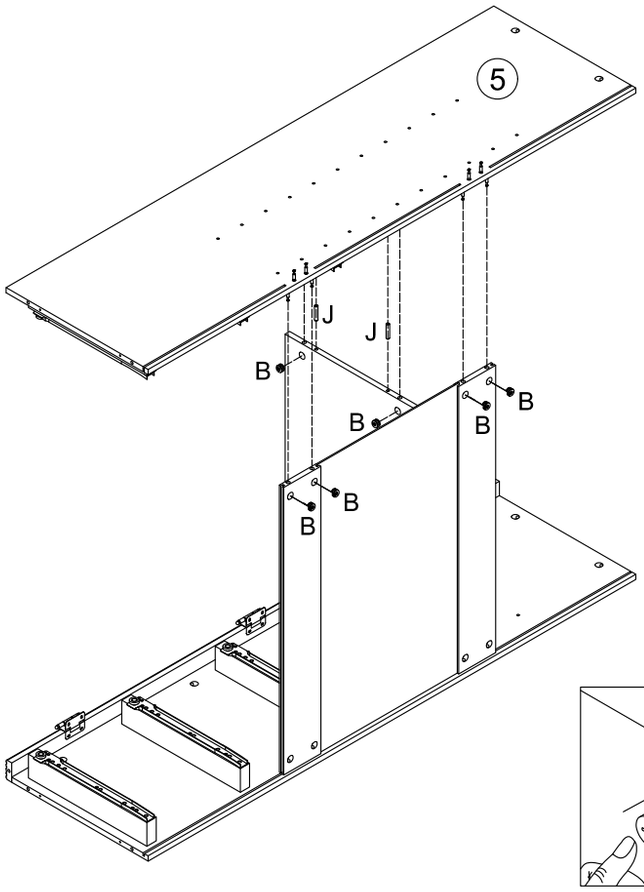


B x6




J x2





M6x30mm

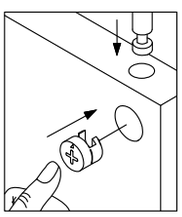

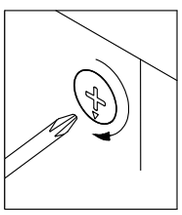



16

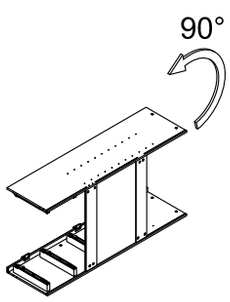


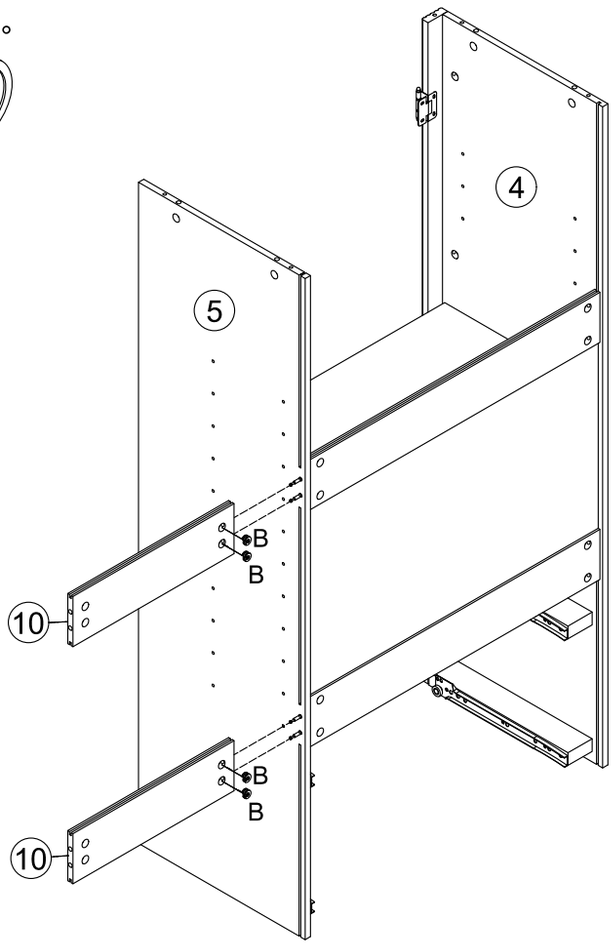


B x4



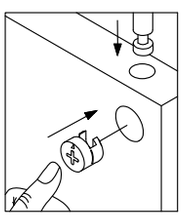


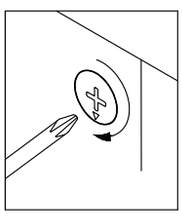



17

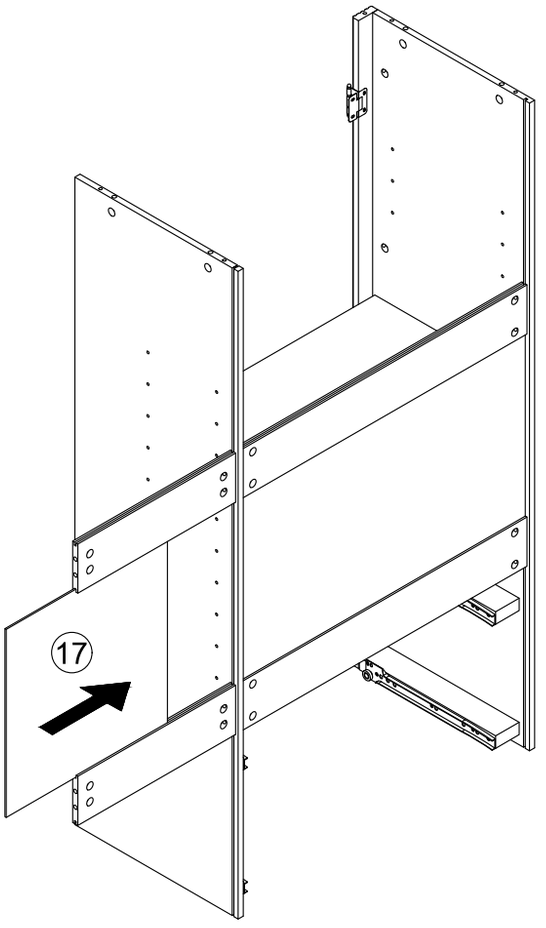

18

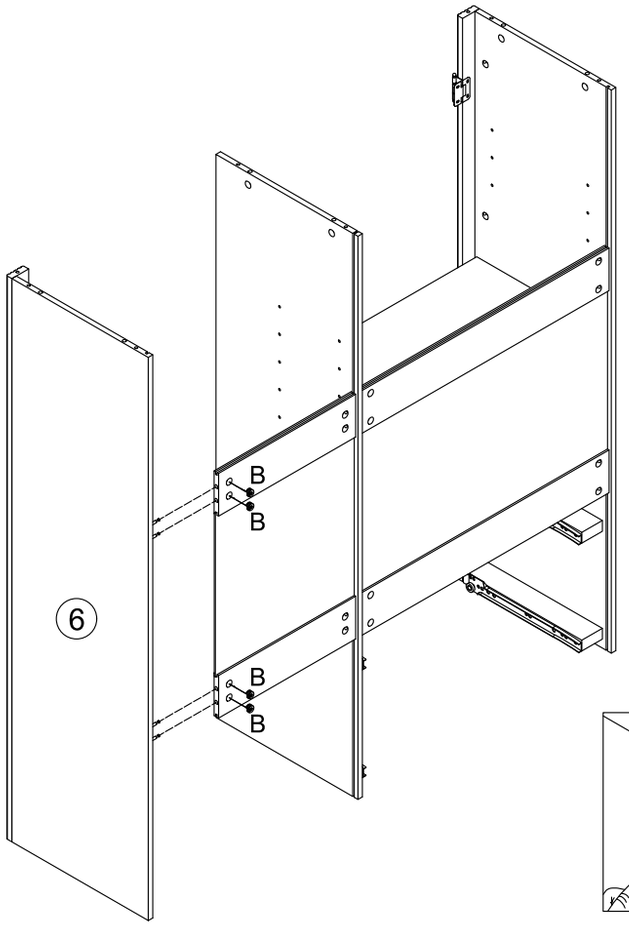

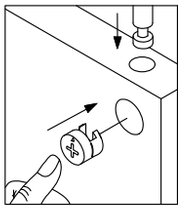


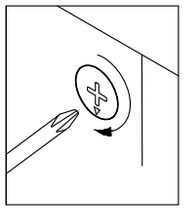


B x4



19

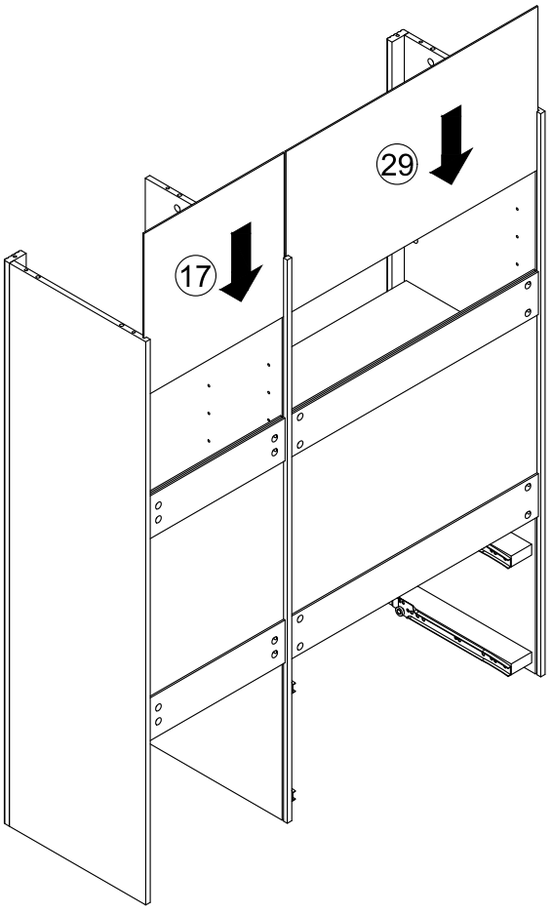

20

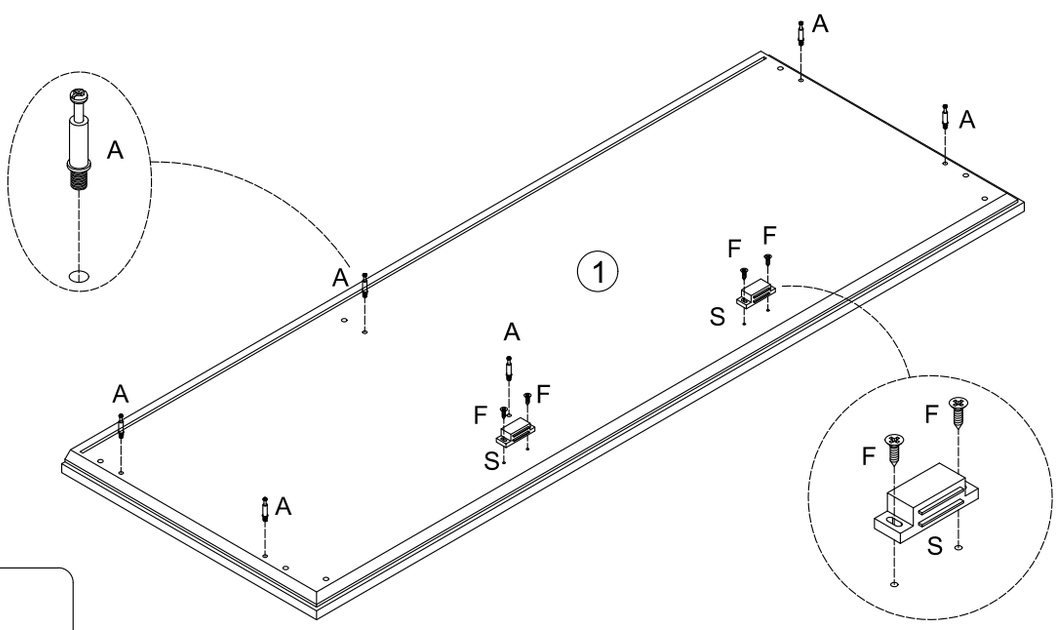

A x6




F x4




M3x12mm


S x2



21

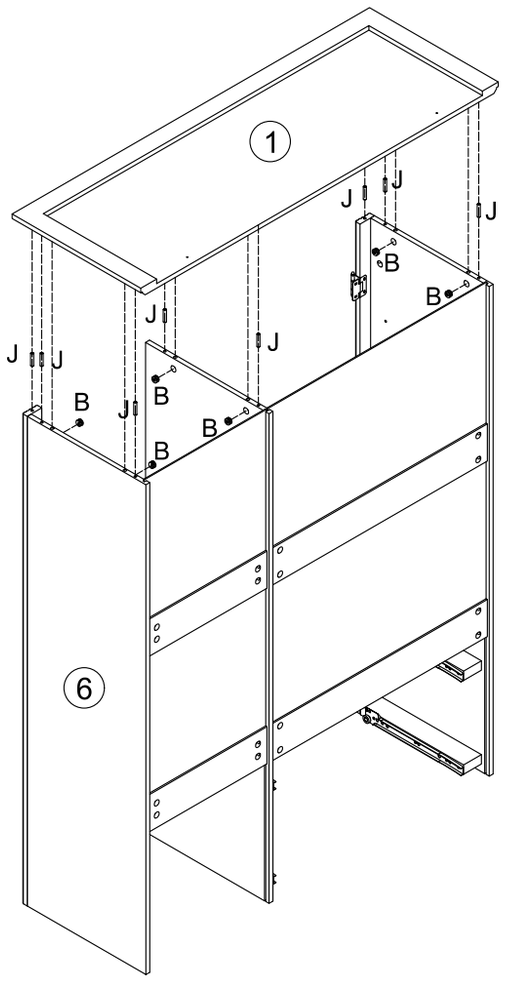


B x6




J x8




M6x30mm

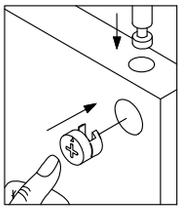

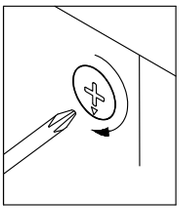


22

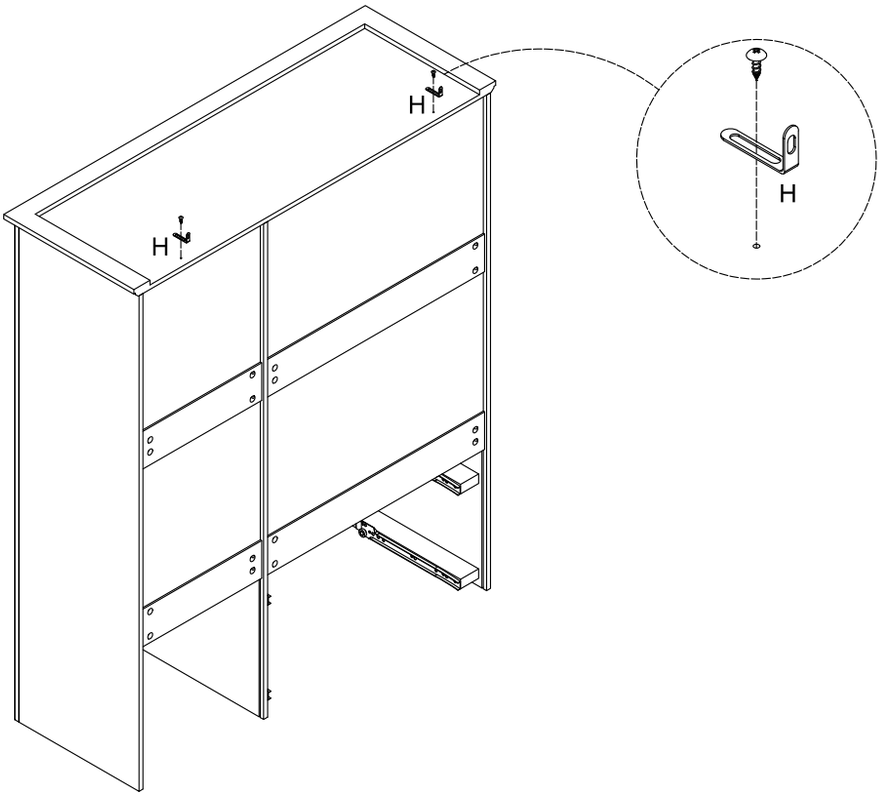


H x2




23

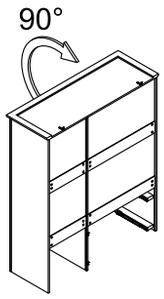


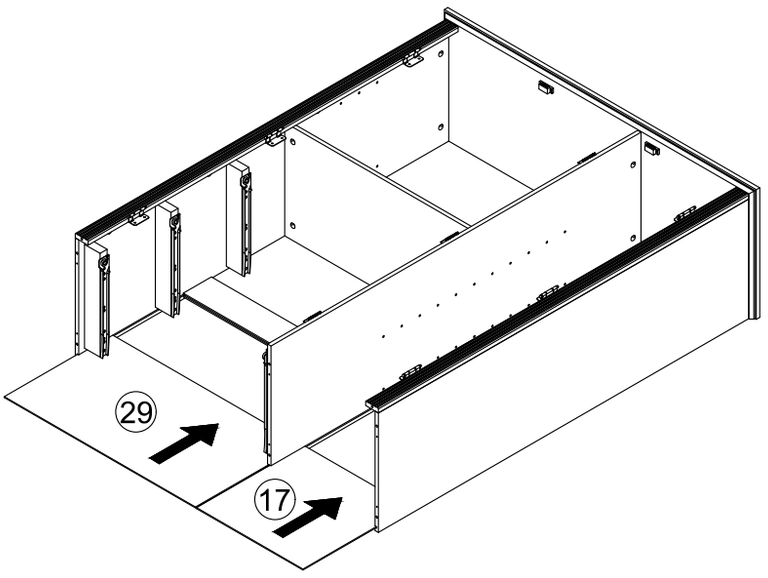

24

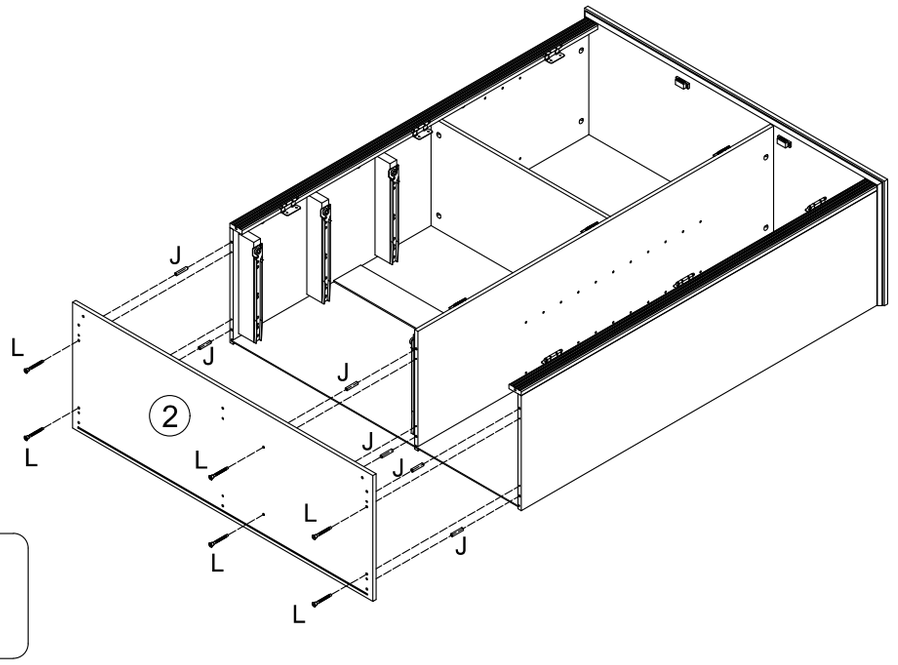

J x8




M6x30mm

L x6



M5x40mm


25

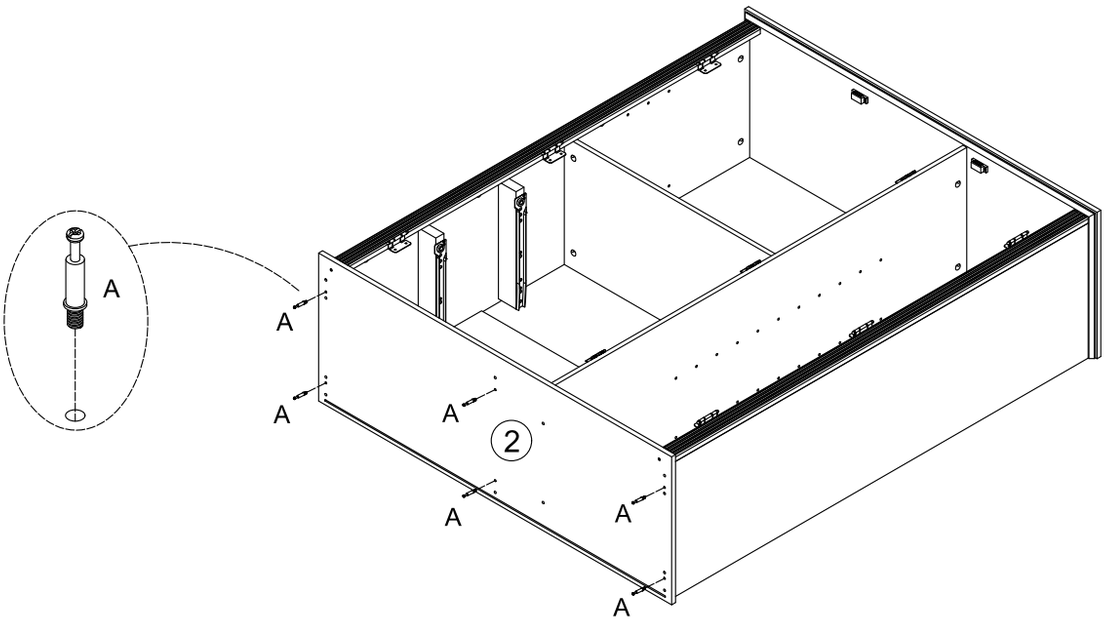

A x6



26

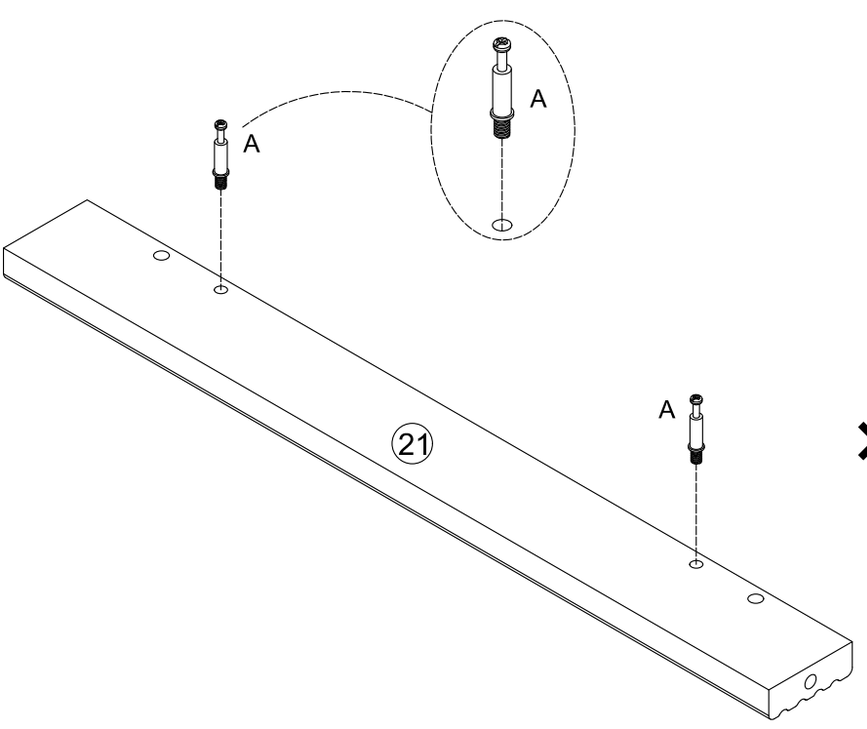



×2

A x4




27

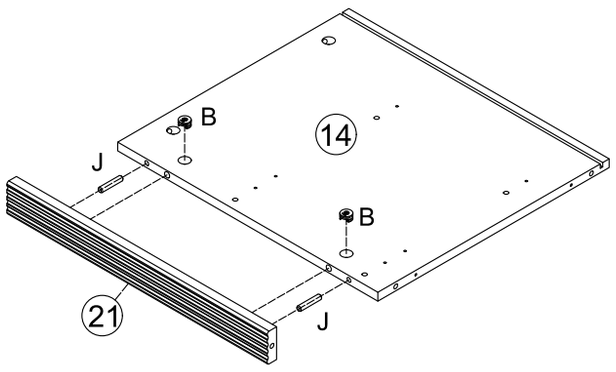


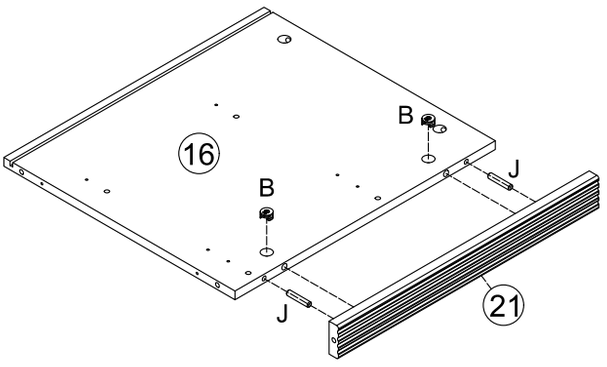


B x4




J x4





M6x30mm

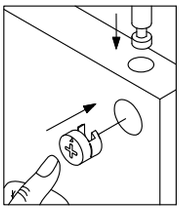

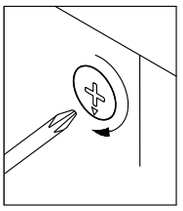

28

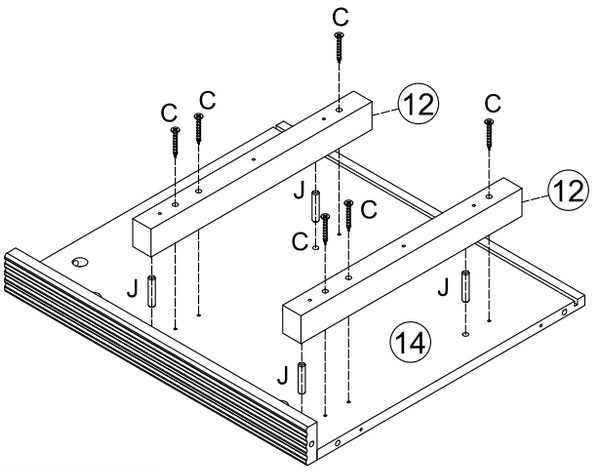

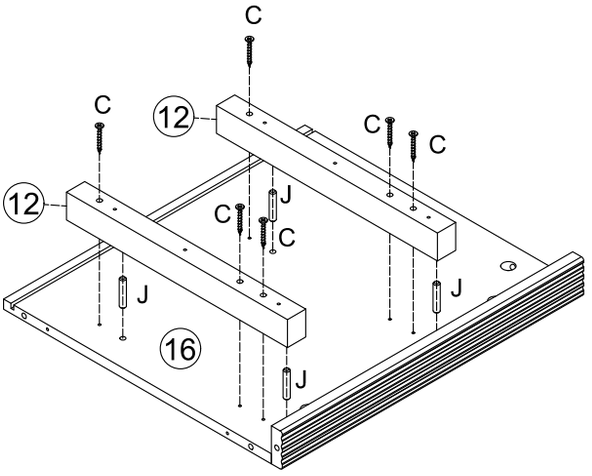

C x12




M4x30mm

J x8



M6x30mm

29

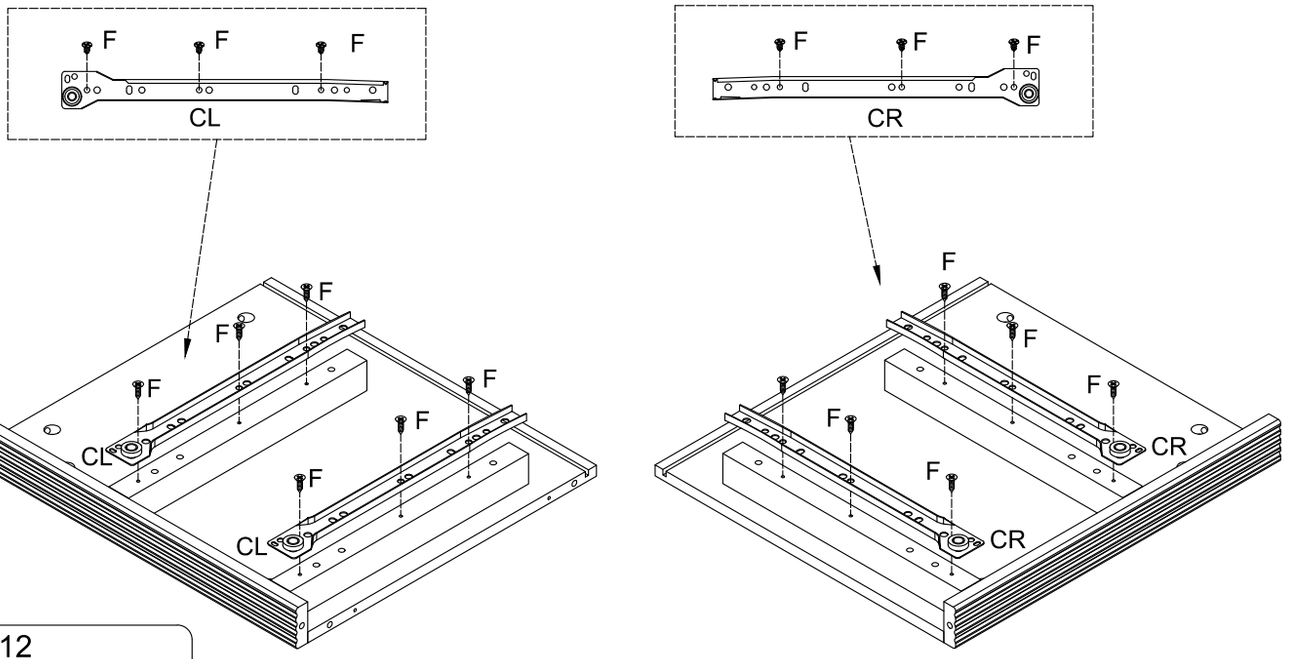

F x12



M3x12mm


CL x2



CR x2



30

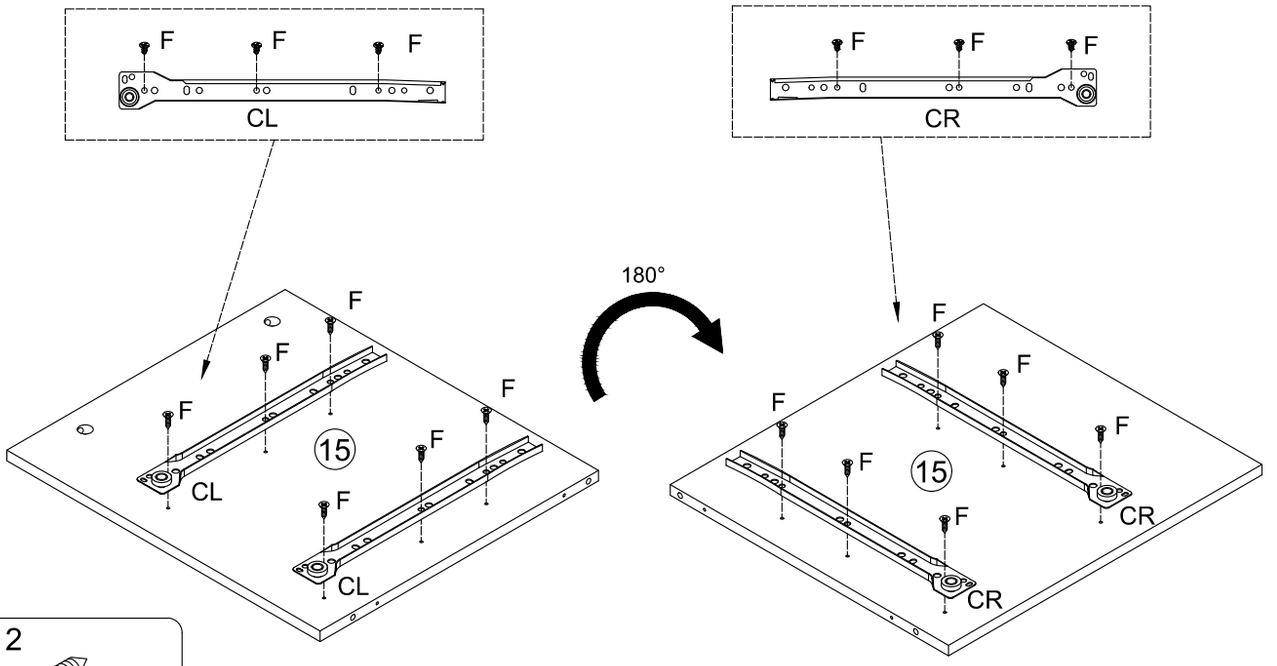

F x12



M3x12mm


CL x2



CR x2



31

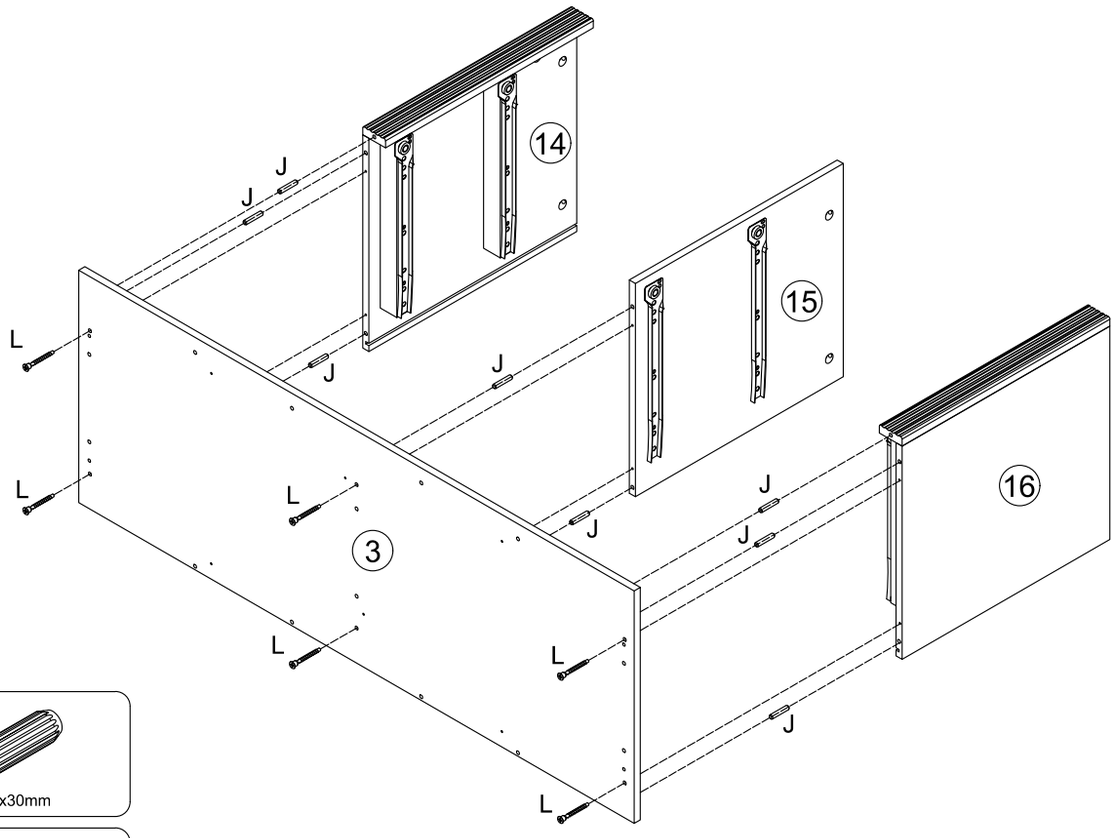

J x8


M6x30mm

L x6



M5x40mm


32

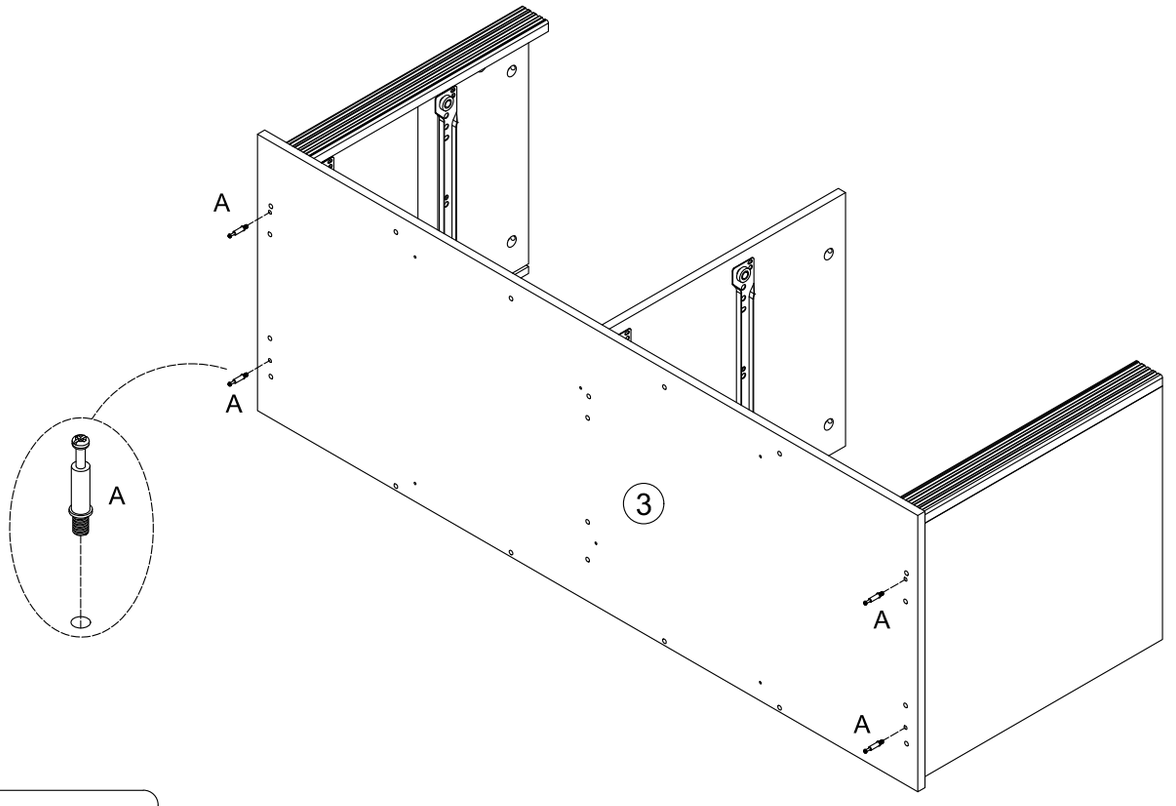

A x4




33

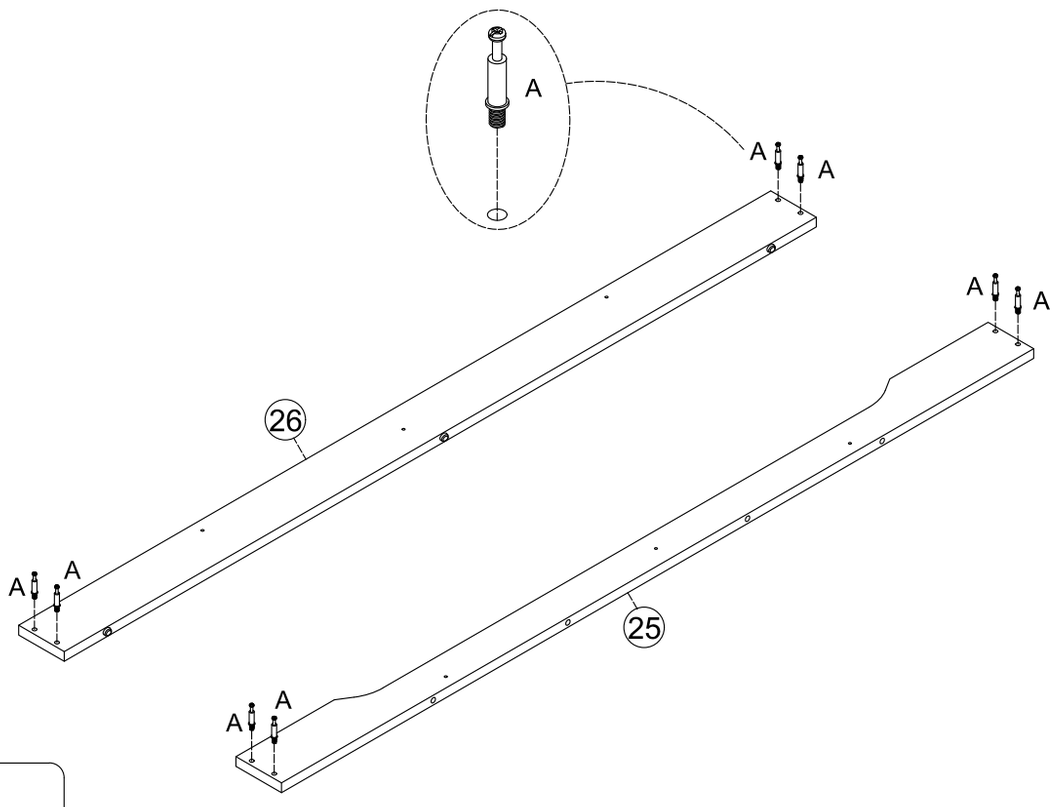

A x8





34

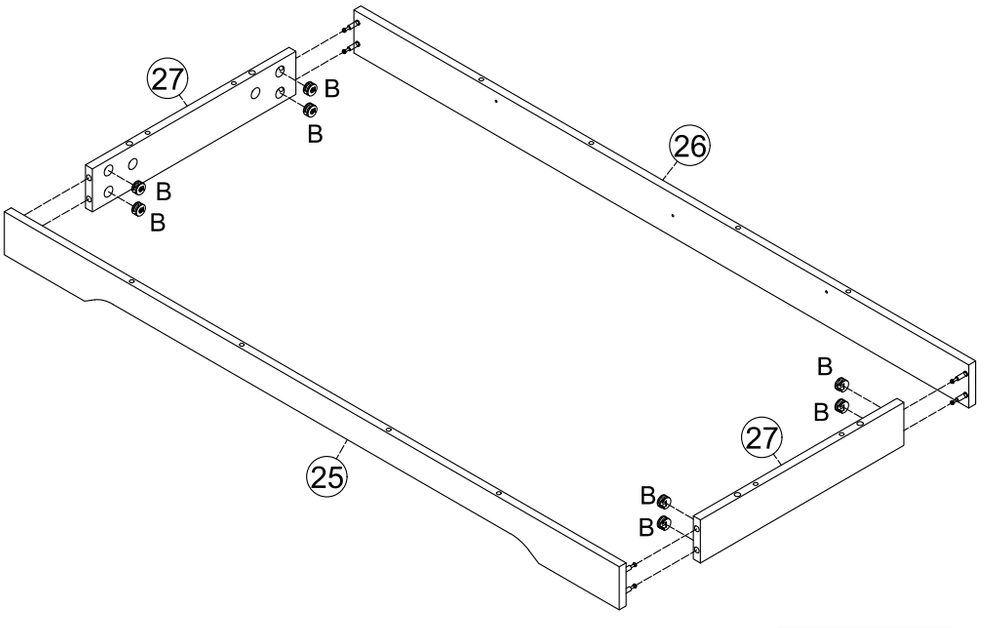


B x8



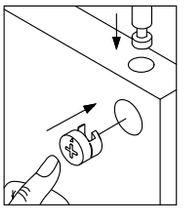


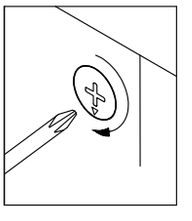

35

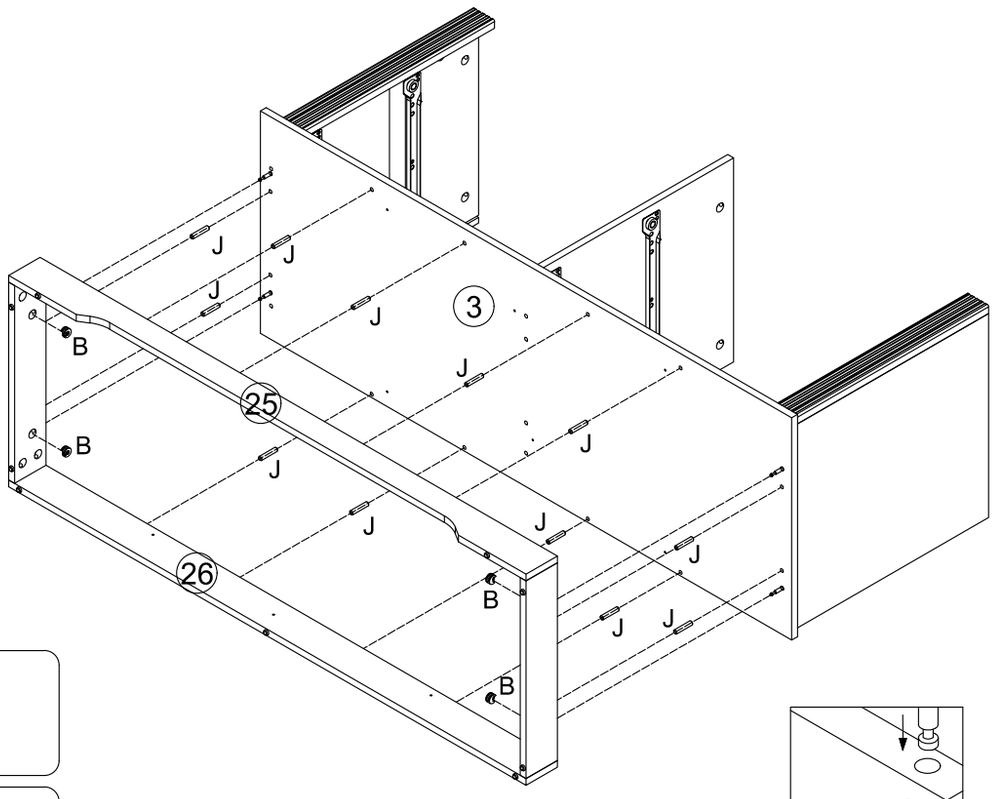


B x4




J x12




M6x30mm

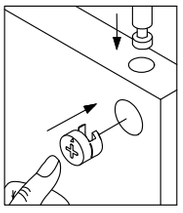

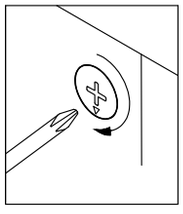

36

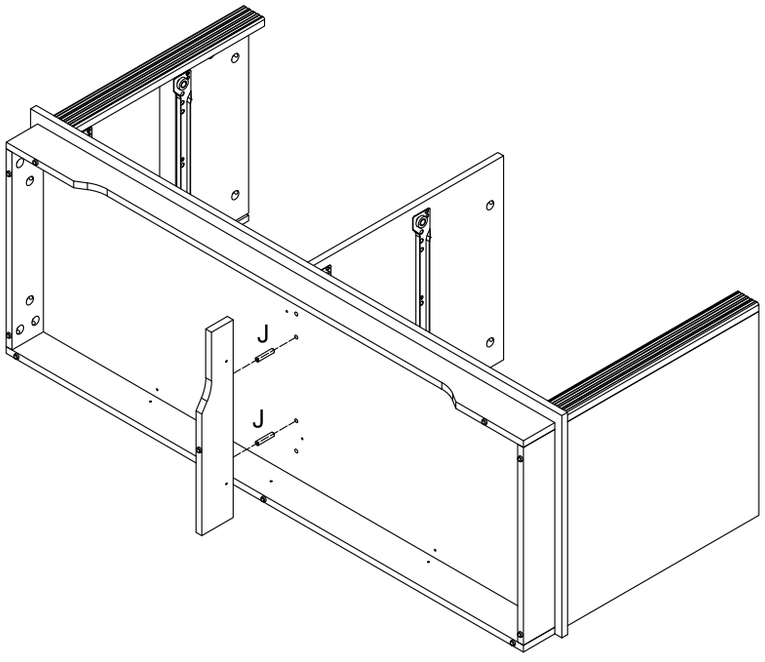


J x2



M6x30mm

37

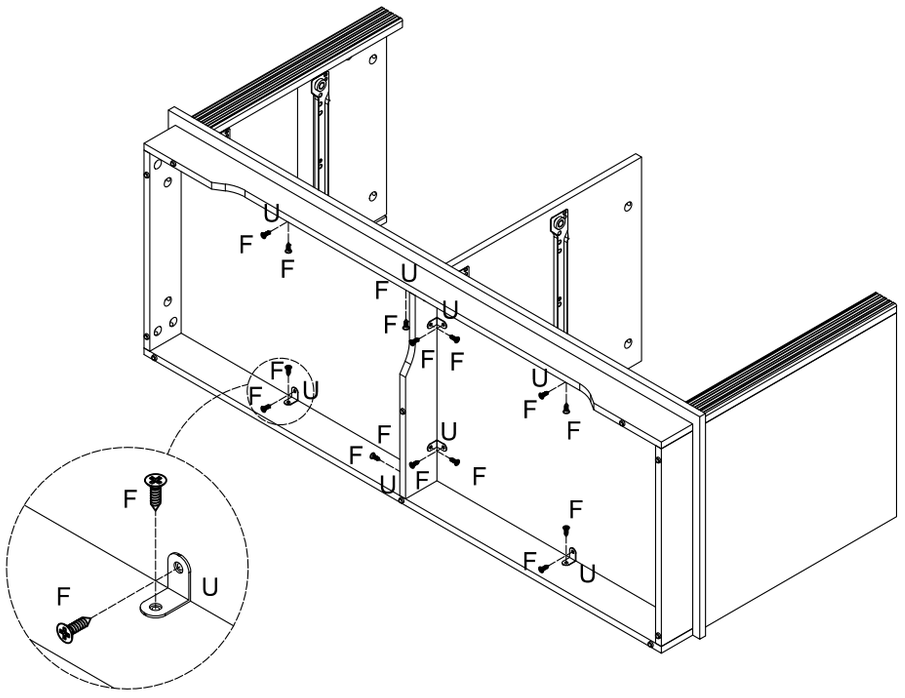

F x16





M3x12mm

U x8




38

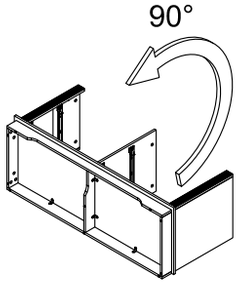


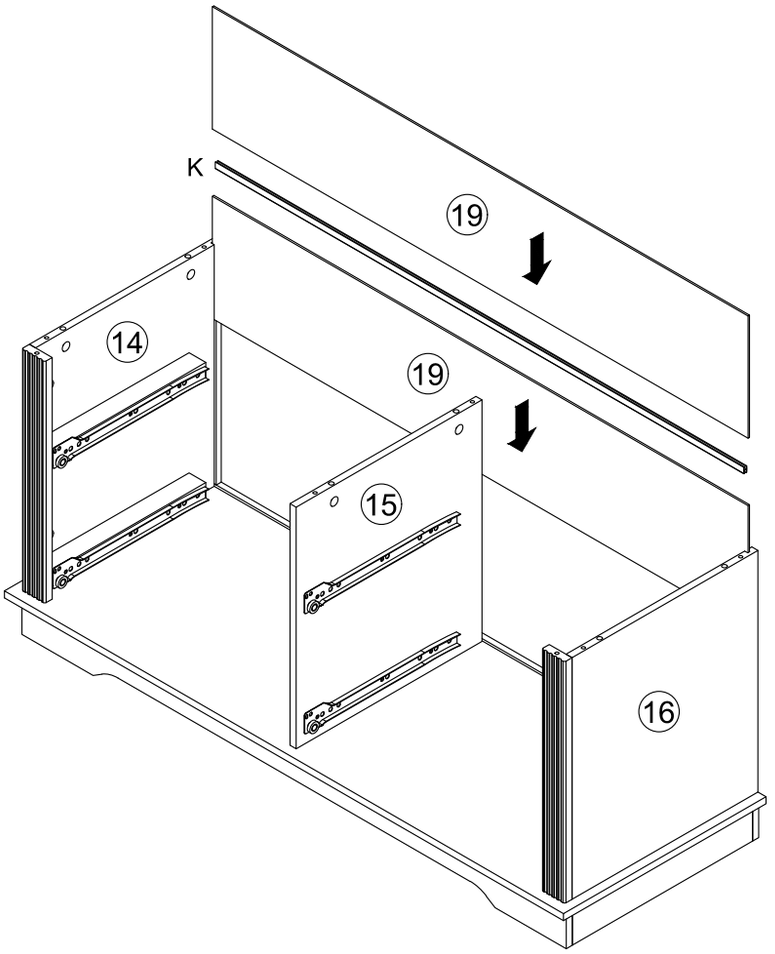

K x1

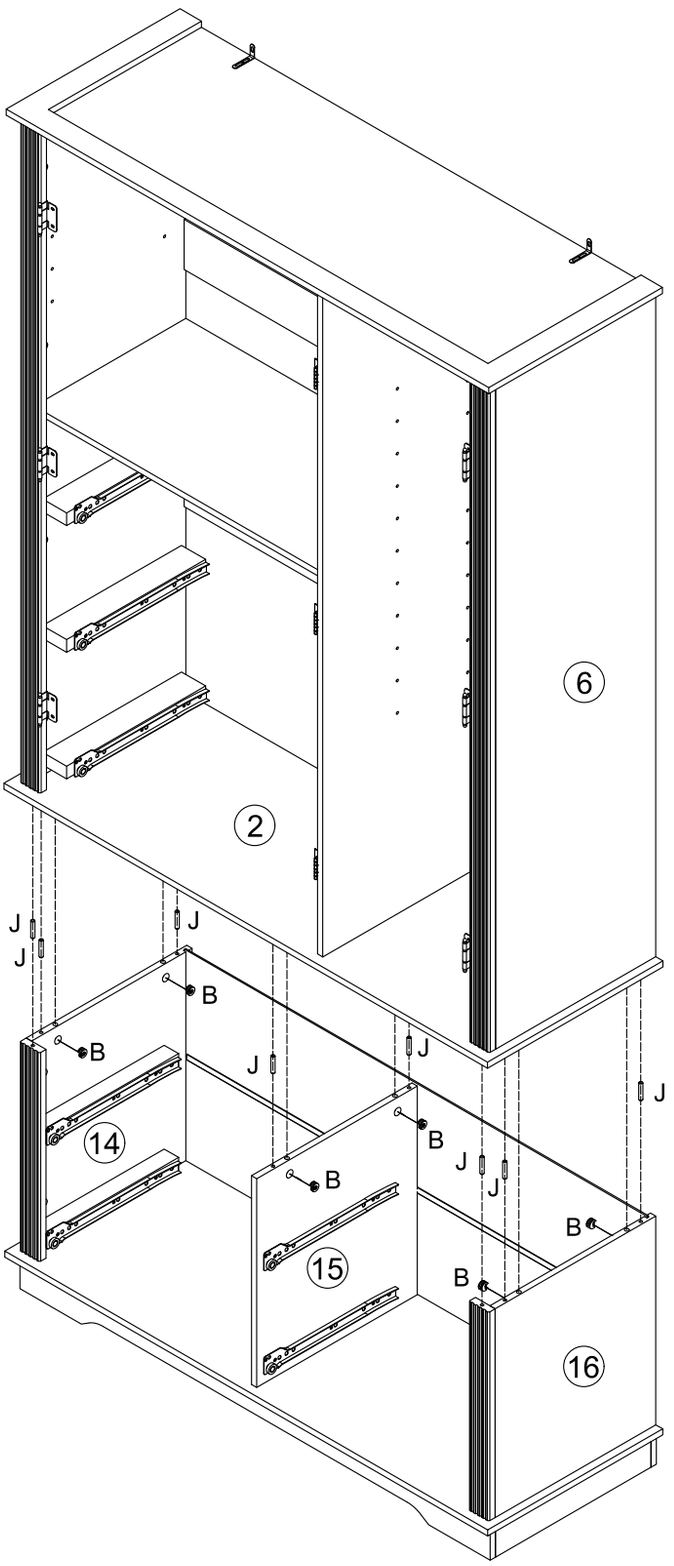


B x6




J x8




M6x30mm

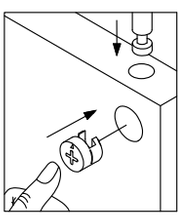

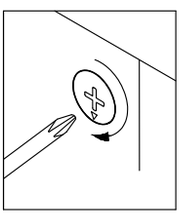

40

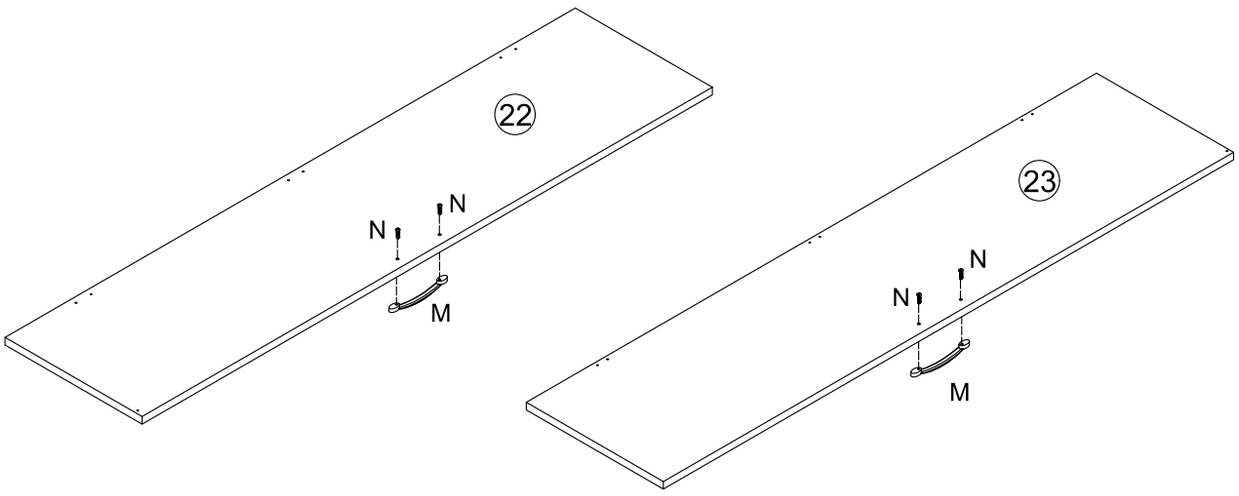

M x2




N x4



M4x14mm

41

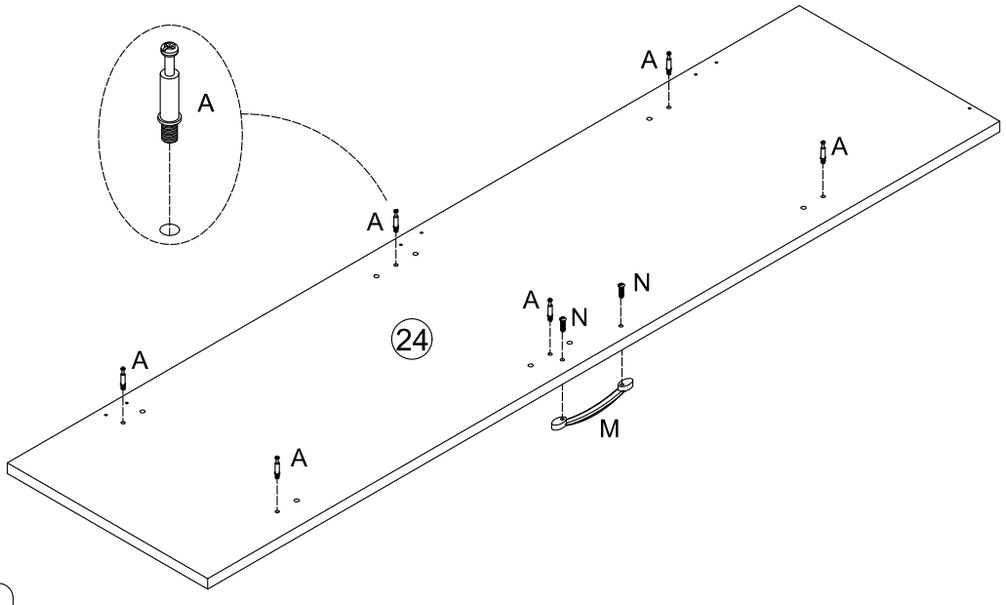

A x6



M x1




N x2



M4x14mm


42

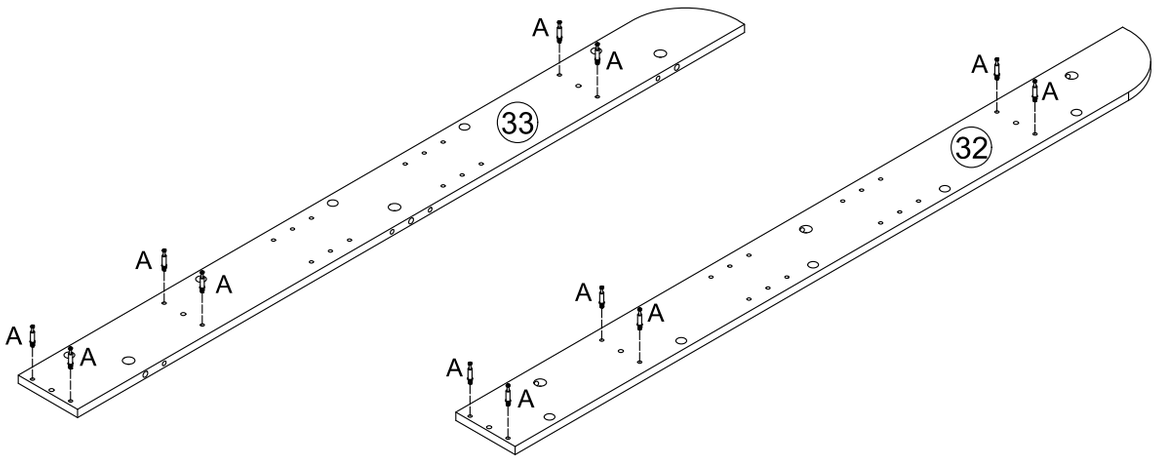

A x12




43

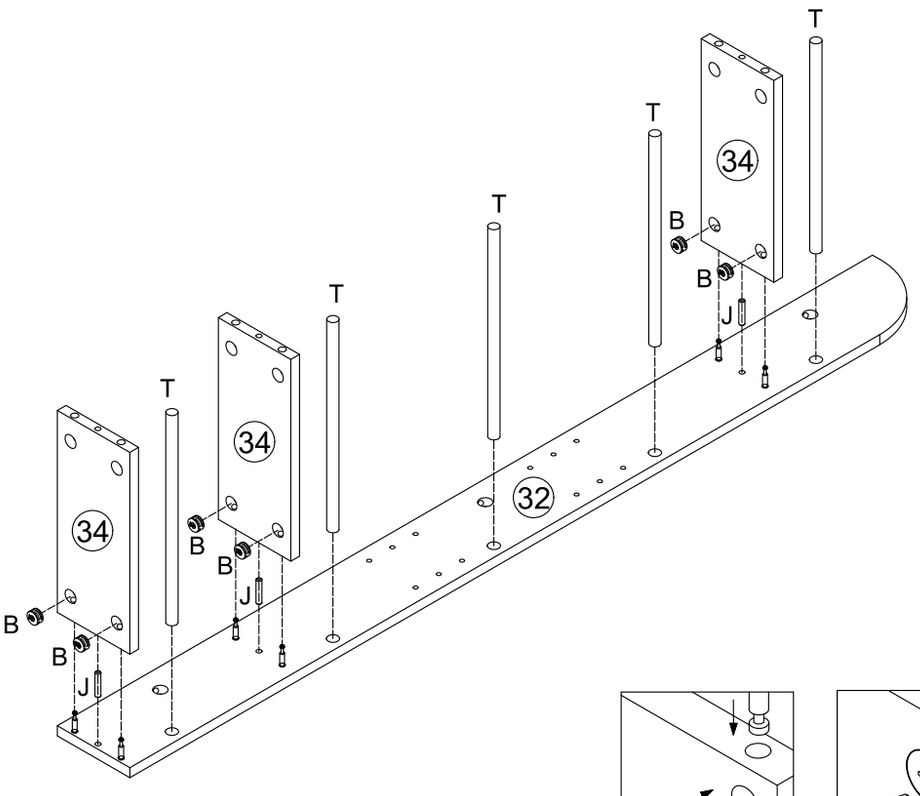

B x6





J x3




M6x30mm

T x5

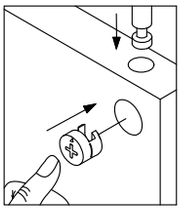


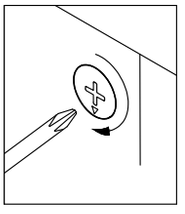


44

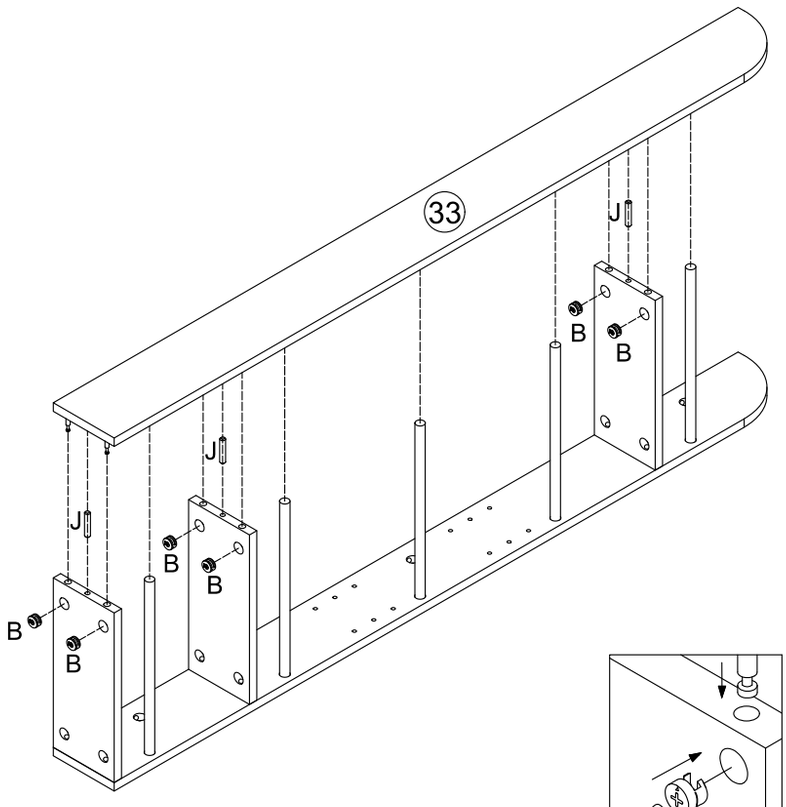


B x6




J x3



M6x30mm

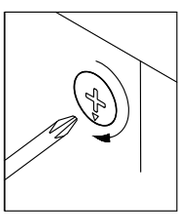


45

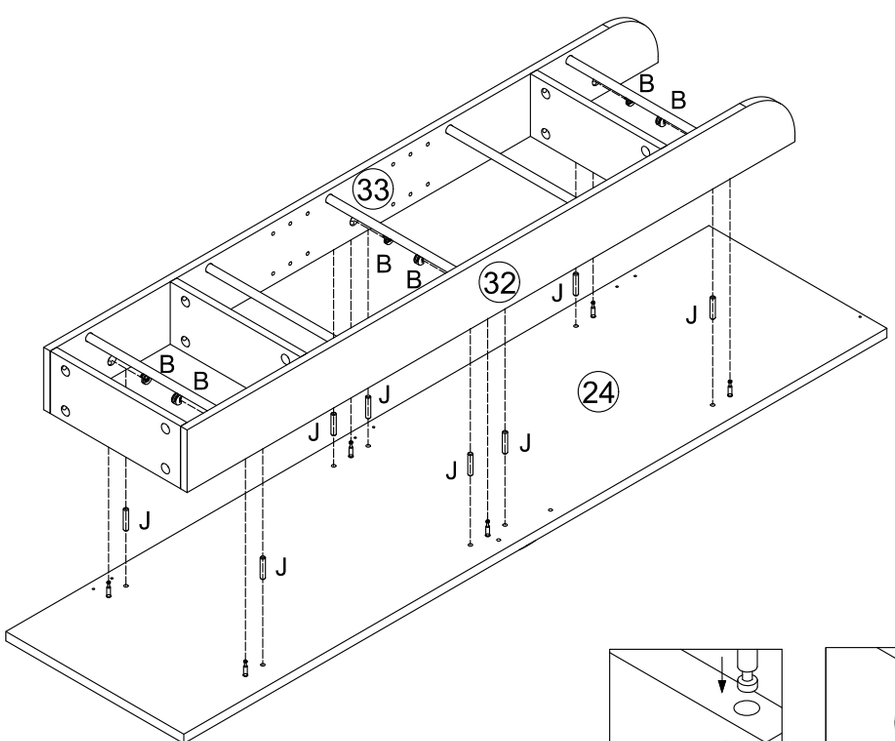


B x6




J x8



M6x30mm

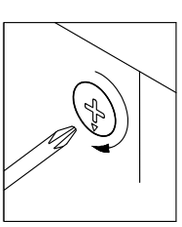

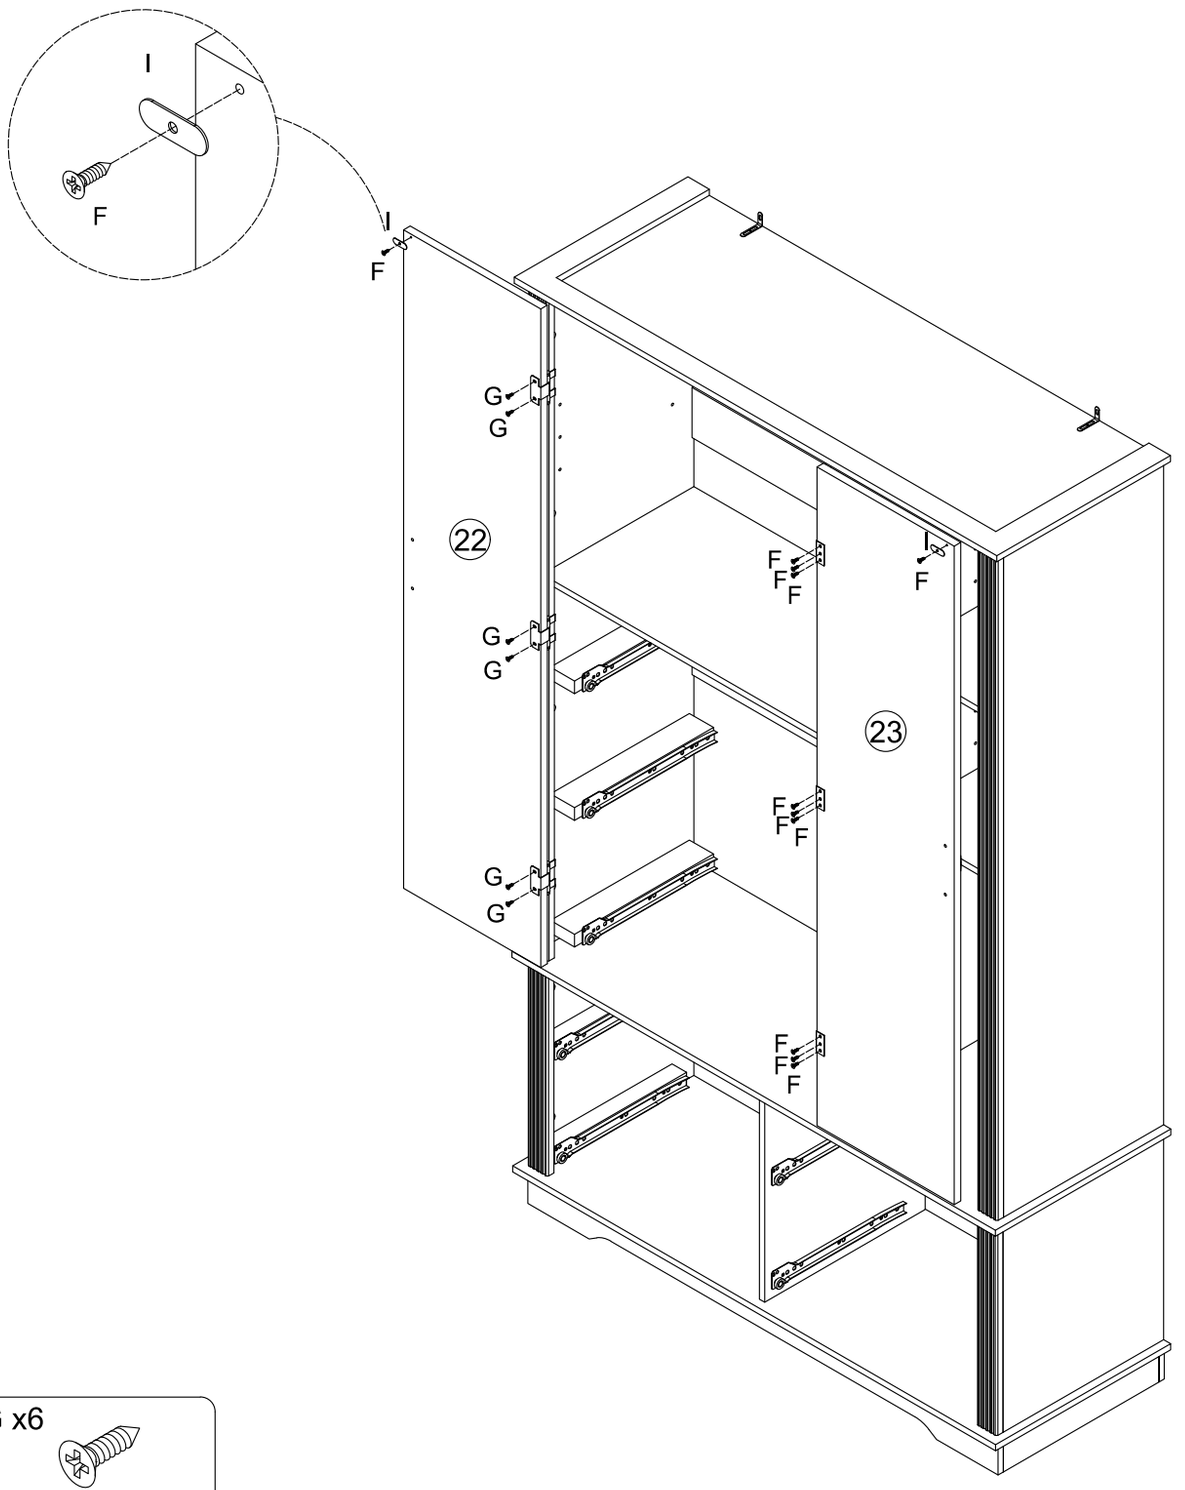

G x6

M3.5x16mm


F x11



M3x12mm

I x2



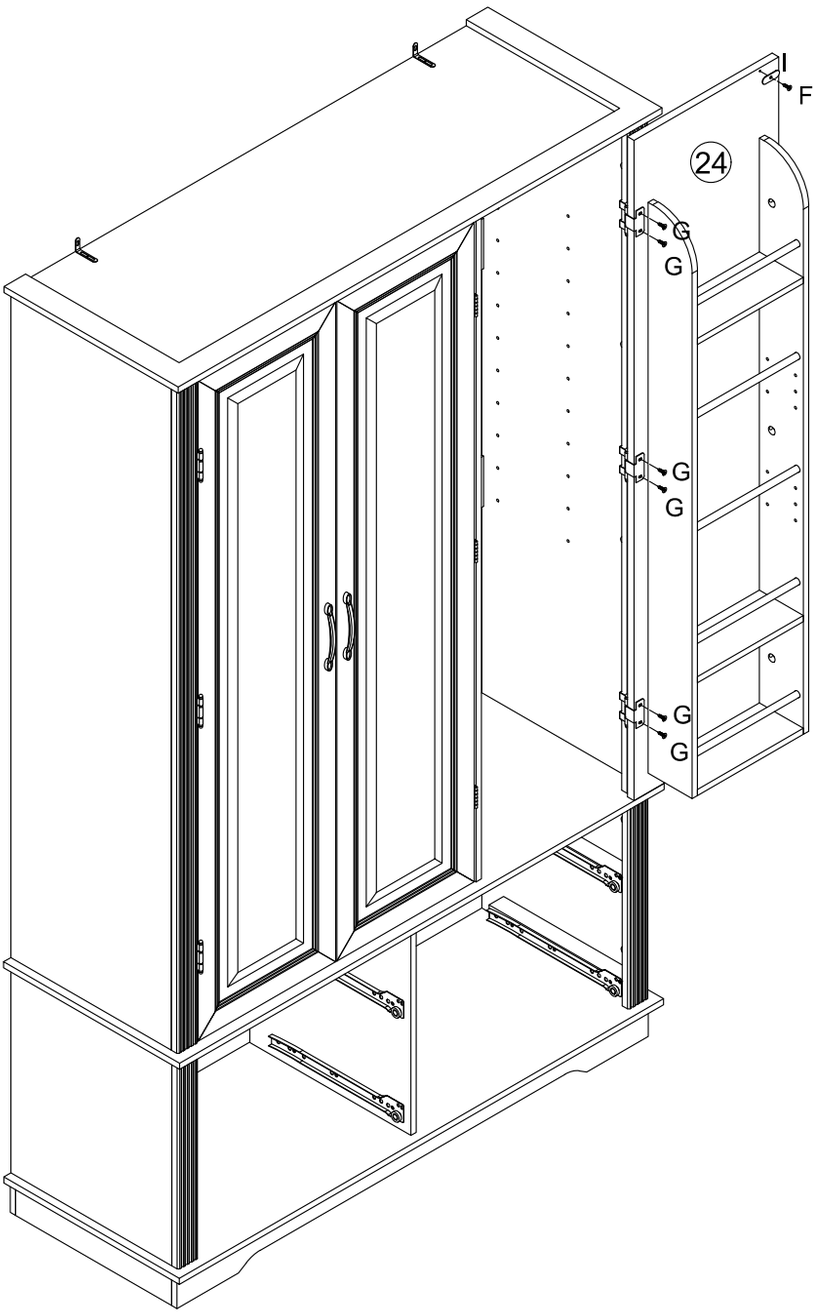

F x1




M3x12mm


G x6




M3.5x16mm


I x1



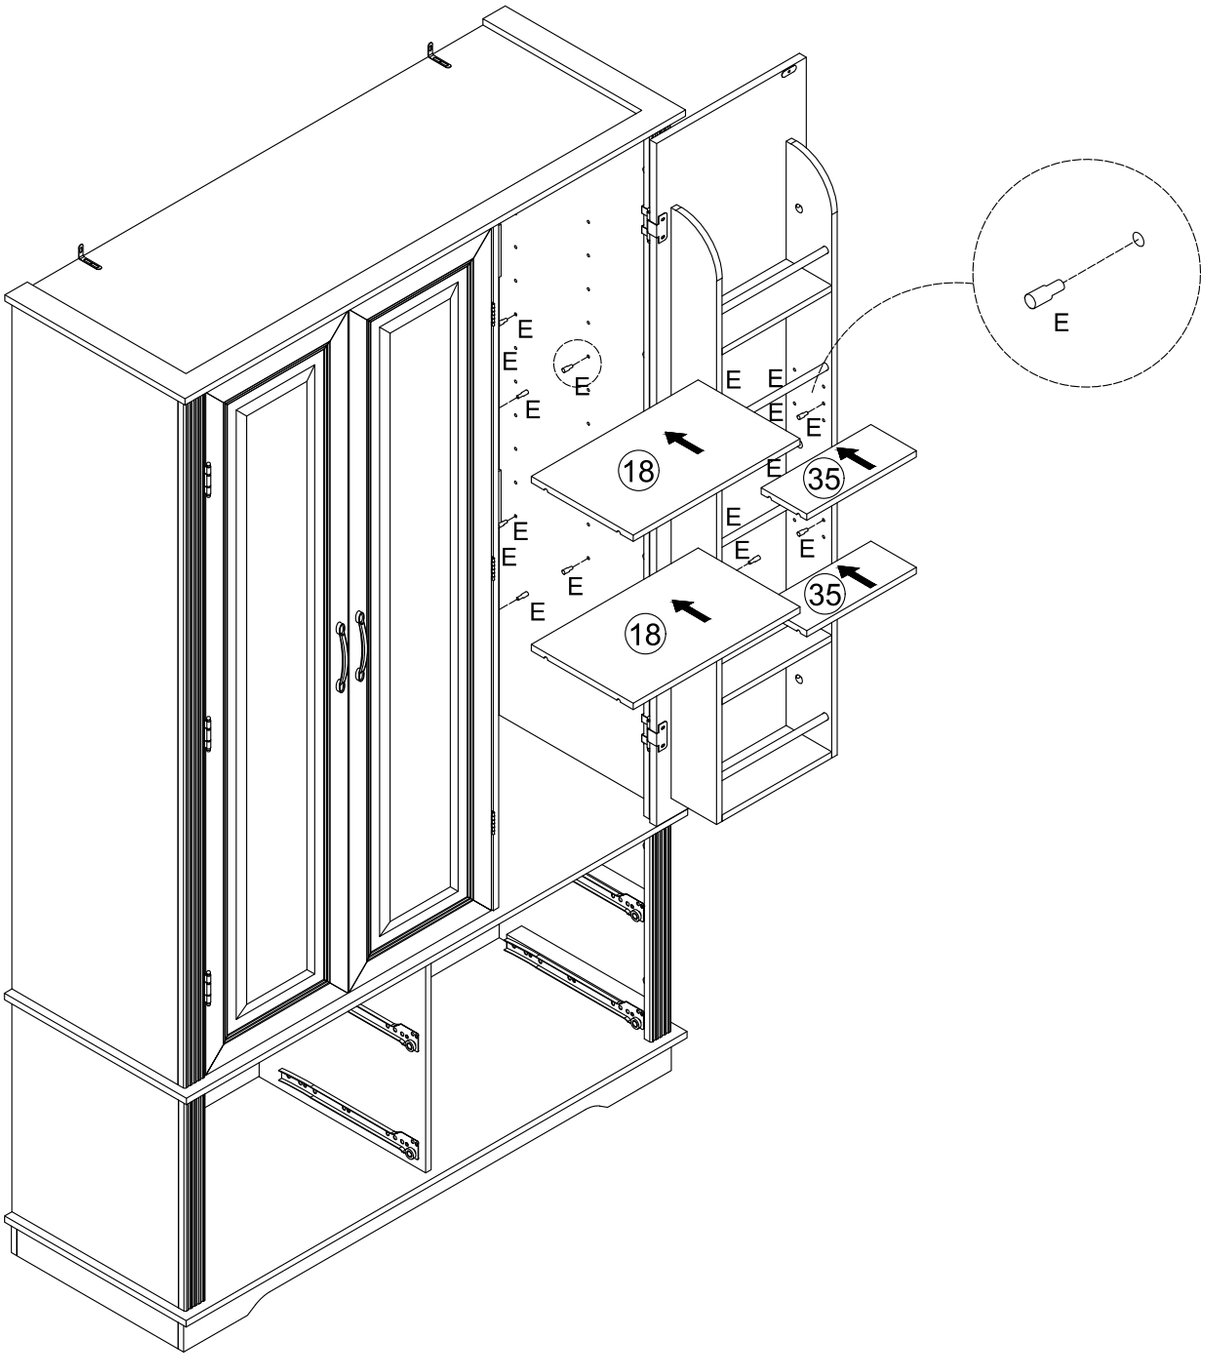


E x16



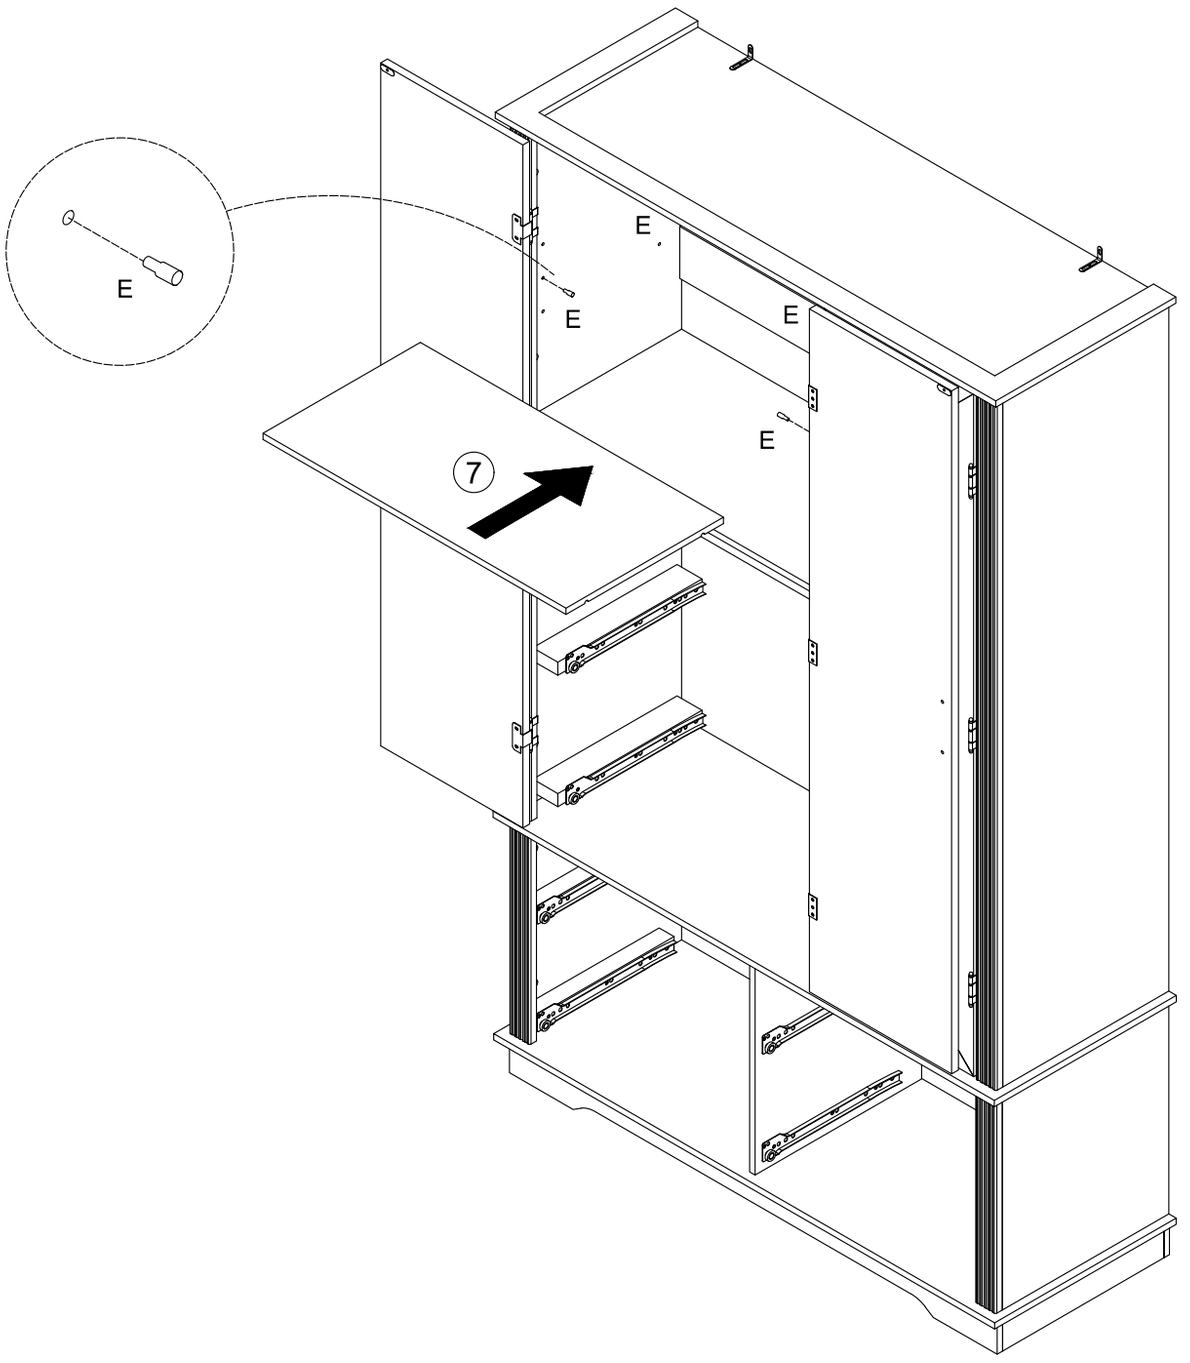



E x4



Tip: Hinges can be adjusted as needed, which can be adjusted as needed to ensure even clearance and smooth switching


1.Adjust up and down

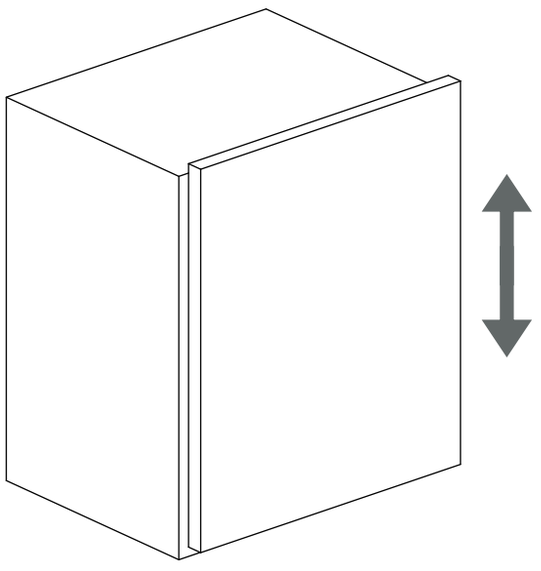


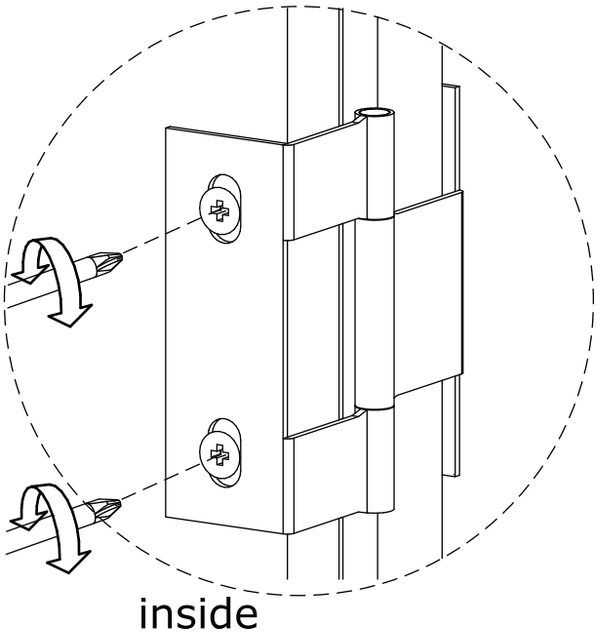


Loosen the nut, adjust the hinge to the appropriate height, and tighten the lock nut

2.Left and right adjustment

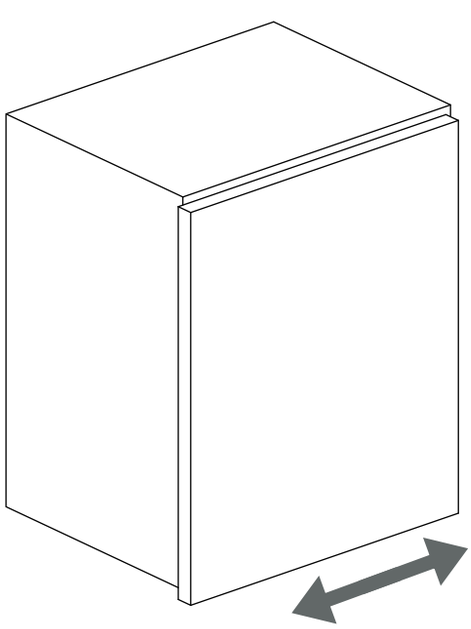

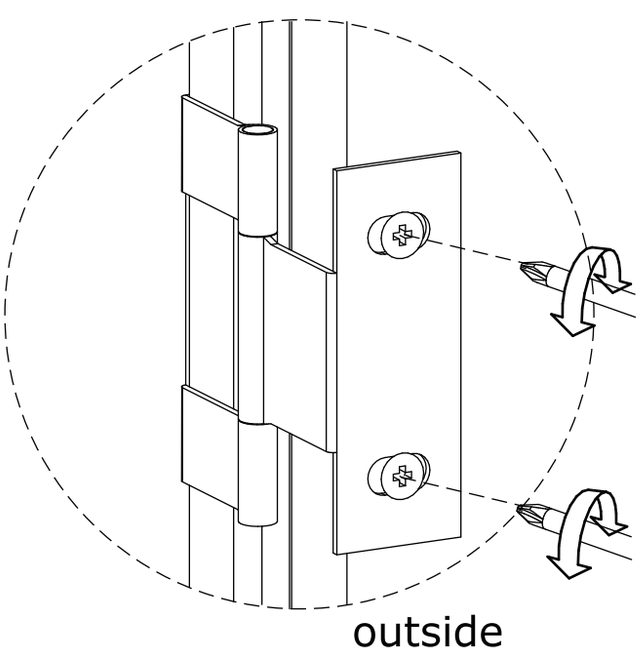

50

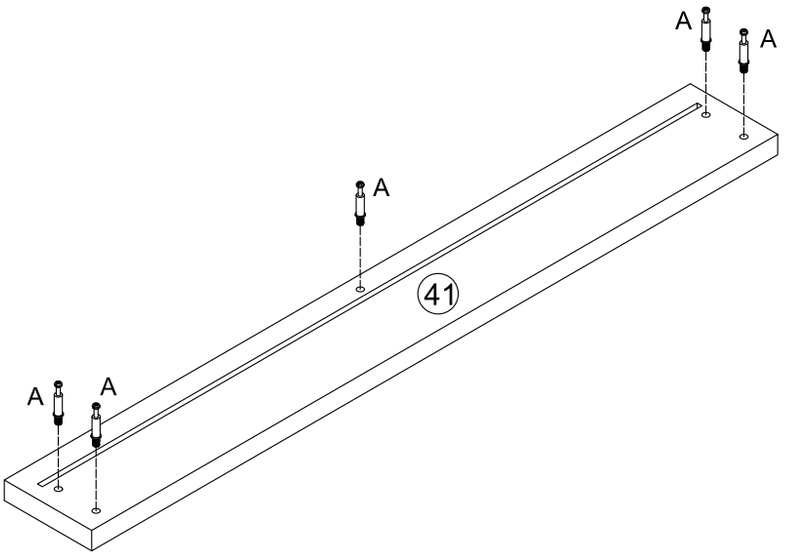



×3

A x15



51

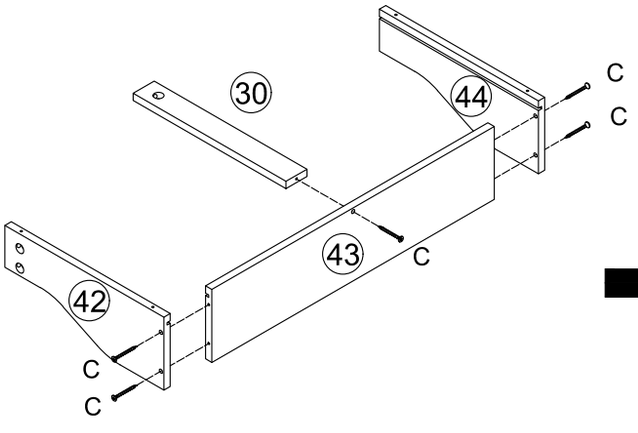

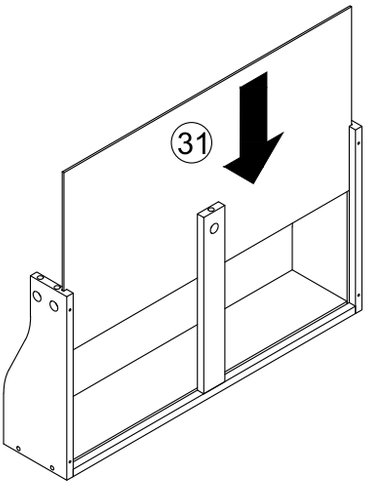


×3

C x15




M4x30mm

52

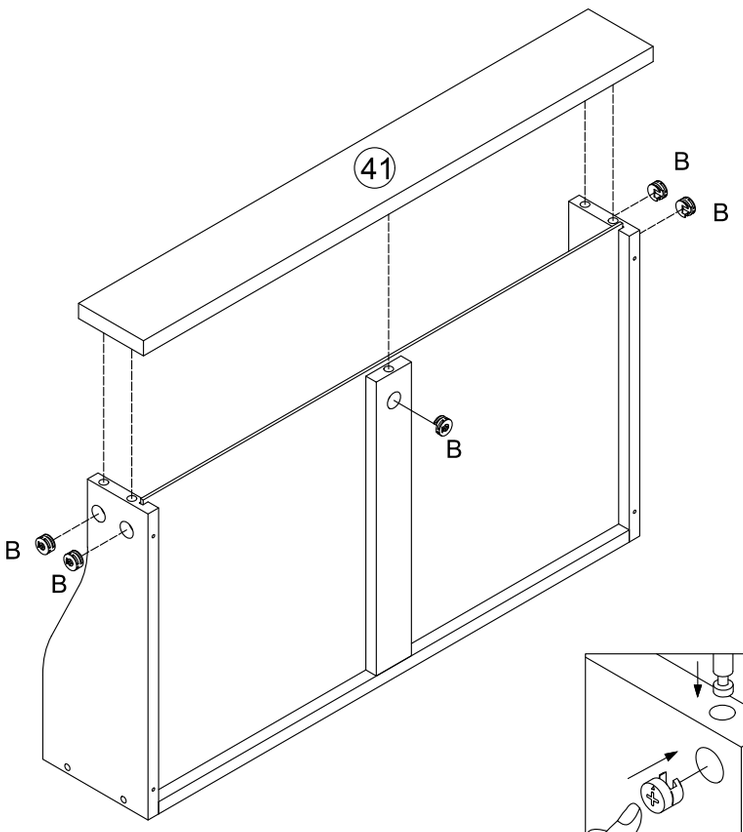


×3

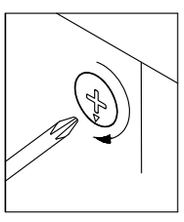

B x15



53

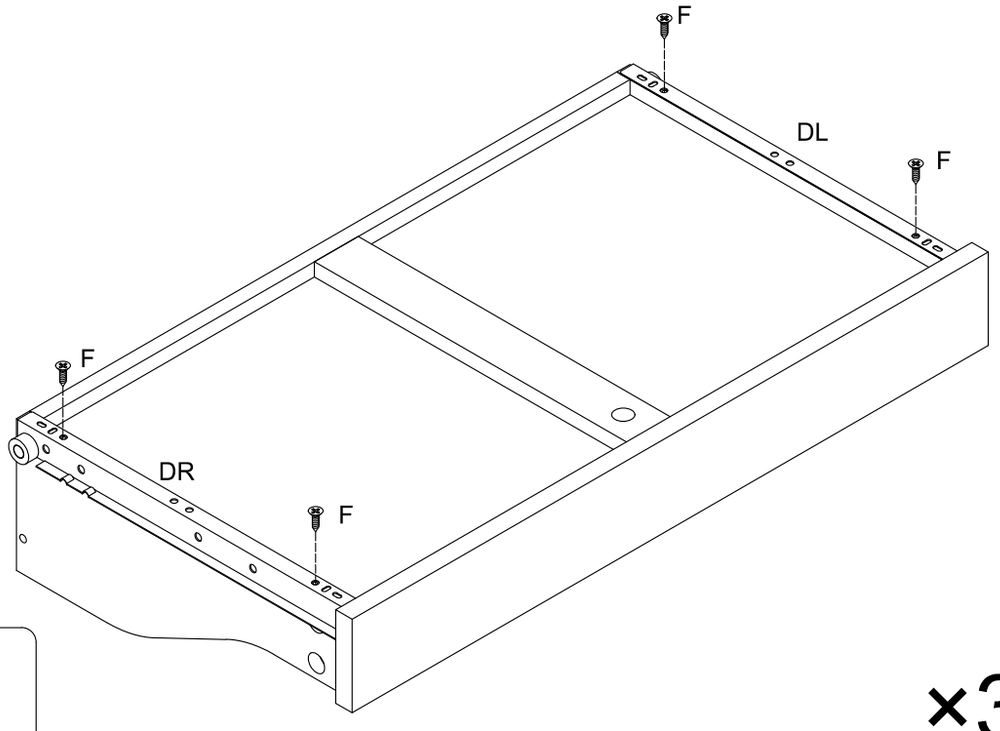

×3

F x12



M3x12mm


DL x3



DR x3



54

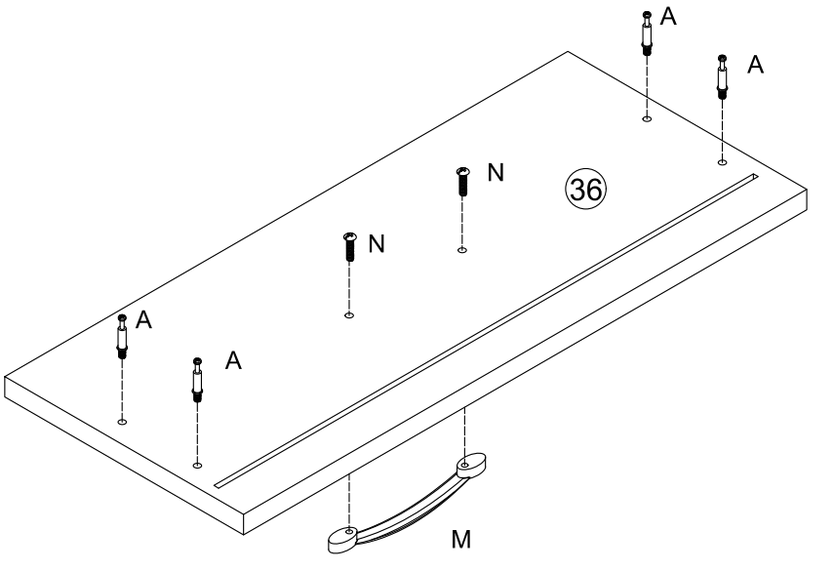

×4

A x16



M x4





N x8



M4x14mm

55

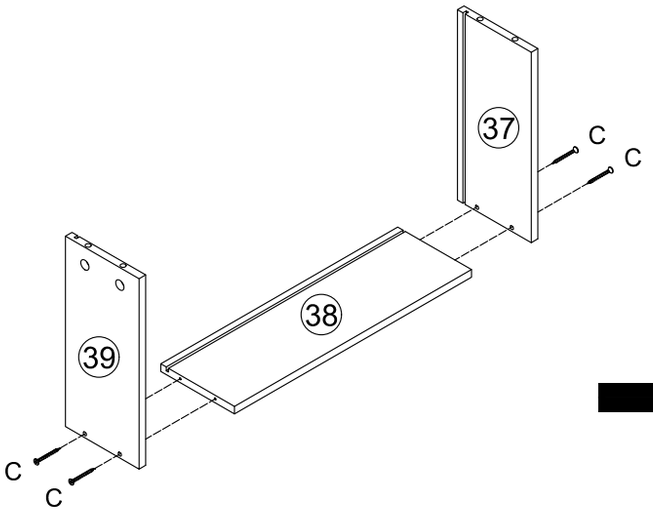

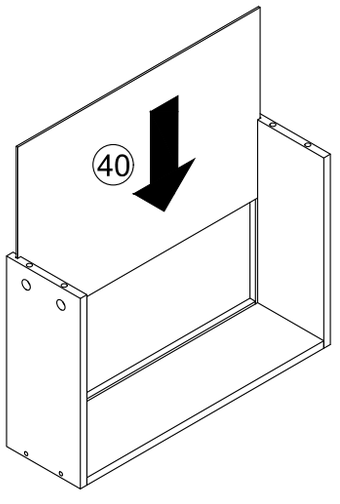


×4

C x16





M4x30mm

56

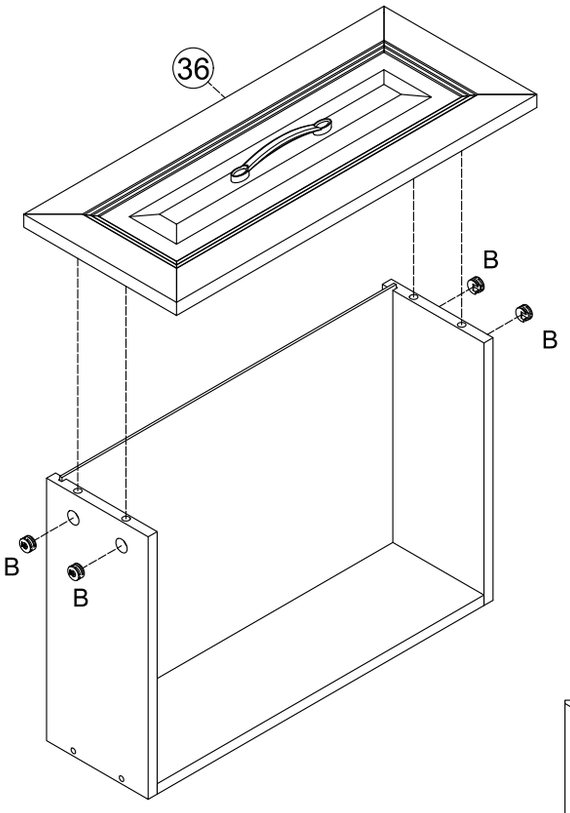

×4

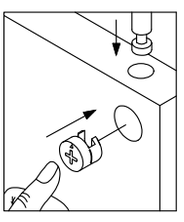


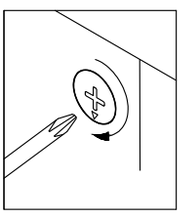

B x16



57

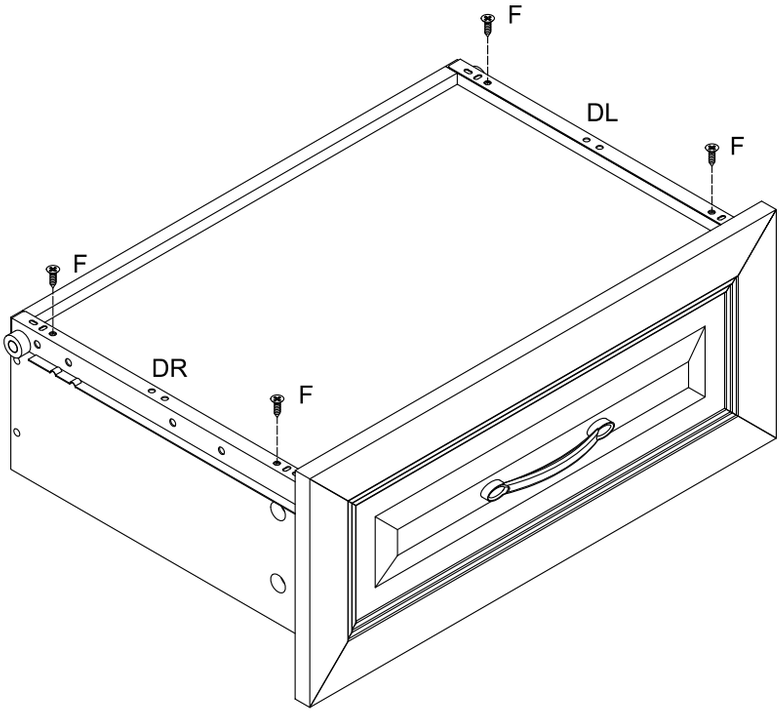

×4

F x16




M3x12mm


DL x4





DR x4

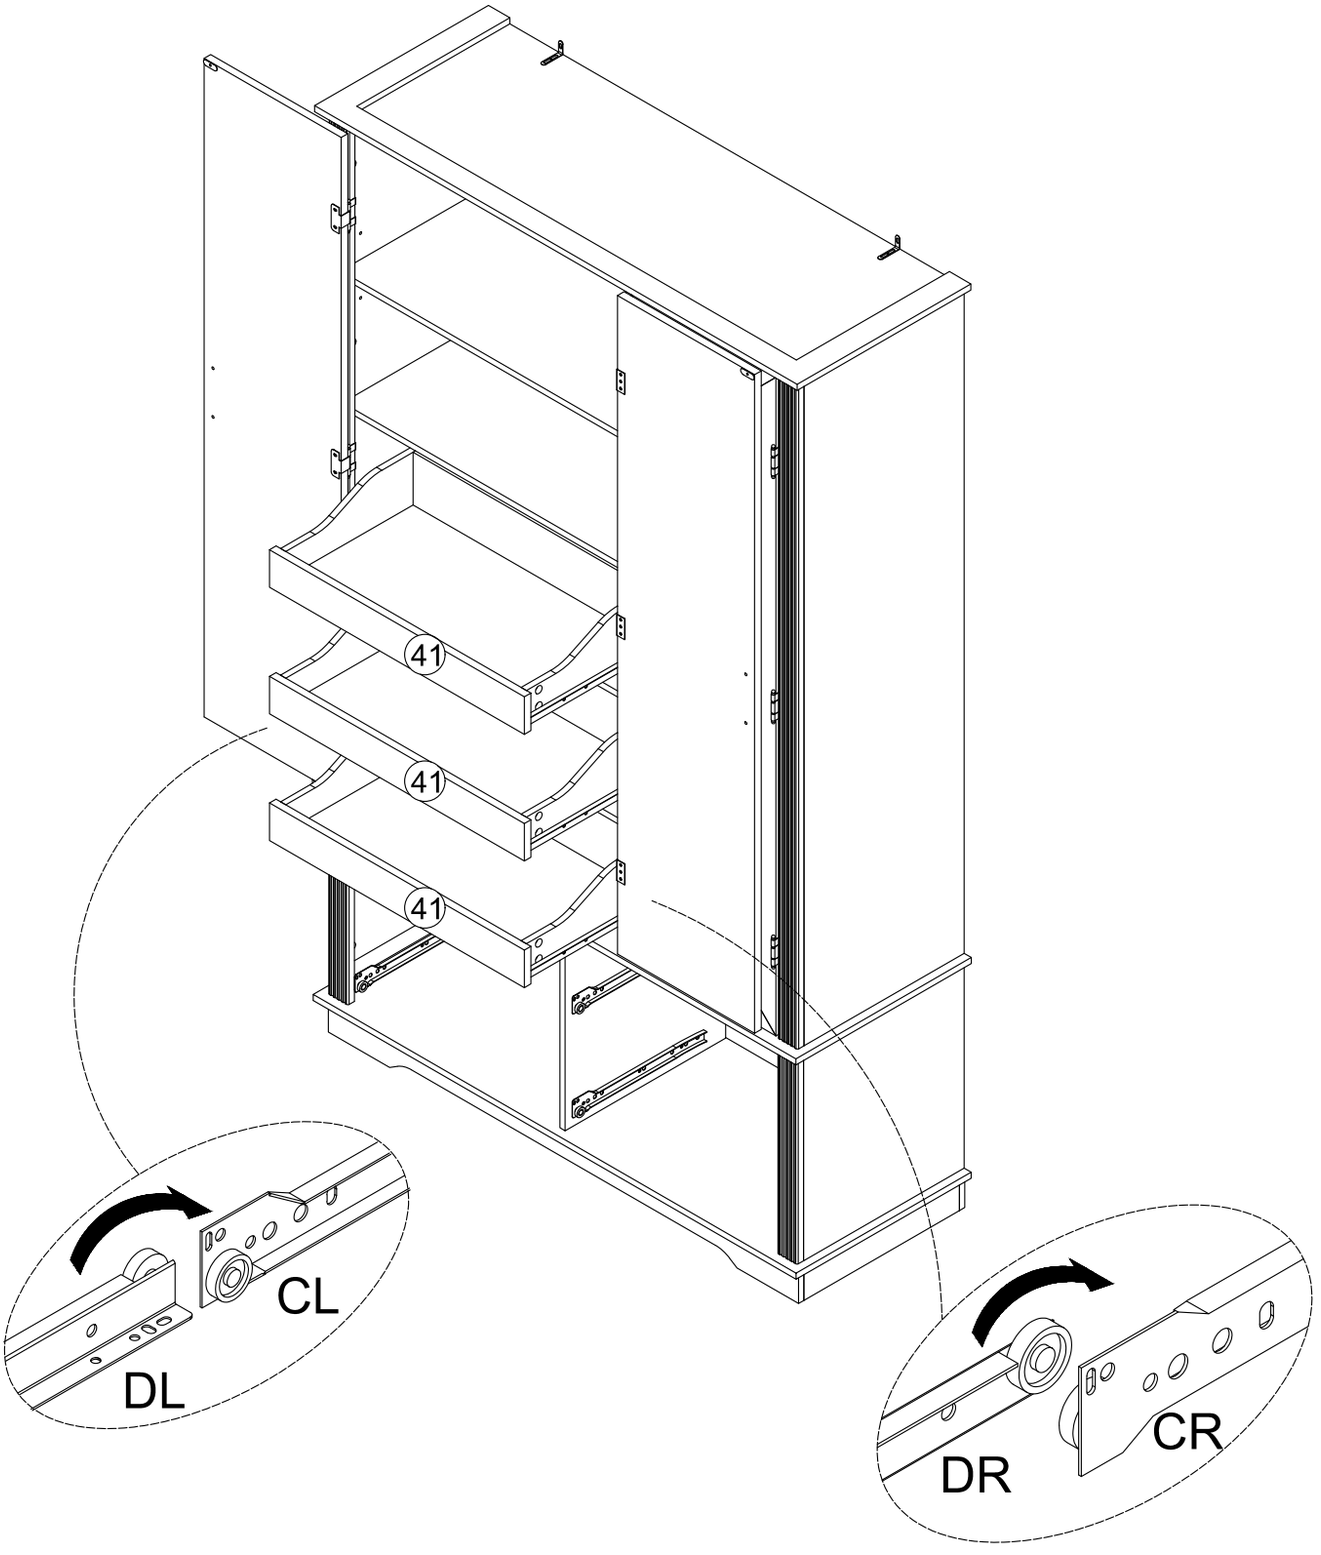



41
41
41
CL
DL
DR
CR

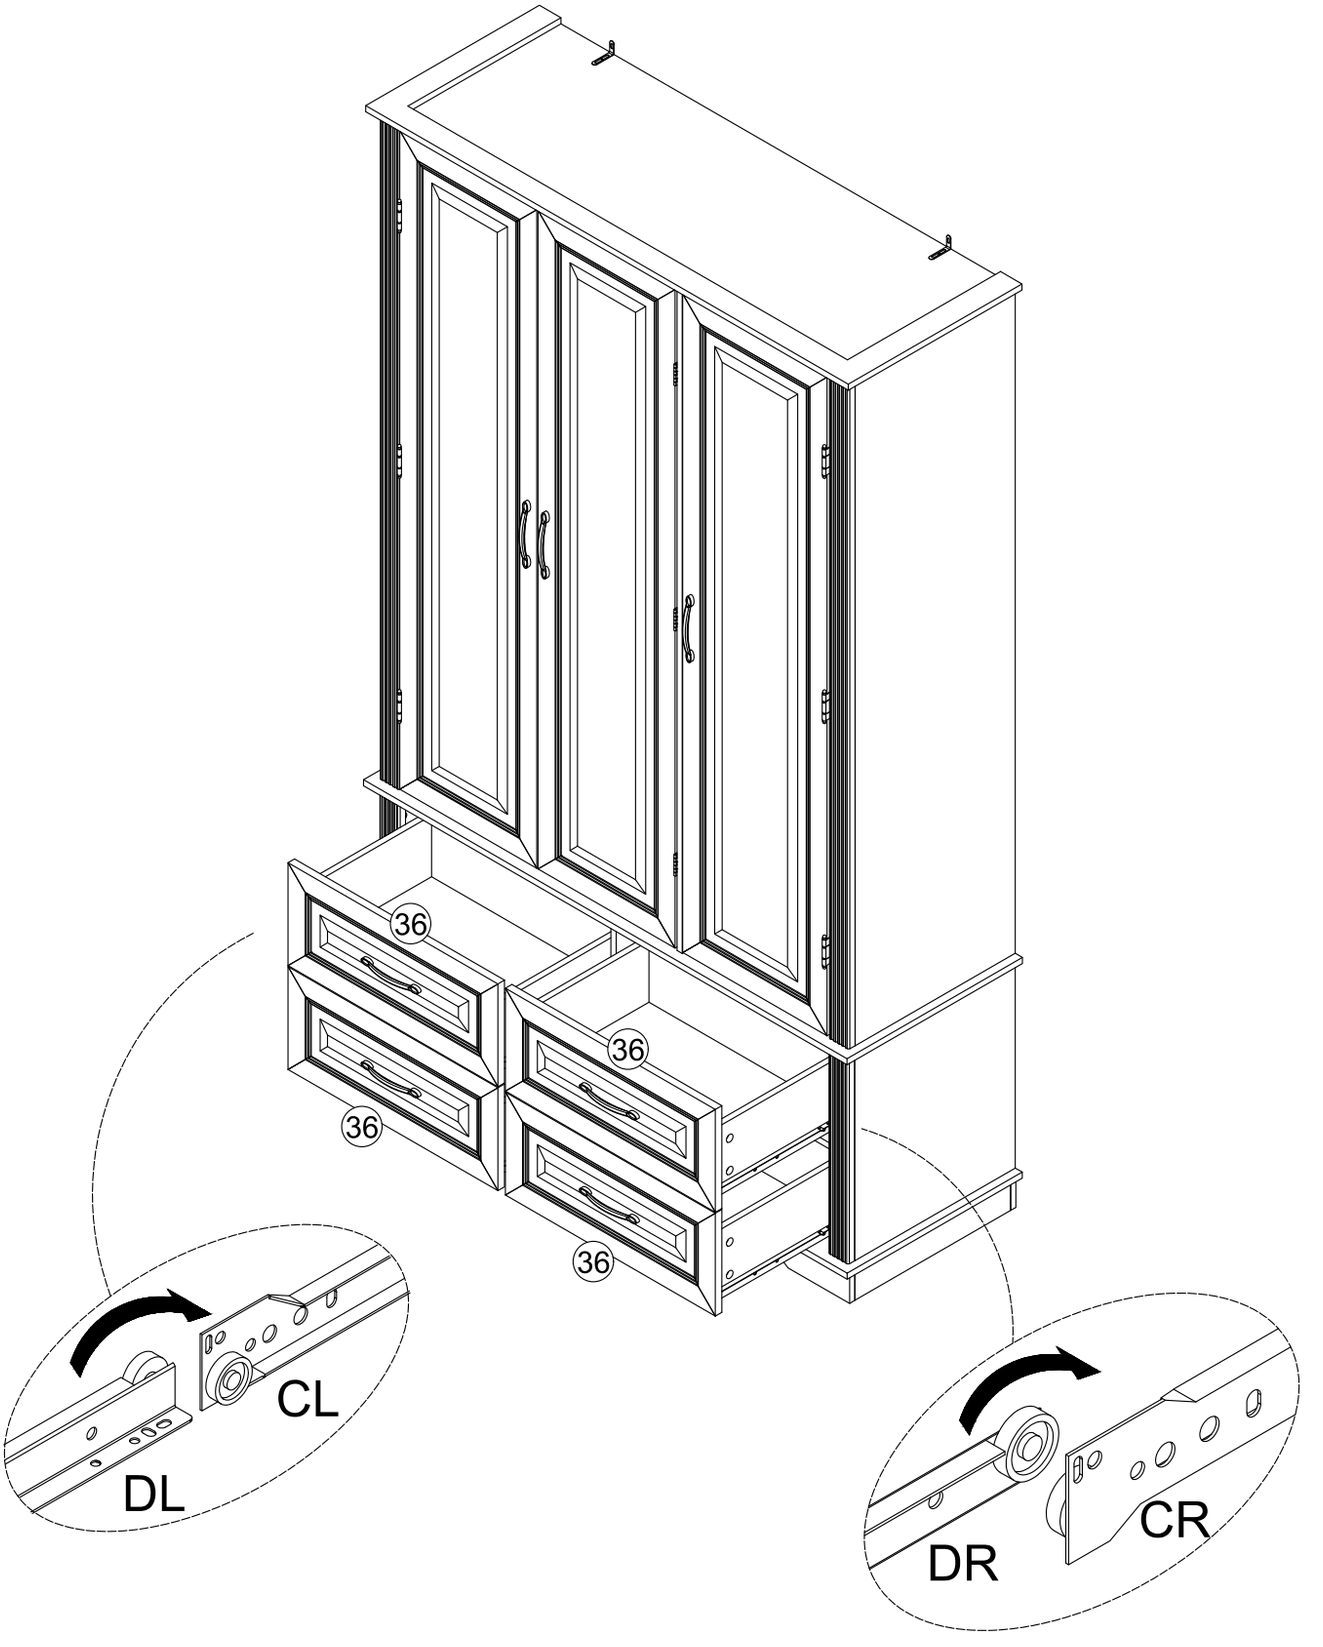
36
36
36
36
CL
DL
DR
CR

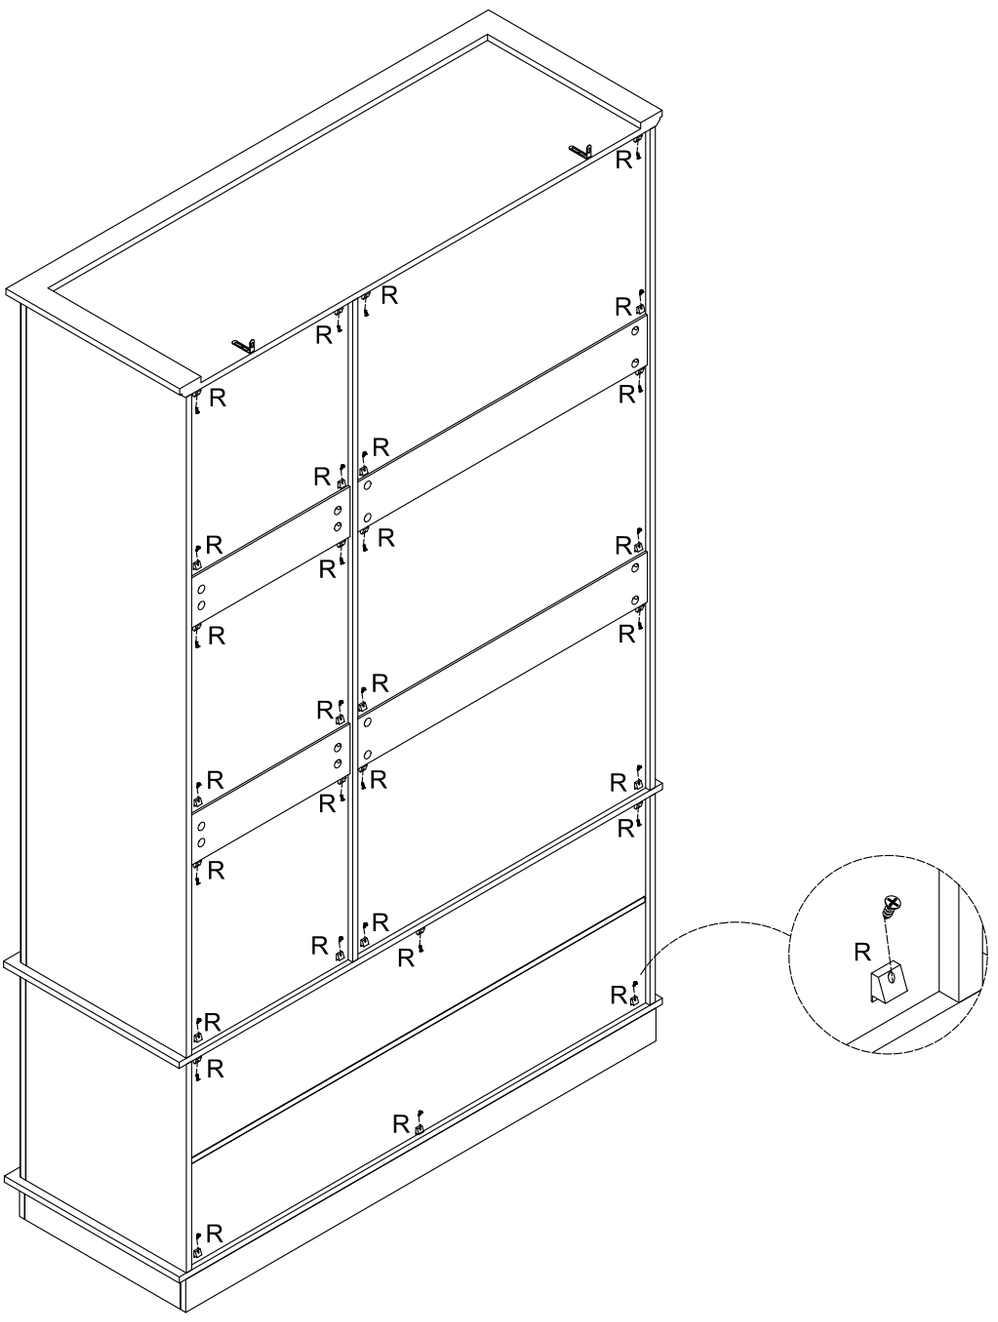

R
R
R

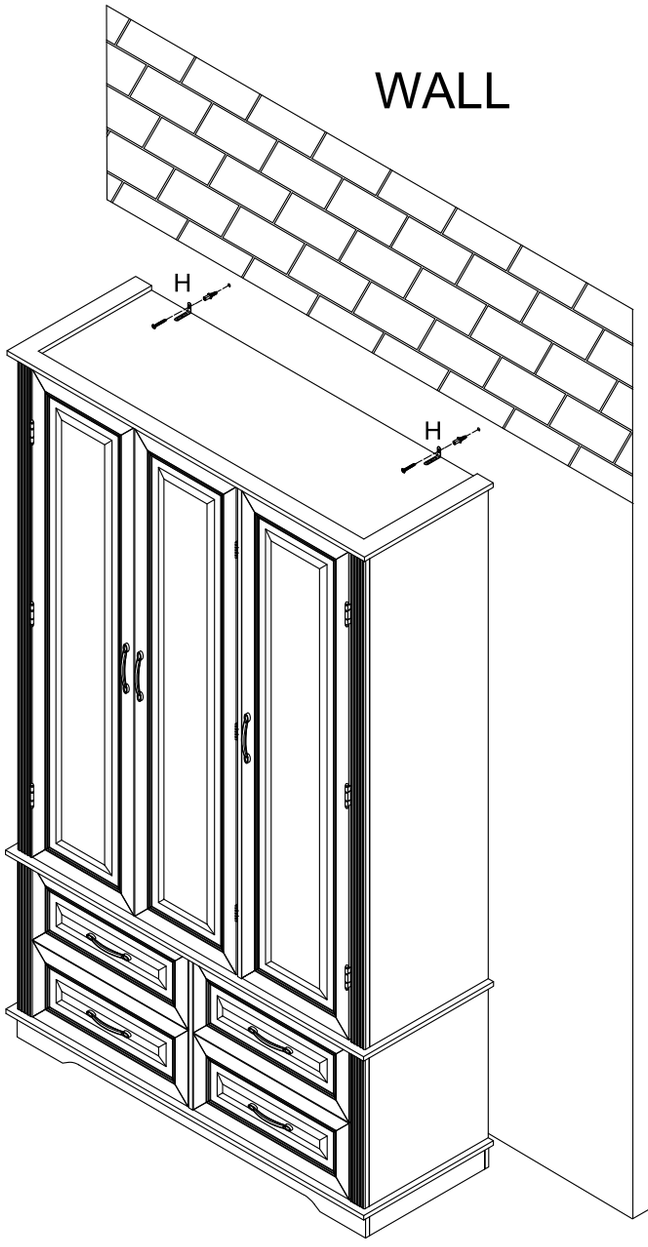


step 1

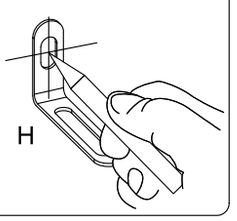


step 2

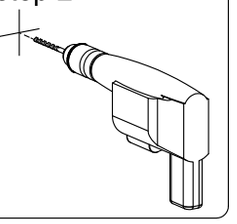



step 3




step 4

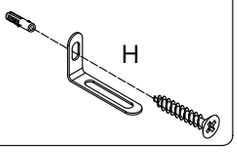

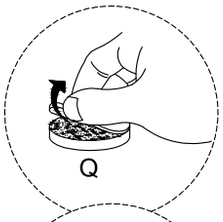

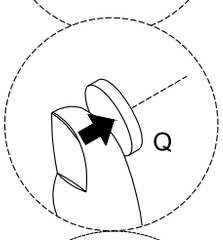

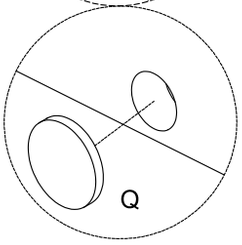

H x2



Q x30

